

Contents



Safety precautions	3	· Selecting solderless ring terminal	40
Preparations for Installation	6	· Connecting the power terminal	41
· Outdoor unit classification	6	· Fixing the power cable	42
· Accessories	6	· Installing grounding wire	43
· Optional accessories	7	Air tightness test and vacuum drying.....	45
Selecting installation location	7	· Air Tightness	45
· Space requirements	10	· Vacuum drying pipes and indoor units	46
· Moving the outdoor unit	14	Charging refrigerant	47
Basic construction and installation of the outdoor unit	15	· Important information regulation regarding the refrigerant used	47
· Installation of Outdoor unit	15	· Charging refrigerant	48
Installation of Air-conditioner	18	Pipe insulation	49
· Refrigerant pipe work	18	· Insulating the refrigerant pipes and branch joints	49
· Selecting refrigerant pipe	19	· Selecting the refrigerant pipe insulator	49
· Keeping refrigerant pipe	22	· Insulate the refrigerant pipe	50
· Temper grade and minimum thickness of the refrigerant pipe	22	· Insulate the distribution header	51
· Refrigerant pipe brazing and safety information	23	· Insulating the branchjoint	51
· Cutting or flaring the pipes	24	· Insulating the pipe located inside of the outdoor unit	52
· Connecting the flared pipes	25	Basic segment display	53
· Pipe installation for an outdoor unit	26	Setting outdoor unit option switch and key function	54
· Connecting the drain hose to the outdoor unit	27	· Setting outdoor unit key function	54
· Examples of refrigerant pipe installation	28	· Setting key operation and checking the view mode with tact switch	59
· Allowable length of the refrigerant pipe and the installation examples	29	Things to check after completing the installation ..	67
· Installation of refrigerant Y-joint	33	Inspection & trial operation	69
· Installation of the distribution header	35	· Checklist before auto trial operation	69
Wiring work	36	· Auto trial operation	70
· Specification of the circuit breaker and power cable	36	Automatic refrigerant amount detection function	72
· Power wiring Diagram	38		

For information on Samsung's environmental commitments and product-specific regulatory obligations, e.g. REACH, visit: www.samsung.com/uk/aboutsamsung/sustainability/environment/our-commitment/data/

Safety precautions

Please follow the following safety information for safety of the installer and the user.

- * DVM S ECO air conditioner uses R-410A refrigerant.
 - When using R-410A, moisture or foreign substances may affect the performance and reliability of the product. Safety precautions must be obeyed when installing the refrigerant pipe.
 - The designed maximum pressure of the system is 4.1MPa and therefore select appropriate material and thickness according to the regulations.
 - R-410A is a quasi-azeotrope of two refrigerants and it has to be charged in liquid phase when filling the refrigerant. (If you charge vapor refrigerant, it may change the blend of the refrigerant and cause product malfunction.)
 - * You must connect the indoor units for R-410A refrigerant. Refer to product catalog to find out the models names for connectable indoor units. (If you connect the indoor units that are not designed for R-410A, it cannot operated normally.)
-
- * After completing the installation and trial operation, explain to the user how to use and maintain the product. Also, hand over this installation manual so that it can be stored by the user.
 - * Manufacturer is not responsible for the incidents occurred by improper installation. Installer is responsible for any installation related claims from the user occurred by neglecting warnings and cautions stated in this manual. (Installer will be responsible for any service charges that may occur)
 - * Generally, system air conditioners should not be relocated after installation. But when it has to be relocated for inevitable reasons, please contact Samsung's qualified dealers for system air conditioners.

 WARNING	<ul style="list-style-type: none">• Hazards or unsafe practices that may result in severe personal injury or death.
 CAUTION	<ul style="list-style-type: none">• Hazards or unsafe practices that may result in minor personal injury (to installer/user) or property damage.

SEVERE WARNING SIGNS

Consult qualified installer or dealer for installation.

- ▶ When installation is done by unqualified person, problems such as water leakage, electric shock or fire may occur. Installation work must be done properly according to this installation manual.

- ▶ When installation is not done properly, it may cause water leakage, electric shock or fire.

When installing the unit in a small room, take measure to keep the refrigerant concentration from exceeding allowable safety limits in case of refrigerant leakage. Consult the dealer for precautionary measure before the installation.

- ▶ When refrigerant leaks and exceed dangerous concentration level, it may cause suffocation accidents.

If any gas or impurities, except R-410A refrigerant, come into the refrigerant pipe, serious problem may occur and it may cause injury.

Use the supplied accessories, specified components and tools for the installation.

- ▶ Do not use the pipe and the installation product used for the R-22 refrigerant.
- ▶ Failure to use the specified components can cause product fall down, water leakage, electrical shock, and fire. (The pipe and flare components used for R-22 refrigerant must not be used)

Install the outdoor unit on a hard and even place that can support its weight.

- ▶ If the place cannot support its weight, the outdoor unit may fall down and it may cause injury.

Safety precautions

Check the following before installation and service work.

- ▶ Before welding, remove dangerous and inflammable things that may cause an explosion and fire around the work.
- ▶ Before welding, remove the refrigerant from inside the pipe or the product.
 - If you perform welding while refrigerant is in the pipe, it may increase the pressure of the refrigerant and cause the pipe to burst. If the pipe bursts or explodes, it may cause severe injury to the installer.
- ▶ When welding, use the nitrogen gas to eliminate oxidation inside the pipe.

Do not modify the product on your own.

- ▶ Potential risk of electric shock, fire, product failure or injury.

Fix the outdoor unit securely on foundation to resist strong wind or earthquake.

- ▶ If the outdoor unit is not properly fixed, it turns over and accidents may occur.

Electric work must be done by qualified persons, complying the national wiring regulations and installed according to the instruction stated in the installation manual with leased circuit.

- ▶ Capacity shortage on the leased circuit and improper installation may cause electric shock or fire.

Make sure to perform grounding work.

- ▶ Do not connect the ground wire to a gas pipe, water pipe, lightning rod or telephone grounding. Improper grounding could cause electric shock.

Wiring must be connected with the designated wires and it must be fixed securely so that it does not apply any external force to the connection part of the terminals.

- ▶ If connection for fixation is not properly done, it may cause heat generation or fire.

Neatly arrange the wires in the electrical parts to make sure that electrical cover is closed securely without any gaps.

- ▶ If the cover is not properly closed, heat may generate on the electrical terminal and cause electric shock or fire.

Exclusive circuit breaker (MCCB, ELB) must be installed to the power supply.

- ▶ When overcurrent or current leakage occurs with no circuit breaker installed, power will not be cut-off and it may cause electric shock or fire.
- ▶ Do not use damaged parts. It may cause fire or electric shock.

You must cut-off the power before you work on, or adjust any power supply part for product installation, maintenance, repair or any other services.

- ▶ There is risk of electric shock.
- ▶ Even when the power is off, it is dangerous when you come in contact with inverter PCB, fan PCB since high pressure DC voltage is charged to those parts.
- ▶ When replacing/repairing the PCB, cut-off the power and wait until the DC voltage is discharged before replacing/repairing them. (Wait for more than 15 minutes to allow it to discharge naturally.)

If the refrigerant gas leaks during the installation, you should ventilate the room.

- ▶ When the refrigerant gas gets in contact with flammable substance, it may generate toxic gas.

Gas leakage must be checked after installation is completed.

- ▶ When the refrigerant gas gets in contact with flammable substance, it may generate toxic gas.

You can get a frostbite if you get in contact with the leaked refrigerant gas.

Supply power to the product during winter time since the product will operate in protection mode itself when the temperature decrease below 0°C.

- ▶ If you cut-off the power, compressor protection mode cannot be operated and may cause damage to the product.
- ▶ The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety: Young children should be supervised to ensure that they do not play with the appliance.
- ▶ **For use in Europe** : This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

CAUTION SIGNS

Do not install the drain pipe directly to the bottom part of the outdoor unit and built a proper drainage so that water drains out smoothly. If not, pipe may freeze or bursts during winter time and cause damage to the product or water leakage.

- ▶ When the draining work is not done properly, water leak may occur and cause property damage.


Install the power cable and communication cable of the indoor and outdoor unit at least 1.5m away from the electric appliances and install it at least 2m away from the lightning conductor.

- ▶ Noise may be generated from the electronic devices, depending on the status of the electric wave.

Install the outdoor unit within the angle stated in the table, according to the height of the building.

- ▶ Do not leave the refrigerant container under the hot sunlight. (There is risk of explosion.)
- ▶ You must use the appropriate pipes according to the standard since the pressure of the refrigerant is very high.
- ▶ Make sure that the pipes does not get any weaker by welding it too much.
- ▶ Make sure to install the product away from children's' reach. (Sharp parts of the heat exchanger is may cause personal injury and when parts of the product gets damage, it may decrease product's performance.)

Lightning rod

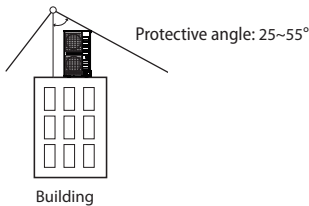

Height of the building	Protection control
20m or less	55°
40m or less	35°
60m or less	25°

Install the indoor unit away from lighting apparatus that uses ballast stabilizer.

- ▶ If you use the wireless remote control, it may not operate normally due to ballast stabilizer.

Do not install the product in following places.

- ▶ Place where outdoor unit's noise and warm air may disturb neighbors. (It may cause property loss.)
- ▶ Do not leave any obstacles around the inlet and outlet of the product. (It may cause damage or accidents.)
- ▶ The place where there is mineral oil or arsenic acid.
 - Those parts may get damaged due to burned resin and cause water leakage or product may fall.
 - The efficiency of the heat exchanger may reduce or product may break.
- ▶ The place where corrosive gas such as sulfurous acid gas generates from the vent pipe or air outlet.
 - The copper pipe or connection pipe may corrode and refrigerant may leak.
- ▶ The place where there is a machine that generates electromagnetic waves.
 - The air conditioner may not operate normally due to problems in control system.
- ▶ The place where there is a danger of combustible gas leakage or place where thinner or gasoline is handled.
 - (There is risk of fire or explosion.)
- ▶ The place with carbon fiber or flammable dust.
- ▶ The place near seashore or hot spring where there is risk of outdoor unit corrosion.

Wear protective equipment (such as safety gloves, goggles, and headgear) during installation and maintenance works. Installation/repair technicians may be injured if protective equipment is not properly equipped.

Safety precautions

Changes in DVM S ECO (inverter) compare to conventional models that has to noted when installing

- ▶ For optimal distribution of the refrigerant, you must use Y-joint as branch joint for connecting outdoor units. (Not to use T-joint)
- ▶ You cannot operate normally if you do not complete the trial operation through outdoor unit key mode. You must use KEY MODE to run trial operation.
- ▶ DVM S ECO air conditioner uses R-410A refrigerant.
- ▶ Check the compatibility of other products such as indoor unit, EEV kits etc. which will be connected to DVM S ECO.

Preparations for Installation

Outdoor unit classification

Appearance		
DVM S ECO	AM100/120/140KXMDG*	AM030RXMDEH* AM040/050KXMDHE*



Packaging material disposition

Caution

- Safely store or dispose the packaging materials.
- Sharp metals such as nails or wooden material packaging that may break into pieces become a cause for personal injury.
- Make sure to store or dispose the vinyl type packaging material to keep it out of reach of children. Children may put them over their face, which is very dangerous since it may lead them to suffocation.

Accessories

- * You must keep following accessories until the installation is finished.
- * Hand over the installation manual to the customer after finishing the installation.

	Installation Manual	Cap Drain	Drain Plug	Rubber Leg
AM100/120/140KXMDG*	1	5	1	4
AM030RXMDEH* AM040/050KXMDHE*	1	5	2	4

Preparations for Installation

Optional accessories

※ The following accessories are needed when connecting the outdoor and indoor unit.


Model	Model	Total capacity
Y-joint	MXJ-YA1509M	15.0 kW and below
	MXJ-YA2512M	Over 15.0 kW ~ 40.0 kW and below
Distribution header	MXJ-HA2512M	45.0 kW and Below (for 4 rooms)
	MXJ-HA3115M	70.3 kW and below (for 8 rooms)

※ Refrigerant distributor component has to be installed when connecting indoor unit with no built-in EEV (electronic expansion valve)

Selecting installation location

Decide the installation location, with the consideration of the following conditions, under user's approval.

- ▶ Place where hot discharge air or noise from the outdoor unit may not disturb the neighbor (Especially in residential areas, keep the operation hours in mind.)
- ▶ Place where structure can bear the weight and vibration of the outdoor unit.
- ▶ Place with flat surface where rainwater does not settle or leak.
- ▶ Place where it is not exposed to strong wind.
- ▶ Well ventilated place with sufficient service place for repairs and maintenance. (Discharge duct can be purchased separately)
- ▶ Place where you can connect the refrigerant pipes between indoor and outdoor units within allowable distance.
- ▶ Place where it allows easy waterproofing and draining work for the condensation water generated from the outdoor unit during heating operation.
- ▶ Place where there is no risk of inflammable gas leakage.
- ▶ Place where there is no direct influence of snow or rain.
- ▶ Do not install the product in a place where it will be directly exposed to sea breeze.
 - Consult an installation expert (or company) since you will need to take extra anti-corrosion measures if you need to install the product in a place where it can be exposed to direct sea breeze. (You have to remove dusts and salinity on the heat exchanger and apply designated rust inhibitor more than once a year.)
- ▶ If the outdoor unit is installed in the location where it can be attacked by high wind, please pay attention to these issues:
 - Caution when outdoor unit air outlet side was blow by high wind that speed over 5m/s, Because the outlet air was suctioned in once again, reduce the airflow of machine, and may cause these appearance:
 - Lower capacity; -severe frost in heating mode; - machine break down for high pressure .
- ▶ If the air outlet side of the outdoor unit encountered a large continuous strong wind blowing, the fan will run reversely with high speed, and may be damaged by it. so please refer to the installation instruction.

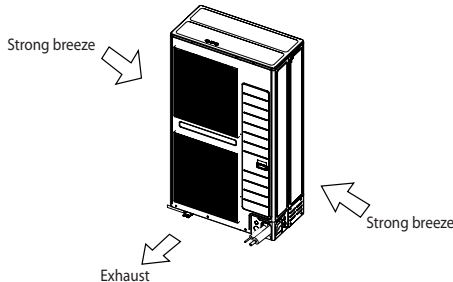


Selecting installation location

Installation Guide at the seashore

Make sure to follow below guides when installing at the seashore.

- ▶ Do not install the product in a place where it is directly exposed to sea water and sea breeze.
 - Make sure to install the product behind a structure (such as building) that can block sea breeze.
 - Even when it is inevitable to install the product in seashore, make sure that product is not directly exposed to sea breeze by installing a protection wall.
- ▶ Consider that the salinity particles clinging to the external panels should be sufficiently washed out.
- ▶ Because the residual water at the bottom of the outdoor unit significantly promotes corrosion, make sure that the slope does not disturb drainage.
 - Keep the floor level so that rain does not accumulate.
 - Be careful not to block the drain hole due to foreign substance.
- ▶ When product is installed in seashore, periodically clean it with water to remove attached salinity.
- ▶ Make sure to install the product in a place that provides smooth water drainage. Especially, ensure that the base part has good drainage.
- ▶ If the product is damaged during the installation or maintenance, make sure to repair it.
- ▶ Check the condition of the product periodically.
 - Check the installation site every 3 months and perform anti-corrosion treatment such as R-Pro supplied by SAMSUNG (Code : MOK-220SA) or commercial water repellent grease and wax, etc., based on the product condition.
 - When the product is to be shut down for a long period of time, such as off-peak hours, take appropriate measures like covering the product.
- ▶ If the product installed within 500m of seashore, special anti-corrosion treatment is required.

* Please contact your local SAMSUNG representative for further details.

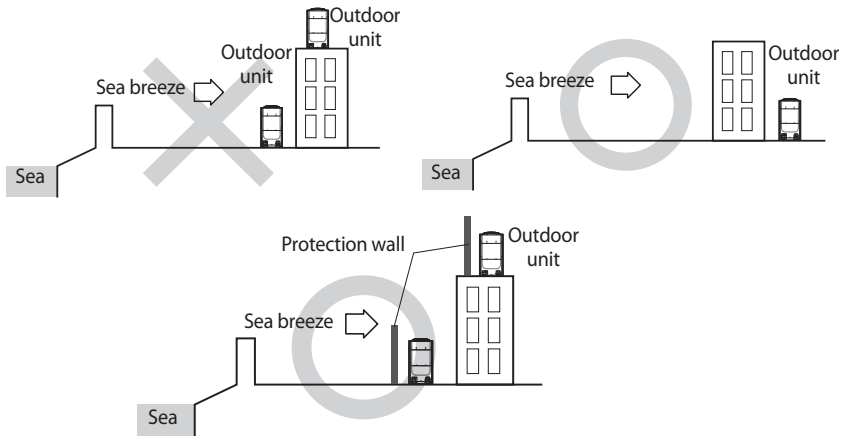

Protection wall should be constructed with a solid material that can block the sea breeze and the height and width of the wall should be 1.5 times larger than the size of the outdoor unit. (You must secure more than 700 mm of space between the protection wall and the outdoor unit for air circulation.)


- * Choose a place free of direct sunlight.
- * Choose a place free of exposure to the rain and snow.
- * Choose a place free of leakage of inflammable gases.
- * Choose a place that the pipelines are accessible to the indoor and outdoor unit.



Caution

- ▶ System air conditioner may cause static noise when listening to AM stations. Therefore, select an installation location for indoor unit where electrical wiring can be done while keeping certain distance from a radio, computer and stereo equipment.
- ▶ Especially, keep the unit at least 3m away from the electrical equipment in an area with weak electromagnetic waves and put the main power cable and communication cables in a separately installed protection tube.
- ▶ Make sure that there is no equipment that generates electromagnetic waves. If not electromagnetic waves may cause problem to the control systems which may lead to air conditioner malfunction. (Example: Remote control sensor of the indoor unit may not receive the signal very well, due to ballast stabilizer of the lighting equipment.)
- ▶ In regions with heavy snowfall, make sure to install the outdoor unit where there is no concerns of direct snowfall on the outdoor unit. Also, build higher base support so that accumulated snow does not block the air inlet or the heat exchanger.
- ▶ R-410A refrigerant is a safe, nontoxic and nonflammable refrigerant. However, if the place holds any concerns for exceeding dangerous level of refrigerant concentration in case of refrigerant leakage, extra ventilation system is required.
- ▶ When you install the outdoor unit in a high places such as roof, install fence or guardrail around it. When there is no fence or guardrail, service person could fall.
- ▶ Do not install the product in places where corrosive gases such as sulfur oxides, ammonia, and sulfurous gas are produced. (e.g. Toilet outlet, ventilation opening, sewage works, dyeing complex, cattle shed, sulfuric hot spring, nuclear power plant, ship etc.) When installing the product in those places, contact an installation specialty store as the copper pipe and brazing part will need additional corrosion proof or anti-rust additive to prevent corrosion.
- ▶ Make sure to keep any inflammable materials (such as wooden materials, oil etc.) around the outdoor unit. When there's fire, those inflammable material will easily catch the fire and may pass it on to the product.
- ▶ Depending on the condition of power supply, unstable power or voltage any cause malfunction of the parts or control system. (At the ship or places using power supply from electric generator...etc)
- ▶ When the outdoor unit is installed near seashore or in a place where sulfuric acid gas may leak, corrosion may occur in outdoor unit and cause product malfunction.

Selecting installation location

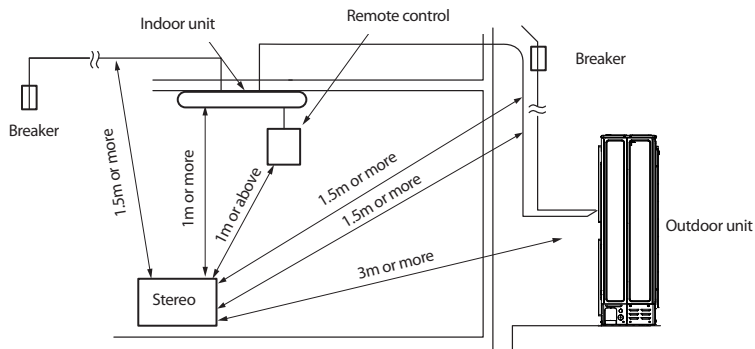


- ▶ Make sure that the water dripping from the drain hose runs away correctly and safety.
- ▶ You should repaint or protect the damaged part so that the paint of the cabinet does not peel off and become rusty during installation. When the cabinet becomes rusty, the life of an outdoor will be reduced.

Space requirements

- ▶ Make a space for ventilation and service as seen in the picture.
- ▶ When multiple outdoor units are combined for installation, allow enough space for ventilation against a wall. If the ventilation space is not allowed, product malfunction may occur.
- ▶ The side with logo is the front side of the outdoor unit.

* Figure description

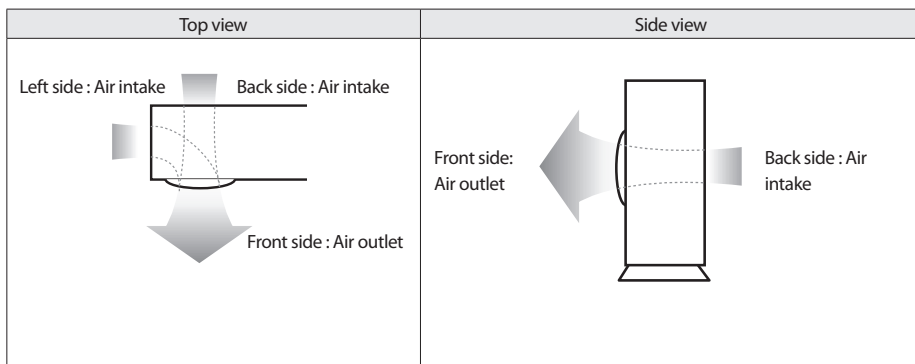

• Direction of airflow

Installation location

<Instructions for parallel installation>


Unit: mm

(A) When the air inlet is blocked


※ The upper part of the outdoor unit is not blocked

① When installing 1 outdoor unit

-Only the air inlet is blocked

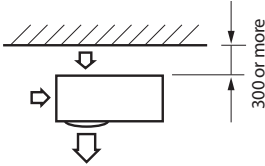


-Air inlet and 2 sides of the outdoor unit are blocked

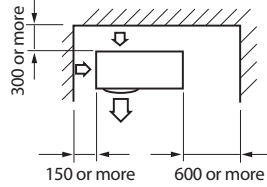

② When parallel installing more than 2 outdoor units(*1)


-Air inlet and 2 sides of the outdoor unit are blocked

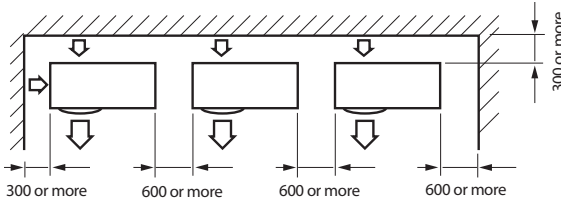


※ The upper part of the outdoor unit is blocked

① When installing 1 outdoor unit

-When the air inlet is blocked


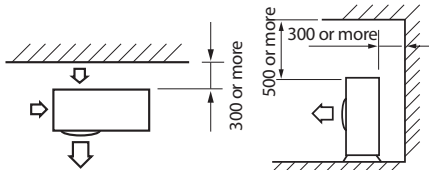


-Air inlet and 2 sides of the outdoor unit are blocked

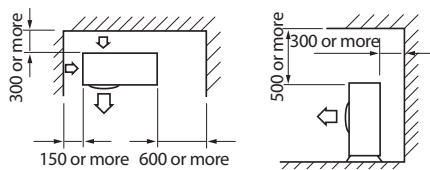

② When parallel installing more than 2 outdoor units(*1)

-Air inlet and 2 sides of the outdoor unit are blocked

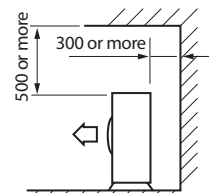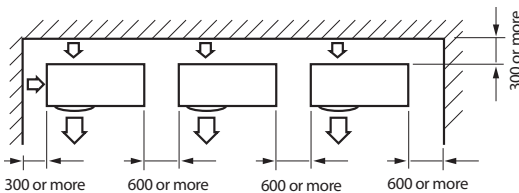


Selecting installation location

(B) When the air outlet is blocked


Unit: mm

※ The upper part of the outdoor unit is not blocked

① When installing 1 outdoor unit

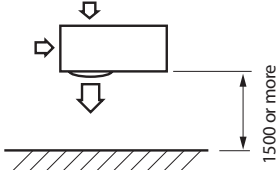


② When parallel installing more than 2 outdoor units(*1)

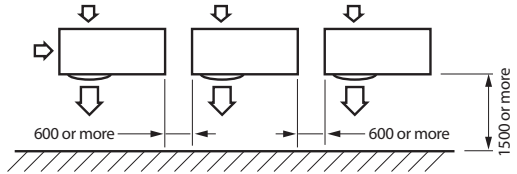


※ The upper part of the outdoor unit is blocked

① When installing 1 outdoor unit

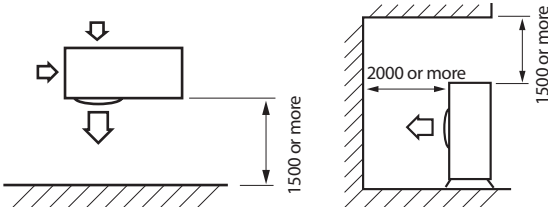

② When parallel installing more than 2 outdoor units(*1)

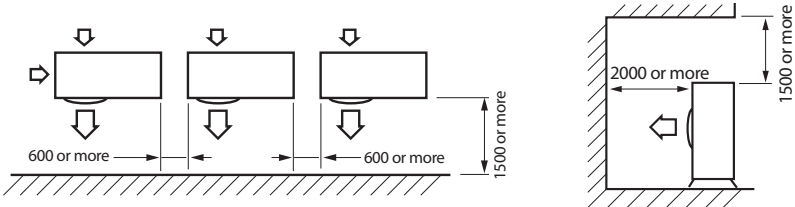

(C) When air inlet and air outlet of the outdoor unit are blocked



Unit: mm

Case 1: Obstacle on exhausting side is higher than the unit.(regardless of the height of obstacle on suction side)

※ The upper part of the outdoor unit is not blocked

① When installing 1 outdoor unit

② When parallel installing more than 2 outdoor units(*1)

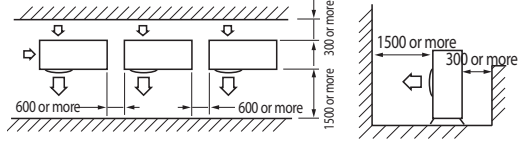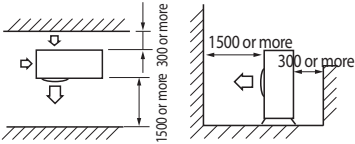



▲ The backside block can not be higher than the outdoor unit. If the backside block is higher than the outdoor unit, arrange the outdoor unit higher than the backside block.

Case 2: Obstacle on exhausting side is lower than the unit.(regardless of the height of obstacle on suction side)

※ The upper part of the outdoor unit is not blocked

① When installing 1 outdoor unit


② When parallel installing more than 2 outdoor units(*1)

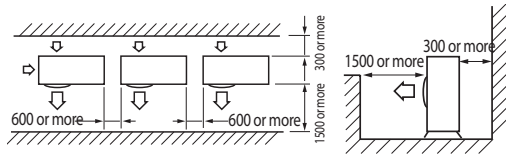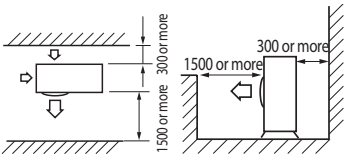

▲ The frontside block can not be higher than the outdoor unit. If the frontside block is higher than the outdoor unit, arrange the outdoor unit higher than the frontside block.

(*1) When installing outdoor units paralleled, more than 600mm gap shall be left.

When front and rear side of the outdoor unit is toward the wall

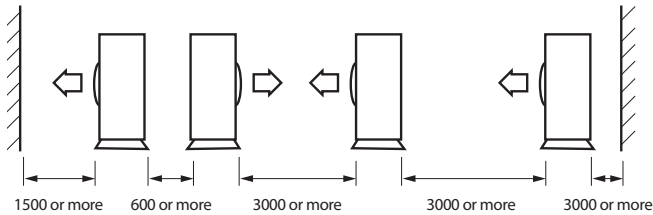

Selecting installation location

Moving the outdoor unit

- ▶ Select the moving path in advance.
- ▶ Be sure that moving path can support weight of the outdoor unit.
- ▶ Do not slant the product more than 30° when carrying it. (Do not lay the product down in sideways.)
- ▶ Surface of the heat exchanger is sharp. Be careful not to get injured while moving the product.



Caution

- You must use certain part of the product when moving the product.

1) When moving with a crane

- ▶ Fasten the wire rope as shown in the figure.
- ▶ To protect damage or scratches, insert a piece of cloth between the outdoor unit and the wire rope.

2) When moving with a forklift

- ▶ Carefully insert the forklift forks into the forklift holes at the bottom of the outdoor unit.
- ▶ Be careful with the forklift from damaging the product.


3) When moving the product without wooden pallet and the crane is not available for use

- ▶ Connect a wire rope to the outdoor unit as you would move it with a crane.
- ▶ Hang the wire rope to the forklift fork to move the outdoor unit.

4) When the equipment is moved by the installers

* When the equipment is moved to a location that is so near that can be handled by the installers.

- ▶ Two workers are required to move the product by the handles.
- ▶ Take care not to damage the heat exchanger.
- ▶ Take care not to be cut by the sharp edges of the heat exchanger.

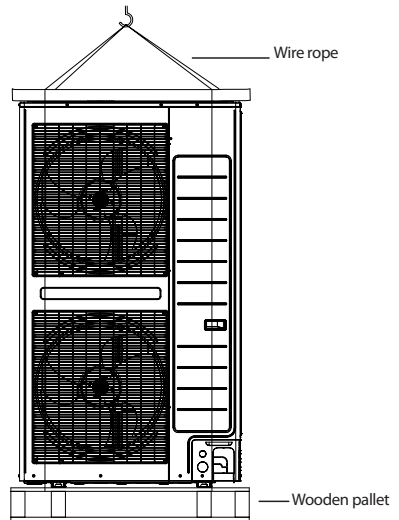

Base construction and installation of the outdoor unit

Installation of outdoor unit




Warning

Make sure to remove the wooden pallet before installing the outdoor unit. If you do not remove the wooden pallet, there is risk of fire during welding the pipes. If the outdoor unit is installed with wooden pallet on, and it was used for long period time, wooden palette may break and cause electrical hazard or high pressure may damage the pipes.



1. Install the outdoor unit 150mm higher than the base ground and install the drain hole to connect the pipe to the drainage.
2. When the front fan of an outdoor unit is installed in a place where the average snowfall is more than 150mm, the discharge duct should be attached to the outdoor unit.
3. The concrete foundation should be 1.5 times larger than bottom of the outdoor unit.
4. It is necessary to install wire mesh or steel bar when outdoor units are installed on a soft foundation.
5. When installing multiple outdoor units at the same place, install the H beam on the base ground. (When installing a number of outdoor units, you can install it on the base ground.)
6. Install the H beam(150mm x 150mm x t10 : basic specification) or vibration absorption frame to jut out from the base ground.
7. After installing the H beam, apply corrosion protection.
8. Install a square pad($t=20\text{mm}$ or more) to prevent vibration from the outdoor unit onto the base ground. Place the outdoor unit on the H beam and fix it with the bolt, nut and washer. (Fix with M10 basic anchor bolt, nut and washer.)

Unit: mm

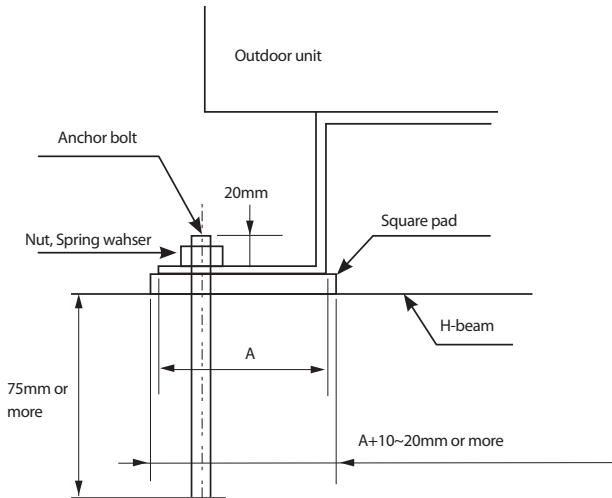

Base construction and installation of the outdoor unit


Base ground construction

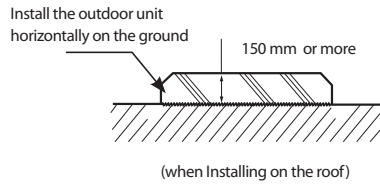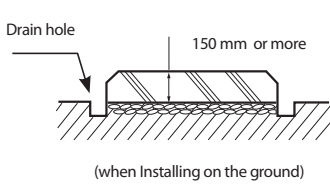

- The outdoor unit should be supported within the range of measurement below for base ground work. Unit: mm

◆ AM100/120/140KXMDG*


Anchor bolt position

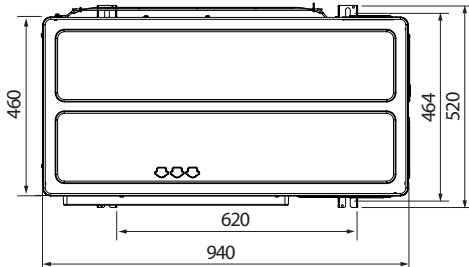


◆ AM030RXMDEH*

AM040/050KXMD*

Anchor bolt position

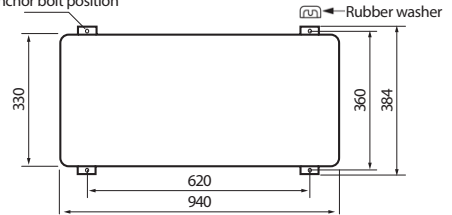

- When the outdoor unit needs to be supported, fix it with wire as shown in the picture.
- Slightly unwind the four screws on the cover top of the outdoor unit.
 - Wind wires round the four screws and fasten the screws again.
 - Fix the wires to the ground.

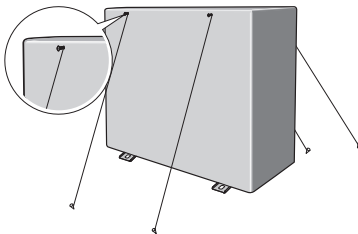


Caution

- If the outdoor unit is not fixed securely, product may fall and it might cause loss of life or property damage.
- Do not install the outdoor unit on the wooden pallet.
- Fix the outdoor unit securely to the base ground with anchor bolts.
- The manufacturer is not responsible for the damage occurred by not adhering to the standard of the installation.
- To protect the outdoor unit from external condition such as rain, install it on the base ground and connect the drain pipe to the drainage.



 - Please firstly ensure the strength and levelness of the platform, ground and the support so as to lower the noise and vibration for fear of human injuries.
- The hanging mount on the wall is prohibited due to the heavy machine. The improper installation shall lead to the fall of the machine as well as human injuries.



<The machine shall be installed on the ground or on the high platform>


 


- ▶ As shown in Figure 1, to ensure the shadow part is on the bearing surface without suspension.
- ▶ As shown in Figure 1, the four installation footings shall be firmly fastened on the base platform by the bolts (preparing four sets of M10 bolts with fitful nuts and washer which are used on site)
- ▶ In order to reduce the vibration of the noisemeter, the vibration absorber (offer on site) shall be used between the contact of machine and base platform.
- ▶ It is optimal that anchor bolt is 20mm above the surface. (See Figure 2)

The base of the outdoor unit and the position of foundation bolts


Unit: mm

◆ **AM100/120/140KXMDG***


◆ **AM030RXMDEH***
◆ **AM040/050KXMDG***

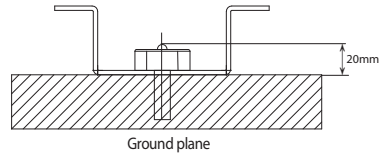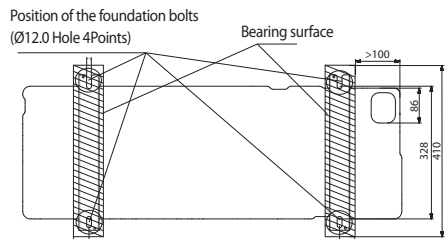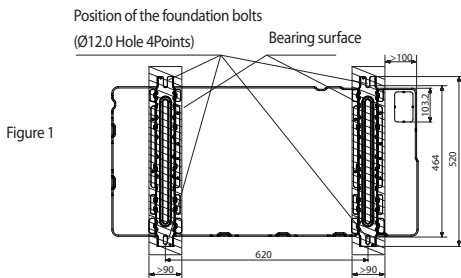

- ▶ Please ensure the shadow part in Figure 1 is really installed on the bearing surface without any suspension.
- ▶ The ground base that is larger than the standing leg of the air-conditioner (90mm in width and 520mm in length) shall be used to support the air-conditioner (See Figure 1), and the rubber mat shall be fully placed on the whole bearing surface.
- ▶ The base platform shall be at least 150mm above the ground.

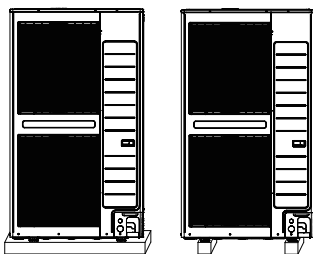

AM100/120/140KXMDG*

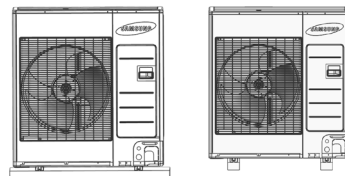

AM030RXMDEH*
AM040/050KXMDG*



- When the grounding pipe comes out from the below, please reserve the place for the connection pipe.
- The installation mode mentioned above shall ensure that the shadow part in Figure 1 is really on the installation surface.

Installation of Air-conditioner



Warning

- When installing, make sure there is no leakage. When collecting the refrigerant, stop the compressor first before removing the connection pipe. If the refrigerant pipe is not properly connected and the compressor works with the service valve open, the pipe inhales the air and it makes the pressure inside of the refrigerant cycle abnormally high which may lead to explosion and injury.


Refrigerant pipe work

- ▶ The length of refrigerant pipe should be as short as possible and the height difference between an indoor and outdoor unit should be minimized.
- ▶ Piping work must be done within allowable piping length, height difference, and the allowable length after branching.
- ▶ The pressure of the R-410A is high. Use only certified refrigerant pipe and follow the installation method.
- ▶ After installing the pipes, calculate the total length of the pipe to check if additional refrigerant is needed. When you need to charge the additional refrigerant, make sure to use R-410A refrigerant.
- ▶ Use clean refrigerant pipe and there shouldn't be any harmful ion, oxide, dust, iron content or moisture inside pipe.
- ▶ Use tools and accessories that fit on R-410A only.

Tools	Installation process/purpose	Compatibility with conventional tool	
Pipe cutter	Refrigerant pipe installation	Pipe cutting	Compatible
Flaring tool		Pipe flaring	
Refrigerant machine oil		Apply refrigerant oil on flared part	Exclusive ether oil, ester oil, alkali benzene oil or synthetic oil
Torque wrench		Connect flare nut with pipe	Compatible
Pipe bender		Pipe bending	
Nitrogen gas	Air tightness test	Prevent oxidation within the pipe	
Welder		Pipe welding	
Manifold gage	Air tightness test ~ additional refrigerant charging	Vacuumizing, refrigerant filling as well as inspecting operation	Need exclusive one to prevent mixture of R-22 refrigerant oil use and also the measurement is not available due to high pressure
Refrigerant charging hose			Need exclusive one since there is risk of refrigerant leakage or inflow of impurities
Vacuum pump	Pipe drying	Compatible (Use products which contain the check valve to prevent the oil from flowing backward into the outdoor unit.) Use the one that can be vacuumed up to -100.7kpa(5Torr).	
Electronic scale for refrigerant filling			Compatible
Air leak tester		Gas leak test	Need exclusive one (Ones used for R-134a is compatible)
Pipeline joint		Must use the flare nut equipped with the product. Refrigerant leakage may occur when the conventional flare nut for R-22 is used.	

Selecting refrigerant pipe

- ▶ Install the refrigerant pipe according to main pipe size of each outdoor unit capacity.
- ▶ When the pipe length (including elbow) between an outdoor unit and the farthest indoor unit exceeds 90m, you must increase the size of the gas pipe (main pipe) by one grade which connects between the outdoor unit to the first branch joint. (The liquid pipe size will be maintained.)
- ▶ If the capacity of the outdoor unit can decline due to the pipe length, upgrade the pipe size one step (gas pipe).

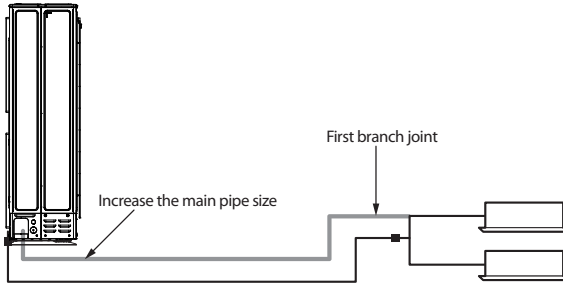

Size of the pipe between the outdoor unit and the first branch joint

Outdoor unit capacity [HP]	Liquid pipe [mm]	Gas pipe [mm]	Increased gas pipe [mm]
10	Ø9.52	Ø22.22	Ø25.40
12	Ø12.70	Ø28.58	Ø28.58
14	Ø12.70	Ø28.58	Ø28.58
4/5	Ø9.52	Ø15.88	Ø19.05

Selection of branch joint

Selection of the other branch joint according to the sum of indoor unit capacity which will be connected after the branch

Classification	Indoor unit capacity [kW]	Model name
Y-joint	15.0 kW and below	MXJ-YA1509M
	Over 15.0 kW ~ 40.0 kW and below	MXJ-YA2512M
Distribution Header	45.0 kW and Below (for 4 rooms)	MXJ-HA2512M
	70.3 kW and below (for 8 rooms)	MXJ-HA3115M

Size of the pipe between branch joints

Select the pipe size according to the sum of indoor unit capacity which will be connected after the branch.

Indoor unit capacity [kW]	Liquid pipe [mm]	Gas pipe [mm]
15.0 kW and below	Ø9.52	Ø15.88
Over 15.0 kW ~ 22.4 kW and below		Ø19.05
Over 22.4 kW		Ø22.22

Installation of Air-conditioner

Selecting additional refrigerant charging

► Basic refrigerant

The basic amount of refrigerant charged at a factory

Outdoor unit (Series)	Factory charge (kg)	Connect maximum number of indoor (unit)
AM100KXMDG*	3.7	18
AM120KXMDG*	4.3	21
AM140KXMDG*	4.8	26
AM040KXMDE*	2.0	7
AM050KXMDE*	2.5	9
AM030RXMDE*	2.0	5

► Charging additional refrigerant

The amount of additional refrigerant charging = The amount of refrigerant charging for pipe + the amount of refrigerant correction charging for an indoor unit

1) The amount of additional refrigerant depending on the pipe size.

- Amount of additional refrigerant has to be calculated based on the sum of all liquid pipe length.

Size of liquid pipe	Ø6.35	Ø9.52	Ø12.70	Ø15.88	Ø19.05	Ø22.22	Ø25.40	Ø28.58
Additional amount (kg/m)	0.02	0.06	0.125	0.18	0.27	0.35	0.53	0.65

Additional refrigerant charging calculation = The sum of total length of Ø9.52 liquid pipe(m) x 60g + the sum of total length of Ø6.35 liquid pipe(m) x 20g

Ex) a(Ø9.52)=40m,b+c+d(Ø9.52)=15m,e+f+g(Ø6.35)=15m

The amount of additional refrigerant = 55m x 60g + 15m x 20g = 3600g

2) In case of using EEV kit, amount of additional refrigerant of liquid pipe between EEV kit and indoor units is 0.01kg per meter.

Amount of additional refrigerant for each indoor unit


Unit: kg

Model	Capacity (KW)																500 CMH	1000 CMH
	1.5	1.7	2.2	2.8	3.6	4.5	5.6	6.0	7.1	9.0	9.3	11.2	12.8	14.0	22.0	28.0		
Slim 1way cassette(JSF) (AM*FN1DEH*)			0.25	0.25	0.25													
2way cassette (AM*FN2DEH*)							0.31		0.47									
Global 4way cassette (AM*FN4DEH*)						0.45	0.45		0.45	0.45		0.57	0.69	0.69				
Floor Standing Unit (AM*FNFDEH*)					0.22		0.32		0.32									
ERV plus (AM*FNKDEH*)																	0.11	0.36
Global mini 4way cassette (AM*FNNDEH*)	0.29		0.29	0.29	0.29	0.37	0.37	0.37										
Slim duct (AM*FNLDEH**)		0.17	0.17	0.17	0.26	0.35	0.35		0.45	0.42		0.42	0.62	0.62				
MSP duct (AM*FNMDEH*)			0.24	0.24	0.24	0.28	0.28		0.28	0.32		0.54	0.68	0.68				
Ceiling (AM*FNCDEH*)							0.39		0.39									
Console (AM*FNJDEH*)				0.27	0.27		0.27											
Neo forte (AM*FNTDEH**)	0.24		0.24	0.24	0.24		0.36		0.36									
Neo forte(with EEV) (AM*FNQDEH**)	0.24		0.24	0.24	0.24	0.36	0.36		0.36									
HSP Duct (AM*FNLHDEH*)												0.68	0.68	0.68	1.18	1.18		
Home Duct (AM*KNLDEH)		0.13	0.13	0.13	0.17													
Boracay (AM*KNTDEH)	0.24		0.24	0.32	0.32	0.49	0.49		0.49									

Capacity (KW)	1.5	1.7	2.2	2.8	3.6	4.5	5.6	6.0	7.1	9.0	9.3	11.2	12.8	14.0	22.0	28.0	500 CMH	1000 CMH	
Model																			
Boracay(with EEV) (AM*KNQDEH)	0.24		0.24	0.32	0.32	0.49	0.49		0.49										
MAX4 (AM*MNQDEH*)											0.68								
Home Duct 1&2 (AM*MNLDEH)						0.24	0.24		0.31										

► If AHU kit is included among the indoor units,you must add 0.063kg of refrigerant for every 1kW of the AHU capacity increase.

Method to calculate total amount of additional refrigerant

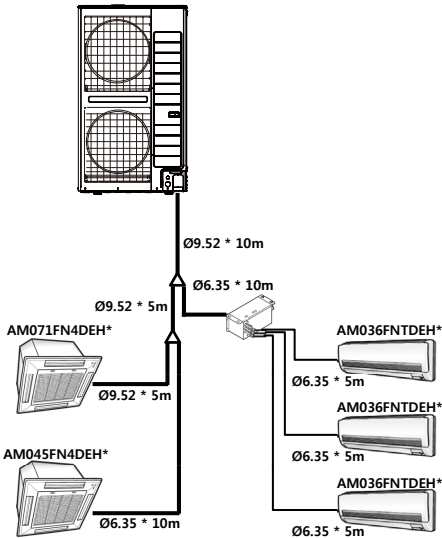

Installation of Air-conditioner

▶ Total amount of additional refrigerant

Total amount of additional refrigerant = Amount of additional refrigerant depending on the pipe length
+ Amount of additional refrigerant for each indoor unit


※ Amount of additional refrigerant depending on the pipe length

Size of Liquid pipe (mm)	Length(m)	Unit amount of refrigerant (kg/m)	Amount of additional refrigerant (kg)	Total amount of additional refrigerant (kg)
Ø6.35	20	0.02	0.4	1.75
Ø9.52	20	0.06	1.2	
EEV kit ~ indoor unit	15	0.01	0.15	

※ Amount of additional refrigerant charging for each indoor unit


Model name of Indoor unit	Number of units (EA)	Unit amount of refrigerant (kg/m)	Amount of additional refrigerant (kg)	Total amount of additional refrigerant (kg)
AM045FN4DEH*	1	0.45	0.45	1.62
AM071FN4DEH*	1	0.45	0.45	
AM036FNTDEH*	3	0.24	0.72	

▶ Total amount of additional refrigerant = 1.75 + 1.62 = 3.37 (kg)

 **Caution**

When charging additional refrigerant while outdoor unit operating, you should follow below guides:

- Cooling mode : charge on the low pressure service valve.
- Heating mode : charge on the charging port. (Refer to the picture on the right.)
- Do not use the high pressure service valve as a refrigerant charge while outdoor unit operating except on vacuumizing. (High pressure refrigerant can lead to human injuries.)

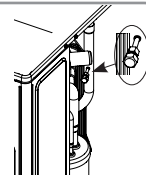

Keeping refrigerant pipe

To prevent foreign materials or water from entering the pipe, storing method and sealing method (especially during installation) is very important. Apply correct sealing method depending on the environment.

Exposure place	Exposure time	Sealing type
Outdoor	Longer than one month	Pipe pinch
	Shorter than one month	Taping
Indoor	-	Taping

Temper grade and minimum thickness of the refrigerant pipe

Outer diameter (mm)	Minimum thickness (mm)	Material
Ø6.35	0.7	Annealed
Ø9.52	0.7	
Ø12.70	0.8	
Ø15.88	1.0	
Ø19.05	0.9	Drawn
Ø22.22	0.9	



Caution

- For pipes larger than Ø 19.05, drawn type (C1220T-1/2H or C1220T-H) copper pipe must be used. If an annealed type (C1220T-O) copper pipe is used, pipe may break due to its low pressure resistance and cause personal injury.

Refrigerant pipe brazing and safety information




Caution

Important information for refrigerant pipe work

- Make sure there is no moisture inside the pipe.
- Make sure there are no foreign substances and impurities in the pipe.
- Make sure there is no leakage.
- Make sure to follow the instruction when welding or storing the pipe.

Nitrogen flushing brazing

- Use Nitrogen gas when brazing the pipes as shown in the picture.
- If you do not perform nitrogen flushing when brazing the pipes, oxide may form inside the pipe. It can cause the damage of the important parts such as compressor and valves etc.
- Adjust the flow rate of the Nitrogen flushing with a pressure regulator to maintain $0.05\text{m}^3/\text{h}$ or less.

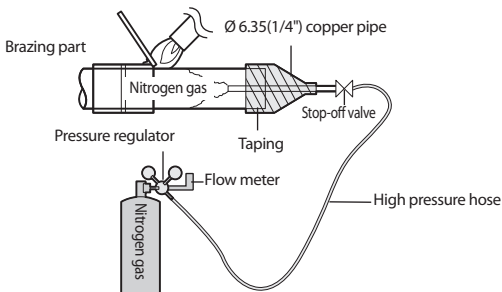

Direction of the pipe when brazing

- Brazing the pipe should be done with the pipe headed downward or horizontally.
- Avoid brazing with the pipe headed upward.




Caution

- The test liquid used to detect leakage after pipe brazing should be the designated one. The use of the test liquid containing sulfur element may cause pipe corrosion.

Installation of Air-conditioner


Cutting or flaring the pipes


1. Make sure that you prepared the required tools.
 - ▶ Pipe cutter, Deburring tool, flaring tool and pipe holder, etc.
2. If you want to shorten the pipe, cut it with a pipe cutter ensuring that the cut edge remains at 90° with the side of the pipe.
 - ▶ Refer to below illustrations for correct and incorrect examples of cut edges.

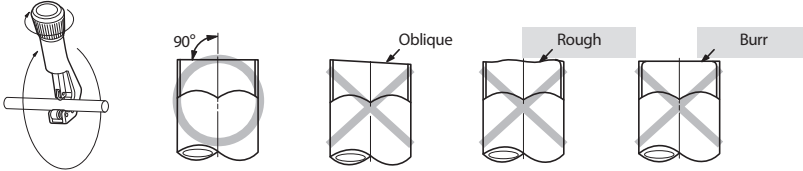

3. To prevent a gas leak, remove all burrs at the cut edge of the pipe using a Deburring tool.
4. Carry out flaring work using flaring tool as shown below.

[Flaring tools]

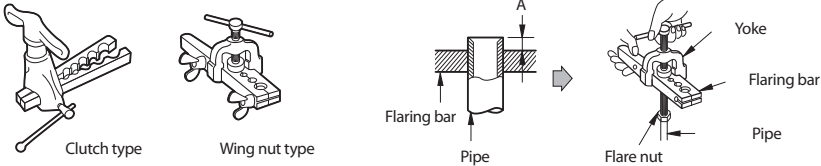

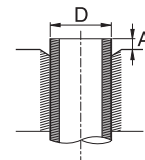	Pipe diameter [D (mm)]	Depth of flaring part [A (mm)]		
		Using flaring tool for R-410A	Using conventional flaring tool	
			Clutch type	Wing nut type
	Ø 6.35	0~0.5	1.0~1.5	1.5~2.0
	Ø 9.52	0~0.5	1.0~1.5	1.5~2.0
	Ø 12.70	0~0.5	1.0~1.5	1.5~2.0
	Ø 15.88	0~0.5	1.0~1.5	1.5~2.0


5. Check that you flared the pipe correctly.
 - ▶ Refer to below illustrations for correct and incorrect examples of flared pipe.




- If foreign matters or burrs are not removed after cutting pipe, refrigerant gas may leak.
- If foreign matters enter inside the pipe, important interior parts of the unit may get damaged or product efficiency will be reduced. So, the direction of pipe should be downward during pipe cutting or flaring.

Connecting the flared pipes

- ▶ Check if the flaring is properly done according to the standard size.
- ▶ Align the center of the piping and tighten the flare nut with your hands. Then, tighten the flare nut with torque wrench in a direction of the arrow indicated in below illustration.
- ▶ Make sure to use ester oil to coat the flare connection section.

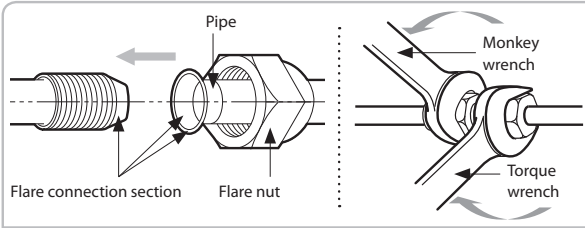

Outer diameter (D,mm)	Connection torque (N-m)	Flare dimension (L,mm)	Flare shape (mm)
Ø6.35	14~18	8.7~9.1	
Ø9.52	34~42	12.8~13.2	
Ø12.70	49~61	16.2~16.6	
Ø15.88	68~82	19.3~19.7	
Ø19.05	100~120	23.6~24.0	

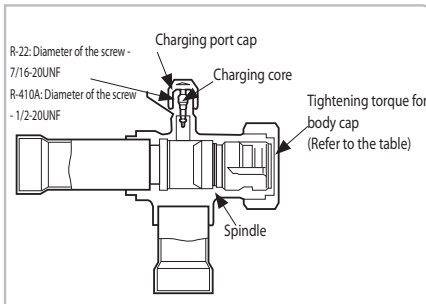

Outer Diameter (mm)	Tightening torque	
	Body cap (N-m)	Charging port cap (N-m)
Ø6.35	20~25	10~12
Ø9.52	20~25	
Ø12.70	25~30	
Ø15.88	30~35	
Ø19.05	35~40	

(1 N-m = 10 kgf-cm)



Caution

- Blowing Nitrogen gas should be done when welding the pipe.
- Make sure to use the provided flare nut.
- Make sure that there are no cracks or twisted part when you need to bend the pipe.
- Do not fasten the flare nut with excessive strength.
- R-410A is a high pressure refrigerant and there is a risk of refrigerant leakage if the flare connection is not coated with ester oil. Therefore, apply ester oil to coat the flare connection area.

Installation of Air-conditioner

Pipe installation for an outdoor unit

1. Pipe direction


The refrigerant pipe can be pulled out from front, flank, rear, and bottom side, so install it depending on the installation site condition.



Caution

Caution for using knock-out hole

- Cut the pipe outlet to the exact pipe size. In addition, remove foreign substances and burrs around the outlet.
- Perform cutting with only a cutter (ex. nipper) and never tap with a hammer near the pipe outlet. Otherwise, it may cause product damage such as warping of the cabinet.
- Make sure not to damage the exterior of the outdoor unit.
- Remove all burrs at the edge of the knock-out hole and apply the paints it to prevent rust.
- Use a cable tube and bushing to prevent a cable from being damaged when passing through a knock-out hole.
- After installing pipes, block the unused knock hole to prevent small animal from entering. However, the radiant heat hole (A) should be able to intake air.

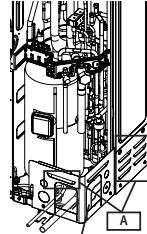


Pipe outlet



Caution

Caution for welding the pipe to an outdoor unit:

- When welding the pipe, the unit may get damaged by the heat and flame from welding. Specifically outdoor's pipe near by EEV, the fire would damage the EEV. Use a flame proofing cloth to protect the unit from a welding fire or flame.
- The O-ring and Teflon packing inside service valve may get damaged by the heat from welding. Wrap the bottom side of the service valve with a wet cloth and weld it as shown in the illustration. Also, water dripping from the wet cloth may interrupt the welding. Make sure the water does not drip from the wet cloth.
- Make sure that connected pipes does not interrupt each other or make contact with the product. (Vibration may cause damage to the pipes.)
- To prevent welding flame from burning the felt during welding, it is necessary to place a baffle before the felt.

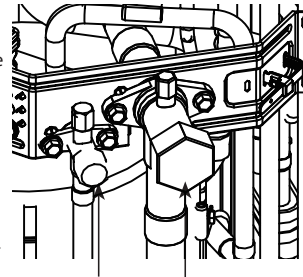

High pressure (Liquid side) Low pressure (Gas side)



2. Outdoor unit refrigerant pipe connection

Classification	Front, flank, rear side of pipe connection	Bottom side of pipe connection
Working process	<ul style="list-style-type: none"> • First, remove the pipe cover from the unit. • Separate the knock-out hole to use. If the hole is open, small animals such as squirrels and rats may get into the unit through the hole and the unit may be damaged. 	<ul style="list-style-type: none"> • Separate the knock-out hole at the bottom side of the unit and install the pipe. • After installing and insulating the pipe, close up the remaining gap. If the gap remains open, small animals such as rats and squirrels may get inside the unit and cause damage to the unit.


Connecting the drain hose to the outdoor unit

When using the air conditioner in the heating mode, ice may accumulate. During de-icing (defrost operation), the condensed water must be drained off safely. Consequently, you must install a drain hose on the outdoor unit, following the instructions below.


- ▶ Leave space of more than 50mm between the bottom of the outdoor unit and the ground for installation of the drain hose, as shown in figure.
- ▶ Insert the drain plug into the hole on the underside of the outdoor unit.
- ▶ Connect the drain hose to the drain plug.
- ▶ Ensure that the drained water runs off safely and correctly.

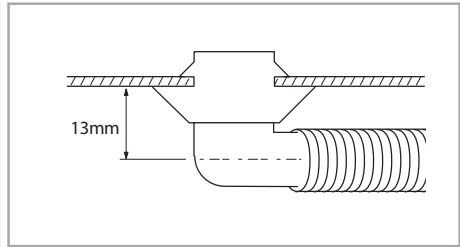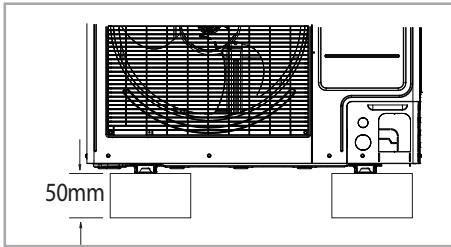

- ▶ Be sure to plug the rest of drain holes not connected with drain plugs using drain caps.

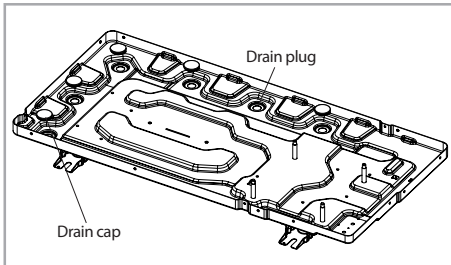

AM100/120/140KXMDG*

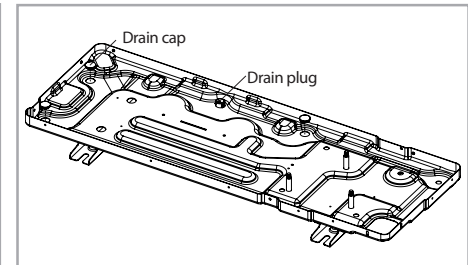


AM030RXMDE*
AM040/050KXMDG*


Installation of Air-conditioner

Examples of refrigerant pipe installation


* Using Y-joint

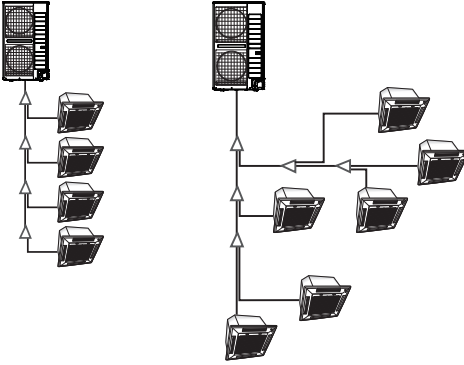


* Using Y-joint / EEV kit

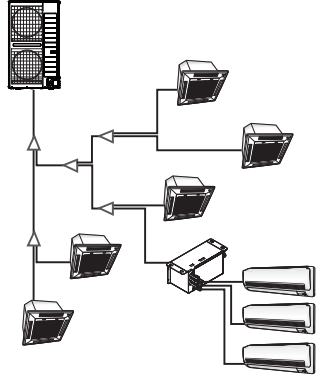

* Using distribution header

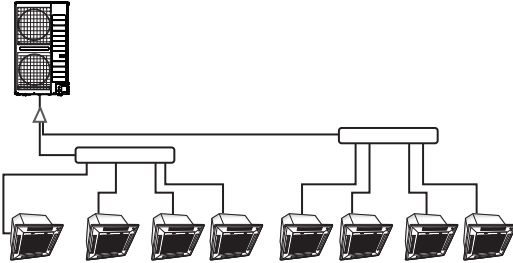

* Using distribution header / Y-joint

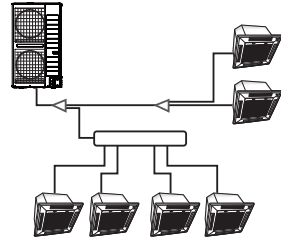


Allowable length of the refrigerant pipe and the installation examples

AM100/120/140KXMDG*


* Connection by Y-joint

Outdoor unit

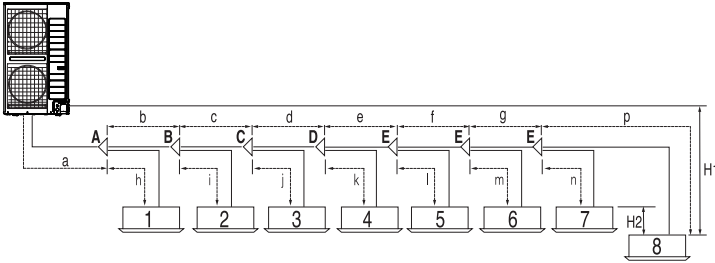

* Connection by Y-joint / EEV kit

Outdoor unit

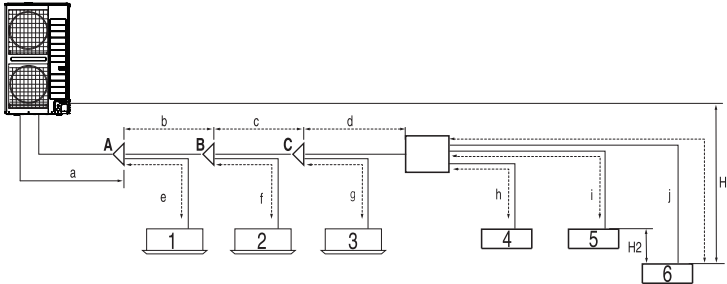

Classification		Y joint connection	Y-joint / EEV kit connection
Maximum allowable length of pipe	Outdoor unit ~ Indoor unit	Actual length	The distance between the outdoor unit and the farthest indoor unit $\leq 160\text{m}$ Ex) 8 indoor units $a+b+c+d+e+f+g+p \leq 160\text{m}$
		Equivalent length	The distance between an outdoor unit and the farthest indoor unit $\leq 185\text{m}$
		Main pipe length	The main pipe (a) from the the outdoor unit to the first Y joint $< 120\text{m}$
		Total length:	The sum of the total length of the pipes $< 300\text{m}$
Maximum allowable height	Outdoor unit ~ Indoor unit	Height	H1: The difference of height between an outdoor unit and indoor unit $< 50/40\text{m}$ ^{Note 1)}
		Height	H2: The difference of height between indoor units $\leq 50\text{m}$ But, when AM****NQDEH* is installed, H2 is 15 m or less.
Maximum allowable length after Y joint		Actual length	The distance between the first Y-joint and the farthest indoor unit $\leq 40\text{m}$ Ex) 8 indoor units $b+c+d+e+f+g+p \leq 40\text{m}$
			Allowable length between EEV kit and an indoor unit $\leq 20\text{m}$ Ex) : h, i, j $\leq 20\text{m}$

* When the equivalent length between an outdoor unit and the farthest indoor unit exceeds 90m, upgrade the low pressure pipe of the main pipe one step.


* Note 1) When indoor unit is located at higher level than outdoor unit, allowable height difference is 40m, but when the indoor unit is located at lower level than outdoor unit, allowable height difference is 50m.

Installation of Air-conditioner


EEV kit		Model name		Remarks	
EEV kit ~ Indoor unit	Actual pipe length	2 m	MEV-E245A	1 indoor	Apply to products without EEV (Wall mount & ceiling)
			MEV-E325A		
	20 m or less	2 indoor	MXD-E24K132A	3 indoor	
			MXD-E24K200A		
			MXD-E32K200A		
		3 indoor	MXD-E24K232A		
			MXD-E24K300A		
			MXD-E32K224A		
			MXD-E32K300A		

※ Please refer to the EEV Kit manual.

※ Connection by distribution header

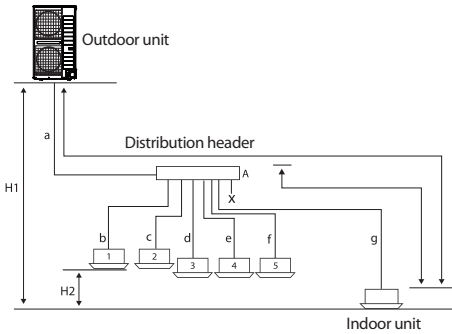

※ Connection by Y-joint/distribution header

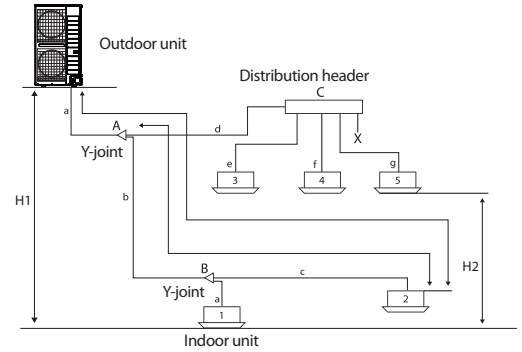

Classification		Distribution connection	Y-joint / distribution connection
Maximum allowable length of pipe	Outdoor unit ~ Indoor unit	Actual length	The distance between the outdoor unit and the farthest indoor unit $\leq 160\text{m}$ Ex) 8 indoor units $a+g \leq 160\text{m}$
		Equivalent length	The distance between outdoor unit and the farthest indoor unit $\leq 185\text{m}$
		Main pipe length	The main pipe (a) from the the outdoor unit to the first Y joint $< 120\text{m}$
		Total length:	The sum of the total length of the pipes $< 300\text{m}$
Maximum allowable height	Outdoor unit ~ Indoor unit	Height	H1: The height difference between an outdoor unit and the indoor unit $< 50/40\text{m}$ ^{Note 1)}
		Height	H2: The height difference between the indoor units $\leq 50\text{m}$ But, when AM****NQDEH* is installed, H2 is 15 m or less.
Maximum allowable length after Y joint		Actual length	The distance between the header joint and the indoor unit $\leq 40\text{m}$ Ex) $b, c \sim f, g \leq 40\text{m}$
			The distance between the first Y joint and the farthest indoor unit $\leq 40\text{m}$ Ex) 5 indoor units $b+c, d+g \leq 40\text{m}$


※ When the equivalent length between an outdoor unit and the farthest indoor unit exceeds 90m, upgrade the low pressure pipe of the main pipe one step.

※ Note 1) When indoor unit is located at higher level than outdoor unit, allowable height difference is 40m, but when the indoor unit is located at lower level than outdoor unit, allowable height difference is 50m.

AM030RXMDE*
AM040/050KXMDE*


※ Connection by Y-joint

Outdoor unit

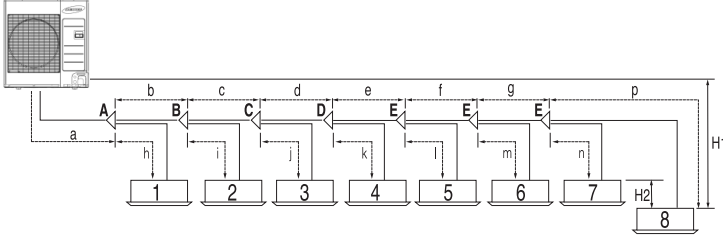

※ Connection by Y-joint / EEV kit

Outdoor unit

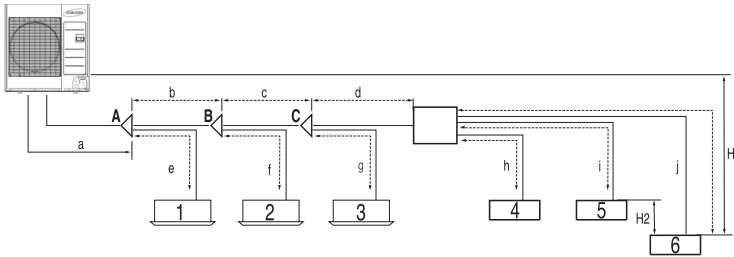

Classification			Y joint connection	Y-joint / EEV kit connection
Maximum allowable length of pipe	Outdoor unit ~ Indoor unit	Actual length	The distance between the outdoor unit and the farthest indoor unit $\leq 50\text{m}$ Ex) 8 indoor units $a+b+c+d+e+f+g+p \leq 50\text{m}$	Ex) 6 indoor units $a+b+c+d+j \leq 50\text{m}$
		Equivalent length	The distance between an outdoor unit and the farthest indoor unit $\leq 65\text{m}$	
		Main pipe length	The main pipe(a) from the the outdoor unit to the first Y joint $< 40\text{m}$	
		Total length:	The sum of the total length of the pipes $< 150\text{m}$	
Maximum allowable height	Outdoor unit ~ Indoor unit	Height	H1: Height difference between outdoor unit and indoor unit: not more than 30m when the outdoor unit is higher, or not more than 25m when the outdoor unit is lower.	
		Height	H2: Height difference between indoor unit is not more than 15m.	
Maximum allowable length after Y joint		Actual length	The distance between the first Y-joint and the farthest indoor unit $\leq 40\text{m}$ Ex) 8 indoor units $b+c+d+e+f+g+p \leq 40\text{m}$	Allowable length between EEV kit and an indoor unit $\leq 20\text{m}$ Ex) : h, i, j $\leq 20\text{m}$


※ When the equivalent length between an outdoor unit and the farthest indoor unit exceeds 90m, upgrade the low pressure pipe of the main pipe one step.

Installation of Air-conditioner


EEV kit		Model name		Remarks	
EEV kit ~ Indoor unit	Actual pipe length	2 m	MEV-E245A	1 indoor	Apply to products without EEV (Wall mount & ceiling)
			MEV-E325A		
	20 m or less		MXD-E24K132A	2 indoor	
			MXD-E24K200A		
			MXD-E32K200A		
			MXD-E24K232A	3 indoor	
			MXD-E24K300A		
			MXD-E32K224A		
		MXD-E32K300A			

* Please refer to the EEV Kit manual.

* Connection by distribution header

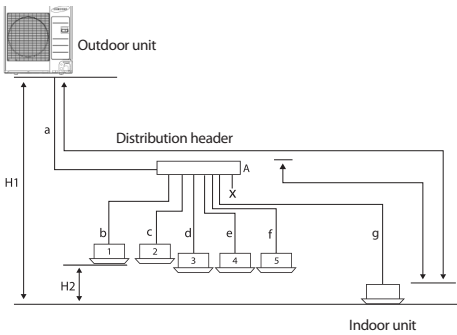

* Connection by Y-joint/distribution header

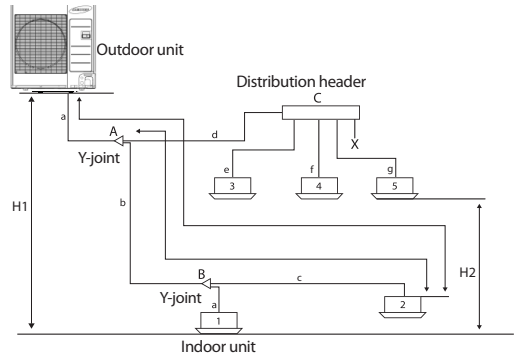


Classification		Distribution connection	Y-joint / distribution connection
Maximum allowable length of pipe	Outdoor unit ~ Indoor unit	Actual length	The distance between the outdoor unit and the farthest indoor unit $\leq 50\text{m}$ Ex) 8 indoor units $a+g \leq 50\text{m}$
		Equivalent length	The distance between outdoor unit and the farthest indoor unit $\leq 65\text{m}$
		Main pipe length	The main pipe(a) from the the outdoor unit to the first Y joint $< 40\text{m}$
		Total length:	The sum of the total length of the pipes $< 150\text{m}$
Maximum allowable height	Outdoor unit ~ Indoor unit	Height	H1: Height difference between outdoor unit and indoor unit: not more than 30m when the outdoor unit is higher, or not more than 25m when the outdoor unit is lower.
		Height	H2: Height difference between indoor unit is not more than 15m.
Maximum allowable length after Y joint	Actual length	The distance between the header joint and the indoor unit $\leq 40\text{m}$ Ex) b, c ~ f, g $\leq 40\text{m}$	The distance between the first Y joint and the farthest indoor unit $\leq 40\text{m}$ Ex) 5 indoor units $b+c, d+g \leq 40\text{m}$

* When the equivalent length between an outdoor unit and the farthest indoor unit exceeds 90m, upgrade the low pressure pipe of the main pipe one step.


Installation of refrigerant Y-joint

Install the Y-joint horizontally or vertically.

 
※ Install horizontally




※ Install vertically

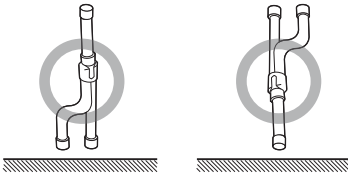

- ▶ When using A-J type of Y-joint, connect the Y-joint to the pipe with the provided reducer.
- ▶ When using K-Z type of Y-joint, connect the Y-joint to the pipe by cutting the inlet of the Y-joint or provided reducer properly.




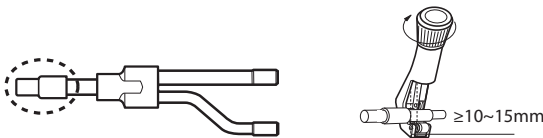


- Install the Y-joint within $\pm 15^\circ$ on the horizontal or on the vertical.
- Make sure that the pipe does not break at Y-joint and pipe connection.
- Keep a minimum straight line distance of 500mm or more before connecting Y-joint.

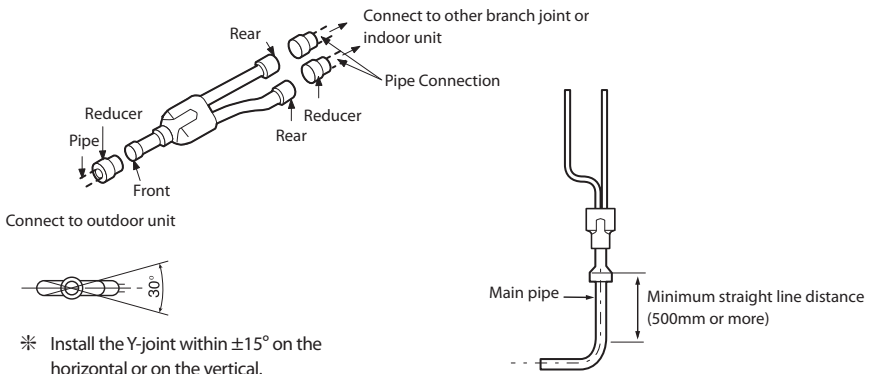

※ Install the Y-joint within $\pm 15^\circ$ on the horizontal or on the vertical.

Installation of Air-conditioner

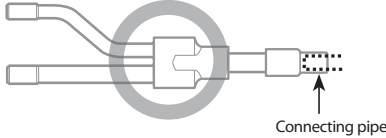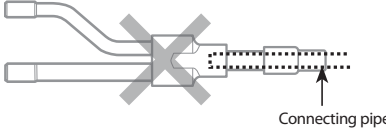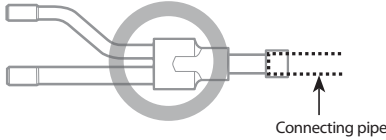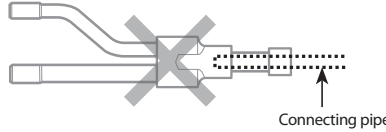	Correct use (The insertion depth of the connecting pipe)	Incorrect use (The insertion depth of the connecting pipe)
Basic specification	 <p>Connecting pipe</p>	 <p>Connecting pipe</p>
Position of cutting connection	 <p>Connecting pipe</p>	 <p>Connecting pipe</p>




Caution


• When inserting connecting pipe into Y-joint, please comply with the installation regulation.

Installation the distribution header

1) Select the reducer fitted on the diameter of the pipe.

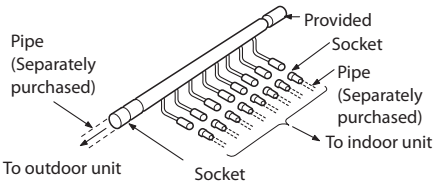


<Liquid side>

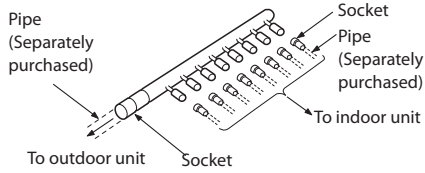


<Gas side>

2) If the number of connected indoor units is fewer than ports on the distribution header, block the unused ports with caps


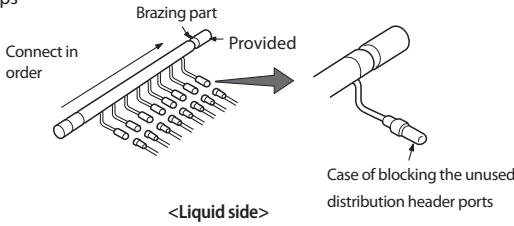


<Liquid side>

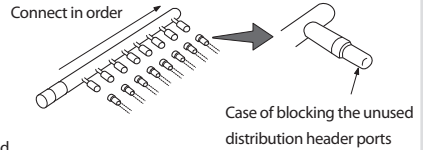

<Gas side>



 
- ▶ For A~J type distribution header: Connect the distribution header to the connection pipe with the provided reducer.
- ▶ For K-Z type distribution header: Cut the provided socket, according to the diameter of the connection pipe, before connecting it.

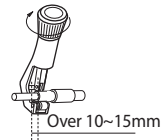

- Connect the indoor units in order, while respecting the direction of the arrow shown in the illustration.
- When indoor units are connected to same distribution head, indoor unit must be connected in order of their capacity, from largest to smallest.

3) Install the distribution header horizontally.

  - Install the distribution header horizontally so that its ports does not face down.

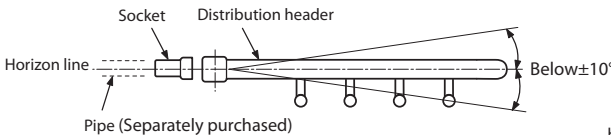

<Liquid side>

<Gas side>

Specification of the circuit breaker and power cable

DVM S ECO Series

Capacity (HP)	Model	MCA (A)	MFA (A)
10	AM100KXMDG*	21.5	30.0
12	AM120KXMDG*	23.5	30.0
14	AM140KXMDG*	32.0	40.0
4	AM040KXMDE*	24.0	32.0
5	AM050KXMDE*	27.0	40.0
3	AM030RXMDE*	16.5	25.0

* MCA: Minimum Circuit Ampere;

* MFA: Maximum Fuse Ampere

* Please refer to the MCA specification to selecte the line parameter.

* Please refer to the MFA specification to selecte the MCCB and ELB specification.

* Power Supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord. (Code designation IEC:60245 IEC 66 / CENELEC: H07RN-F)

- This device is intended for the connection to a power supply system with a maximum permissible system impedance shown in the table (on the left page) at the interface point (power service box) of the user's supply.
- The user must ensure that this device is connected only to a power supply system which fulfills the requirement above. If necessary, the user can ask the public power supply company for the system impedance at the interface point.
- This equipment complies with IEC 61000-3-12 provided that the short-circuit power S_{sc} is greater than or equal to $S_{sc}(*2)$ at the interface point between the user's supply and the public system. It is the responsibility of the installer or user of the equipment to ensure, by consultation with the distribution network operator if necessary, that the equipment is connected only to a supply with a short-circuit power S_{sc} greater than or equal to $S_{sc}(*2)$.
- [$S_{sc}(*2)$]

Capacity (HP)	Model	S_{sc} [MVA]
10	AM100KXMDG*	4.6
12	AM120KXMDG*	5.1
14	AM140KXMDG*	5.9
4	AM040KXMDE*	3.3
5	AM050KXMDE*	3.6
3	AM030RXMDE*	3.3




Caution for electrical work

Caution

- You must install ELCB or MCCB + ELB

- ELCB: Earth leakage breaker
- MCCB: Molded case circuit breaker
- ELB: Earth leakage breaker
- Do not operate the outdoor unit before completing the refrigerant pipe work.
- Do not disconnect or change the cable inside the product. It may cause damage to the product.
- Specification of the power cable is selected based on following installation condition; culvert installation/ ambient temperature 30 °C/ single multi conductor cables. If the condition is different from the ones stated, please consult an electrical installation expert and re-select the power cable.
 - If the length of power cable exceed 50m, re-select the power cable considering the voltage drop.
- Use a power cable made out of incombustible material for the insulator (inner cover) and the sheath (outer cover).
- Do not use the power cable with the core wire exposed due to insulator damage occurred during removal of the sheath. When the core wire is exposed, it may cause fire.
- When you install the power and communication cables, be careful not to touch on the refrigerant pipes. It can damage on the cables because of the high temperature of the non-insulated refrigerant pipes.

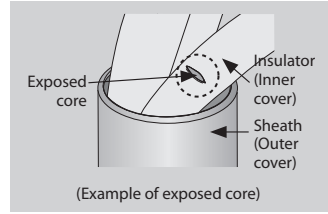

Specification of the protection tube

Name	Temper grade	Applicable conditions
Flexible PVC conduit	PVC	When the protection tube is installed indoor and not exposed to outside, because it is embedded in concrete structure
Class 1 flexible conduit	Galvanized steel sheet	When the protection tube is installed indoor but exposed to outside so there are risk of damage to the protection tube
Class 1 PVC coated flexible conduit	Galvanized steel sheet and Soft PVC compound	When the protection tube is installed outdoor and exposed to outside so there are risk of damage to the protection tube and extra waterproof is needed



Caution

Caution for perforating the knock-out hole

- Perforate a knock-out hole by punching it with a hammer.
- After perforating the knock-out hole, apply rust resisting paint around the hole.
- When you need to pass the cables through the knock-out hole, remove burrs on the hole and protection the cable with a protection tape or bushing etc.

Caution for installing communication cable



- When you connect the cable, it may sag and pressed by other parts. Therefore cables should be fixed to a clamp highlighted with a box on the illustration.

Wiring work

Power wiring Diagram

AM100/120/140KXMDG*

Supplying 3phase 4wire(380-415V~)

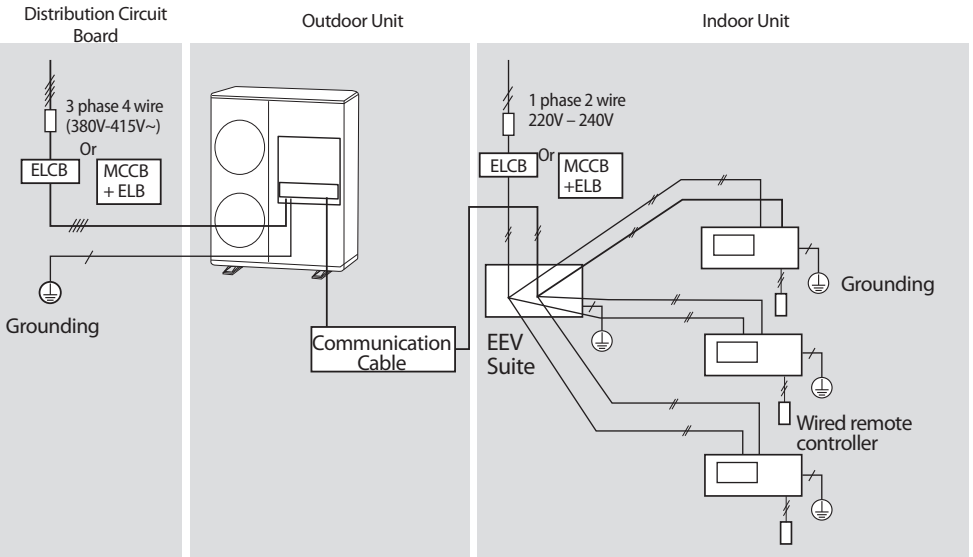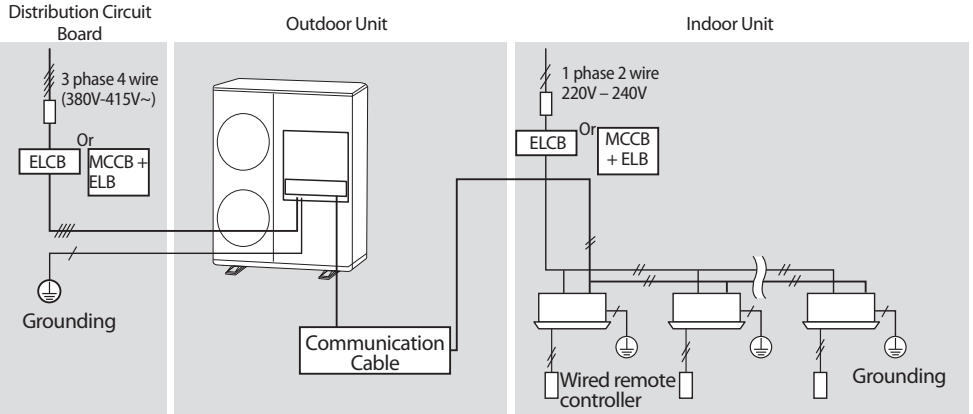


- ▶ Connect a power cable of the outdoor unit after checking that R-S-T-N (3 phase 4 wire) is properly connected. (If the 380-415 V power is supplied to the N phase, PCB and other electrical part will be damaged.)
 - ▶ Communication cable between indoor and outdoor units and communication cable between outdoor units has no polarity.
 - ▶ Arrange the cables with a cable tie.
- * ELCB and ELB must be installed since there is risk of electric shock or fire when they are not installed.

Supplying 1phase 2wire(220V~)

Distribution Circuit Board

Outdoor Unit


Indoor Unit

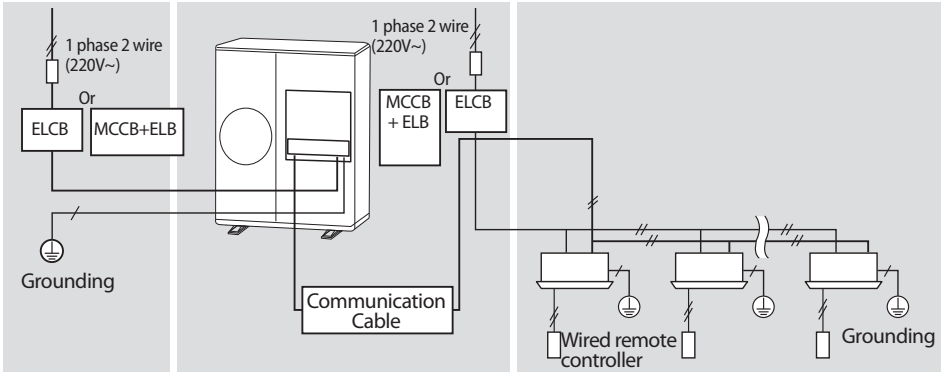

Distribution Circuit Board

Outdoor Unit

Indoor Unit

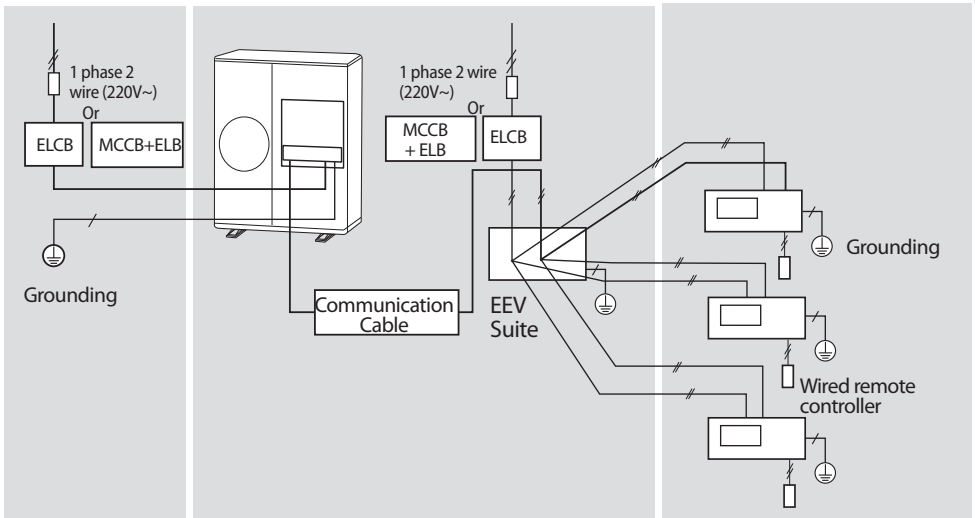


- ▶ Connect a power cable of the outdoor unit after checking that L-N (1 phase 2 wire) is properly connected.
- ▶ Communication cable between indoor and outdoor units and communication cable between outdoor units has no polarity.
- ▶ Arrange the cables with a cable tie.
- ※ ELCB and ELB must be installed since there is risk of electric shock or fire when they are not installed.

Wiring work

Selecting solderless ring terminal

- ▶ Select a solderless ring terminal for a power cable according to the nominal dimensions for cable.
- ▶ Apply insulation coating to the connection part of the solderless ring terminal and the power cable.
- ▶ The exposed part of ring terminal must be insulated with insulation bushing or tape in order to ensure that the crimping terminal is not loose after installation and that the clearance between exposed parts of neighboring terminals is at least more than 4mm.

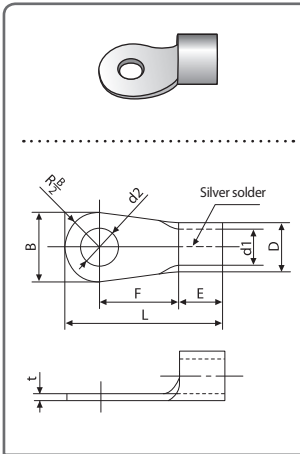

Nominal dimensions for cable (mm ²)	Nominal dimensions for screw	B		D		d1		E	F	L	d2		t
		Standard dimension	Allowance	Standard dimension	Allowance	Standard dimension	Allowance	Min.	Min.	Max.	Standard dimension	Allowance	Min.
1.5	M4	6.6	±0.2	3.4	+0.3 -0.2	1.7	±0.2	4.1	6	16	4.3	+0.2 0	0.7
	M4	8											
2.5	M4	6.6	±0.2	4.2	+0.3 -0.2	2.3	±0.2	6.0	6	17.5	4.3	+0.2 0	0.8
	M4	8.5											
6	M5	9.5	±0.2	5.6	+0.3 -0.2	3.4	±0.2	6.0	--	20	5.3	±0.4	0.9

Connecting the power terminal

- ▶ Connect the cables to the terminal board with solderless ring terminals.
- ▶ Properly connect the cables by using certified and rated cables and make sure to fix them properly so that external force is not applied to the terminal.
- ▶ Use a driver and wrench that can apply the rated torque when tightening the screws on the terminal board.
- ▶ Tighten the terminal screws by complying rated torque value. If the terminal is loose, fire can occur due to arc heat generation and if the terminal is too tight, terminal board could get damaged.


Tightening torque for terminal		
M5	2.39~2.92 (N·m)	3 phase(380V-415V~) / (220V-240V) power line L/N 220-240V Power line
	24.4~29.8(kgf·cm)	
M4	1.18~1.47 (N·m)	F1/F2 communication line, L/N 220-240V Power line
	12.0~15.0(kgf·cm)	




Caution

- When removing the outer sheath of the power supply cable, be careful not to scratch the inner sheath of the cable.
- Make sure that more than 20mm of the outer sheath of the indoor unit power and communication cable are inside the electrical component box.
- Install the communication cable separately from power cable and other communication cables.

Examples of how to use the cable stripper

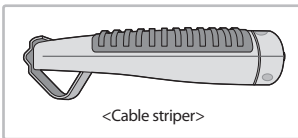


1. Adjust the blade position by coin. (Controller is at the bottom side of the tool.) Fix the blade position according to the outer sheath thickness of the power cable.
2. Fix the power cable and tool by using the hook at the top side of the tool.
3. Cut out the outer sheath of the power cable by revolving the tool in the direction of the arrow, two or three times.
4. At this situation, cut out the outer sheath of the power cable by moving the tool toward the direction of the arrow.
5. Slightly bend the wire and pull out the cut part of the outer sheath.

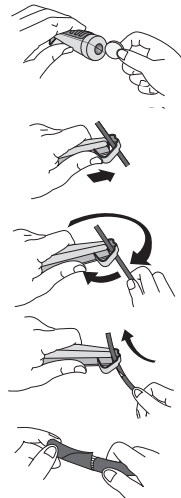

Wiring work

Fixing the power cable

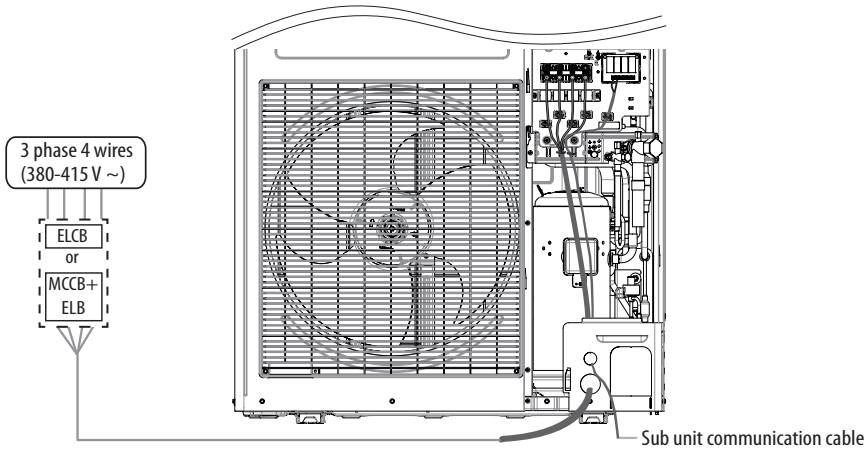


Caution

- Do not let the power cable come into contact with the pipes inside the outdoor unit. If the power supply cable touches the pipes, the vibration of the compressor is transferred to the pipes and can damage the power supply cables or pipes, creating the danger of fire or explosion.
- Make sure that the place where the sheath of power supply cable is removed is inside the power supply box. If it is impossible, you should connect the protection tube for power cable to the power supply box.
- After arranging the power cable into the power supply box, tighten the cover.

Connect the ring terminal of 3 phase cable

1. Cut the power cable to an appropriate length and connect it with the solderless terminal.
2. After connecting the power cable to the terminal as seen in the illustration, fix it with cable tie.
3. Fix the housing, which has an insulator to the terminal board.

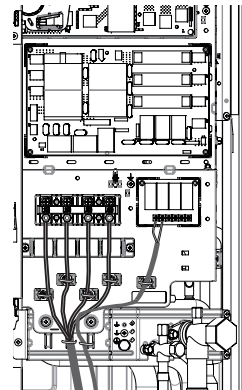

Installing grounding wire

- ▶ Grounding must be done by a qualified installer for you safety.
- ▶ Use the grouding wire by referring to the specification of the electric cable of the outdoor unit.

1) Grounding the power cable

- ▶ The standard of grounding may vary according to the rated voltage and installation place of the air conditioner.
- ▶ Ground the power cable according to the following.

Power condition Installation place	Voltage to ground is lower than 150V	Voltage to ground is over 150V
High humidity	Must perform the grounding work 3. ^{Note 1)} (Including the case where earth leakage breaker is installed)	
Average humidity	Perform grounding work 3. ^{Note 1)}	Must perform the grounding work 3. ^{Note 1)} (Including the case where earth leakage breaker is installed)
Low humidity	Perform grounding work 3, if possible, for your safety. ^{Note 2)}	

Note 1) Grounding Work 3


- Grounding work must be done by an expert (with qualification).
- Check if the grounding resistance is lower than 100Ω. When installing a earth leakage breaker (that can cut the electric circuit within 0.5 second in case of a short circuit), allowable grounding resistance should be 30~500Ω.

Note 2) Perform ground work in a dry place

- The grounding resistance should be lower than 100Ω. Even in worst case, grounding resistance should be lower than 250Ω.

2) Performing the grounding work

- ▶ Use a rated grounding cable by referring to the specification of the electric cable for the outdoor unit.

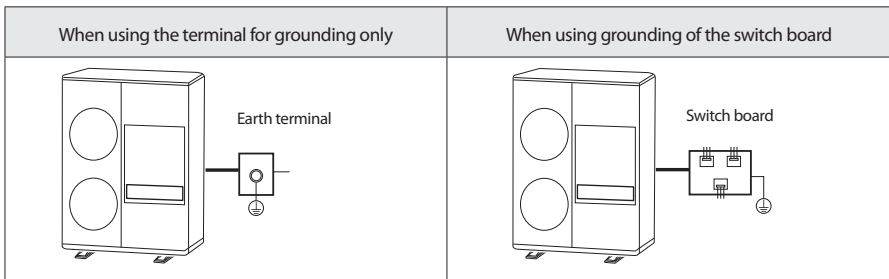


Wiring work

If the power distribution circuit does not have a grounding or the grounding does not comply with specifications, a ground rod must be installed.

The corresponding accessories are not supplied with the air conditioner.

- 1) Select a grounding rod that complies with the specifications given in the illustration.

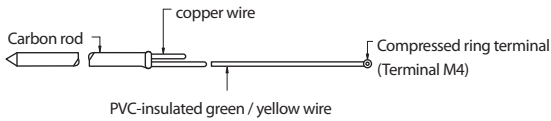

- 2) Select a proper place for the grounding rod installation. The proper installing position for ground rod.
 - In damp hard soil rather than loose sandy or gravel soil that has a higher grounding resistance.
 - Away from underground structures or facilities, such as gas pipes, water pipes, telephone lines and underground cables.
 - At least two meters away from lightning (as in a storm) conductor.



Caution

- The grounding wire for the telephone line cannot be used to ground the air conditioner.

- 3) Install a green / yellow grounding wire:
 - Please refer to the "Wiring work" for the specification of grounding wire.
 - When the grounding wire is too short, extend the grounding wire but bind the connection part with insulation tape. Extend the ground lead if too short and use the heat-insulated tape to secure the connection part. (Do not bury the connection)
 - Secure the grounding wire in position with staples.



Caution

- When the grounding rod is installed in a place where many people pass by, you must fix it firmly.

- 4) Carefully check the installation, by measuring the grounding resistance with a ground resistance tester.
 - If the resistance is above required level, drive the grounding rod deeper into the ground or increase the number of grounding rods.
- 5) Connect the grounding wire to the electrical component box inside of the outdoor unit.

Air tightness test and Vacuum drying

Air Tightness

- ▶ Use tools for R-410A to prevent the inflow of foreign substances and resist against the internal pressure.
- ▶ Do not remove the core of filling port.
- ▶ Use Nitrogen gas for air tightness test as shown in the illustration.

Apply pressure to the liquid side pipe and gas side pipe (when installing outdoor units in module) with Nitrogen gas at 4.1MPa.

If you apply pressure at more than 4.1MPa, pipes may get damaged. Apply pressure with pressure regulator and pay attention to the pressure of the nitrogen.

Keep it for minimum 24 hours to check if pressure drops.


After applying Nitrogen gas, check there's any change of pressure, using a pressure regulator.

If the pressure drops, check for gas leakage.

If the pressure is changed, apply soap water to check for leakage and check the pressure of the nitrogen gas again.

Maintain 1.0MPa of the pressure before performing vacuum drying and check for further gas leakage.

After checking the first gas leakage, maintain 1.0MPa to check for further gas leakage.

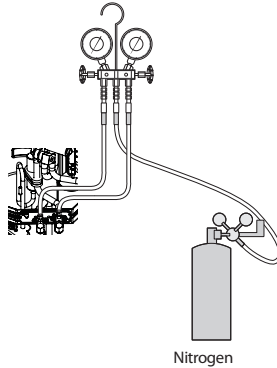

Nitrogen




- Caution**
- Perform a Nitrogen gas leak test with the service valve of the outdoor unit closed.
 - When charging the nitrogen gas, charge it from the both (high-low pressure) sides.
 - If the pipe is filled in a short time with a highly excessive pressure of Nitrogen gas, the pipes may get damaged. Make sure to use a regulator to prevent the high pressure Nitrogen gas, over 4.1MPa, from entering into the pipe.

Air tightness test and Vacuum drying

Vacuum drying pipes and indoor units

- ▶ Use tools for R-410A to prevent the inflow of foreign substances and resist against the internal pressure.
- ▶ Use vacuum pump that allows vacuuming under -100.7kPa (5 Torr).
- ▶ Use the vacuum pump with the check valve to prevent pump oil from flowing backward while the vacuum pump is stopped.
- ▶ Completely close the liquid-gas side service valve of the outdoor unit.

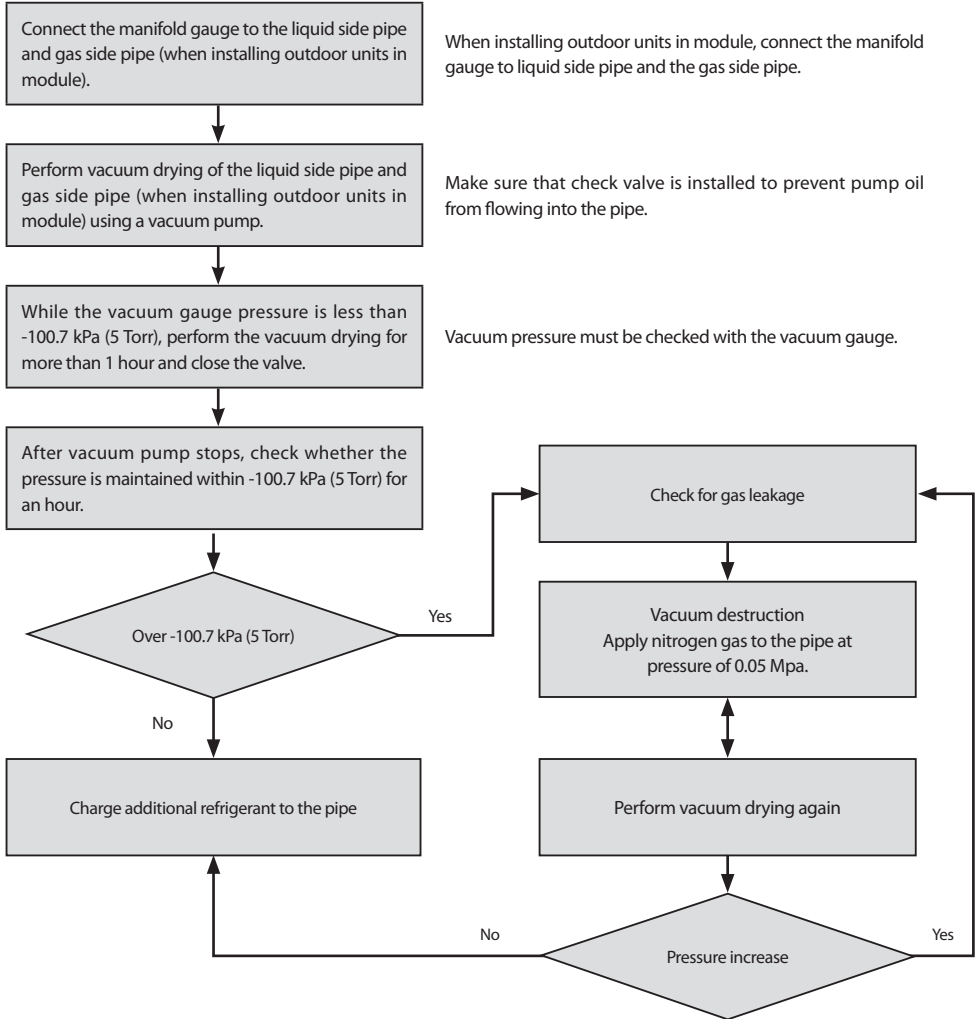

- * If the pressure rises in an hour, either water is remaining inside the pipe or there is a leakage.
- * When the ambient temperature of vacuuming pipe is low (less than $0\text{ }^{\circ}\text{C}$), moisture might remain within the pipe. Therefore, pay special attention to the pipe sealing in the winter.

Charging refrigerant

Important information regulation regarding the refrigerant used

This product contains fluorinated greenhouse gases. Do not vent gases into the atmosphere.



- Inform user if the system contains 5 tCO₂e or more of fluorinated greenhouse gases. In this case, it must be checked for leakage at least once every 12 months, according to regulation No. 517/2014. This activity must be covered by qualified personnel only. In the case of the situation above, the installer (or authorized person with responsibility for final check) must provide a maintenance book, with all the information recorded, according to REGULATION (EU) No. 517/2014 OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 16 April 2014 on fluorinated greenhouse gases.

Please fill in the following with indelible ink on the refrigerant charge label supplied with this product and on this manual.

- ▶ ① the factory refrigerant charge of the product.
 - ▶ ② the additional refrigerant amount charged in the field.
 - ▶ ①+② the total refrigerant charge.
- * The refrigerant charge label supplied with the product.

Unit	Kg	tCO ₂ e
①, a		
②, b		
①+②, c		

Refrigerant type	GWP value
R-410A	2088

- GWP=Global Warming Potential
- Calculating tCO₂e : kg x GWP / 1000

- a Factory refrigerant charge of the product: see unit name plate.
- b Additional refrigerant amount charged in the field. (Refer to the above information for the quantity of refrigerant replenishment.)
- c Total refrigerant charge.
- d Refrigerant cylinder and manifold for charging.




- The filled-out label must be adhered in the proximity of the product charging port.
Caution (ex. onto the inside of the stop valve cover.)

Charging refrigerant

Charging refrigerant

- ▶ The R410A refrigerant is blended refrigerant. Add only liquid refrigerant.
- ▶ Measure the quantity of the refrigerant according to the method to calculate total amount of additional refrigerant.
- ▶ Add quantity of the refrigerant using a scale.
- ▶ Open the manifold gauge valve connected to the liquid side service valve and add the liquid refrigerant.
- ▶ If you cannot add the whole quantity of the refrigerant while the outdoor unit is stopped, open the gas side and liquid side service valve.
- ▶ Then, add remaining refrigerant by pressing the refrigerant charging button of the outdoor PCB.
- ▶ When using the function of the refrigerant charging in cooling mode, please use the gas side manifold gauge.
- ▶ When using the function of the refrigerant charging in heating mode, please connect manifold gauge to the charging port for heating and use it.

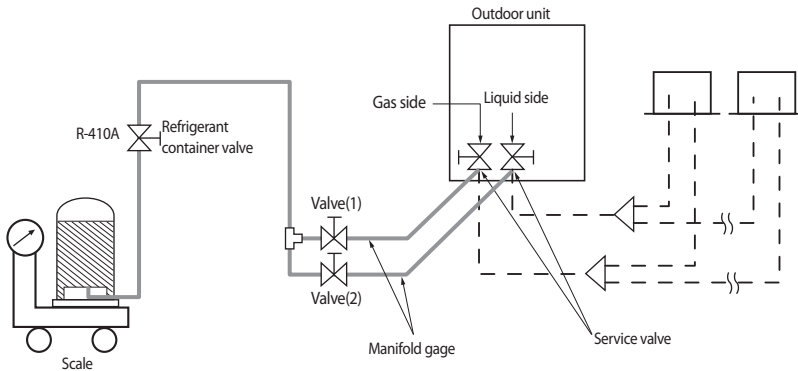

- Open the gas side and liquid side service valve completely after charging the refrigerant. (If you operate the air conditioner with the service valve closed, the important parts may be damaged.)

Caution. Put on safety equipment when charging refrigerant.

- Do not charge the refrigerant when you adjust or control other product such as indoor units or EEV kits.
- When the ambient temperature is low in winter time, do not heat the refrigerant container to speed up the charging process. There is risk of explosion.
- Beware for possibility of refrigerant leakage when you connect the manifold gauge to the charging port for heating.
- Close the valve of the refrigerant container immediately after charging the refrigerant. If not, there might be a change in entire amount of refrigerant.

Pipe insulation

Insulating the refrigerant pipes and branch joints

- ▶ Check for gas leakage before completing (the hose and pipe insulation) and if there is no sign of leakage, make sure to insulate the pipes and hoses.
- ▶ Use EPDM material insulator that meets the following conditions.

Test item	Unit	Standard
Density	g/cm ³	0.048~0.096
Dimensional change rate by heat	%	Below -5
Absorption rate	g/cm ³	Below 0.005
Thermal conduction rate	W/m·K	Below 0.037
Moisture transpiration factor	ng/(m ² ·s·Pa)	Below 15
Moisture transpiration grade	g/(m ² ·24h)	Below 15
Formaldehyde dispersion	mg/L	There should be none
Oxygen rate	%	Over 25

Selecting the refrigerant pipe insulator

- ▶ Insulate the gas pipe and liquid pipe by referring to the thickness of insulator for each pipe size.
- ▶ The standard condition is : temperature at 30°C, humidity less than 85%. If case if the humidity is higher, you must increase the size by one grade as stated in below table.

Pipe	Diameter of refrigerant pipe (mm)	Insulator (cooling & heating)		Remarks
		General [30°C,85%]	High humidity [30°C, over 85%]	
		EPDM, NBR		
Liquid pipe	Ø6.35~Ø9.52	9 mm	←	Heating resisting temperature over 120°C
	Ø12.7~Ø50.80	13 mm	←	
Gas pipe	Ø6.35	13 mm	19 mm	
	Ø9.52~Ø25.40		25 mm	
	Ø28.58~Ø44.45	25 mm	32 mm	
	Ø50.80		38 mm	

* When installing insulation in places and conditions below, use the same insulation that is used for high humidity conditions.

<Geological condition>

- High humidity places such as shoreline, hot spring, near lake or river, and ridge (when the part of the building is covered by earth and sand.)

<Operation purpose condition>

- Restaurant ceiling, sauna, swimming pool etc.



<Building construction condition>

- The ceiling frequently exposed to moisture and cooling is not covered. (e.g. The pipe installed at a corridor of a dormitory and studio or near an exit that opens and closes frequently.)
- The place where the pipe is installed is highly humid due to the lack of ventilation system.

Pipe insulation


Insulate the refrigerant pipe

- ▶ Make sure to insulate the refrigerant pipe, branch joint, distribution header, and the connection part of the pipes.
- ▶ If you insulate the pipes, condensed water will not fall from the pipes.
- ▶ Check if there are any cracks on the insulation at the bent part of the pipe.

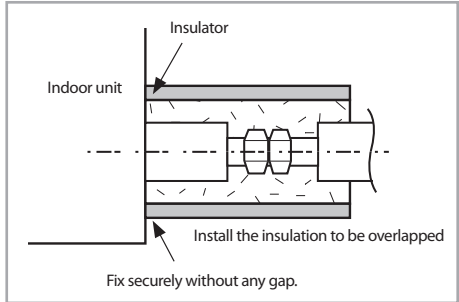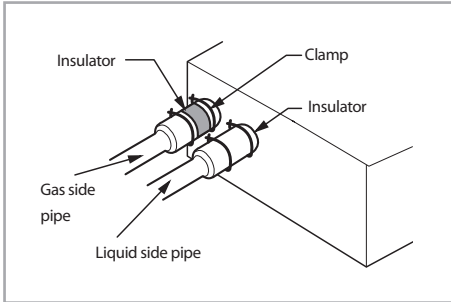


Insulating pipes

- The insulation of the gas and liquid pipes can be in contact with each other but they should not press excessively against each other.
- When the gas side and liquid side pipes are contacting each other, increase the thickness of the insulation by one grade.

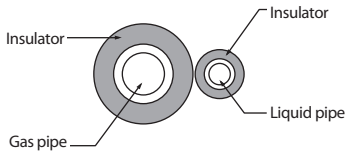


Insulating pipes connected behind the EEV kit

- When installing the gas side and liquid side pipes, leave at least 10mm of space.
- When the gas side and liquid side pipes are contacting each other, increase the thickness of the insulation by one grade.

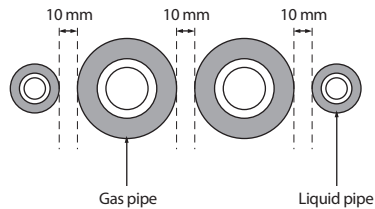




Caution

- Install the insulation without any gaps or cracks and use adhesive on the connection part of it to prevent moisture from entering.
- Bind the refrigerant pipe with insulation tape if it is exposed to outside sunlight. (When binding the pipe with finishing tape, be careful not to reduce the thickness of the insulation.)
- Install the refrigerant pipe respecting that the insulation does not get thinner on the bent part or hanger of pipe.
- When the thickness of insulation is reduced, reinforce the reduced thickness with additional insulation.

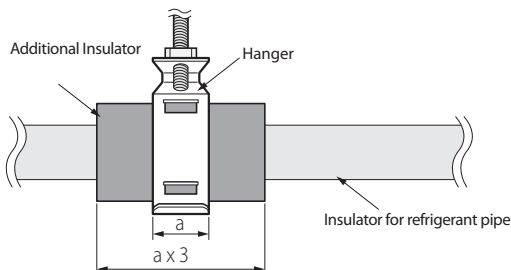


Insulate the distribution header

- ▶ Fix the distribution header with a cable tie and cover the connected part.
- ▶ Insulate the distribution header and the welded part and wrap the connected part with an adhesive insulation tape to prevent dew formation.

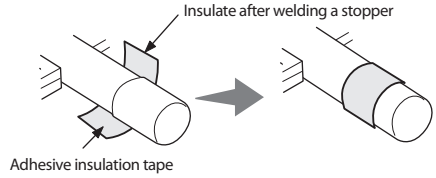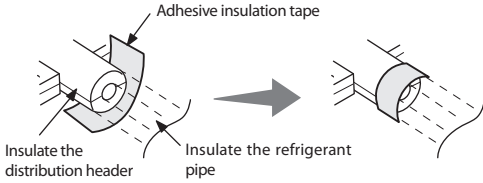
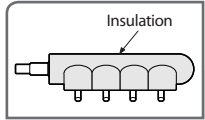


 - ▶ Fix the distribution header with a hanger after insulating it.



Insulating the branchjoint

- ▶ Tightly attach the insulator, provided with the branch joint, to the separately purchased insulator. Wrap the connected part with an insulator (separately purchased item) that has thickness of at least 10mm.
- ▶ Use an insulator that resist heat up to 120°C. Wrap the branch joint with an insulation that has thickness of at least 10mm.

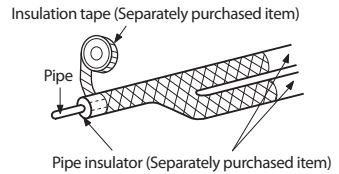
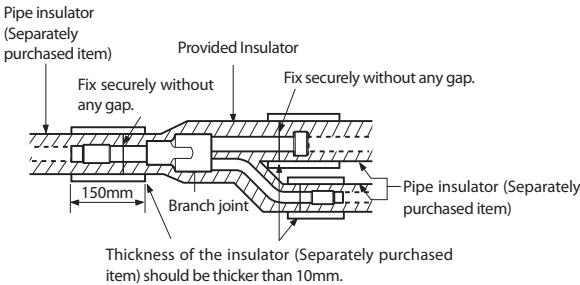


- ※ Attach the adhesive insulation tape to the pipe, as shown in the picture, after insulating the pipe.

Pipe insulation

Insulating the pipe located inside of the outdoor unit

- ▶ With a pipe insulator, insulate the pipe up to whole service valve located inside of the outdoor unit.
- ▶ Seal the gap between the outdoor unit pipe and the insulator. Rainwater and dewdrops may soak through the gap between the pipe and the insulation of the outdoor unit installed on the outside.
- ▶ Separate the cover of the pipe and close it after insulation work. Only remove a knock-out hole cover where the pipe will be installed. If the knock-out hole is open unnecessarily, it must be closed. If not, small animals such as squirrels and rats may get into the unit through the hole and the unit may be damaged.

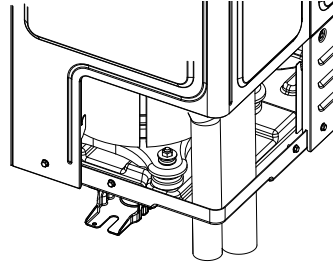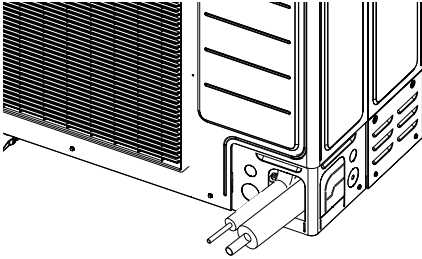

Basic segment display


Step	Display content	Display			
		SEG 1	SEG 2	SEG 3	SEG 4
At initial power input	Checking segment display	SEG 1	SEG 2	SEG 3	SEG 4
		"g"	"g"	"g"	"g"
While setting communication between indoor and outdoor unit (Addressing)	Number of connected indoor units	SEG 1	SEG 2	SEG 3	SEG 4
		"A"	"d"	Number of communicated units * Refer to "View Mode" for communication address	
After communication setting (usual occasion)	Transmit/Reception address	SEG 1	SEG 2	SEG 3	SEG 4
		I/U: "A"	I/U: "0"	Reception address (in decimal number)	

* I/U: Indoor unit


Setting outdoor unit option switch and key function

AM100/120/140KXMDG*

Setting outdoor unit key function

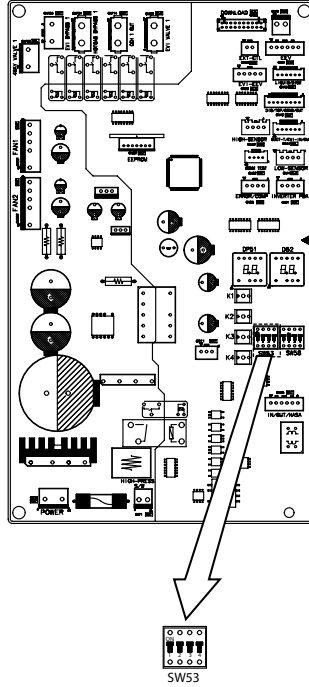

Switch	Setting	Function	Remarks	
SW53	K5	On	—	Not applicable
		Off	—	
	K6	On	Enable maximum capacity restriction for cooling operation	Restrict excessive capacity increase when operating indoor units with small capacity
		Off	Disable maximum capacity restriction for cooling operation	—
	K7	On	—	Not applicable
		Off	—	
	K8	On	—	Not applicable
		Off	—	

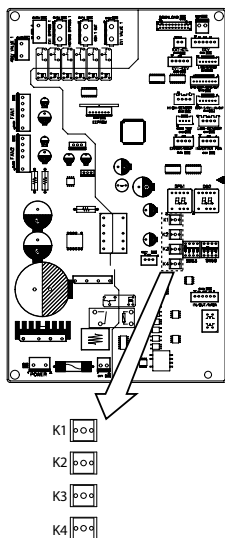

Setting total number of installed indoor units using K1~K4

1. In the initial, display will show the following.



2. Press and hold simultaneously K1, K2 to enter the setting mode.

If you enter the setting mode, display will show the following.



3. If you want to set manually, press K2 or K4 shortly.

- K2 : 10 digit / K4 : 1 digit

Example) total number of installed indoor unit : 24

press K2 2 times, press K4 4 times.

then, display will show



4. If you want to set automatically, press and hold K4 for 2 seconds.

Display will show total number of installed indoor units.


But you have to be careful, it is displayed only for the indoor unit in which a communication and power lines are connected normally.

5. If you want to finish setting mode, press and hold K2.

And then Main PCB will be reset after display blinking in 3 seconds.

※ In case of inputting in the wrong way while you inputting, press "K3" (Main PCB reset) and progress again from the first step.

Setting outdoor unit option switch and key function

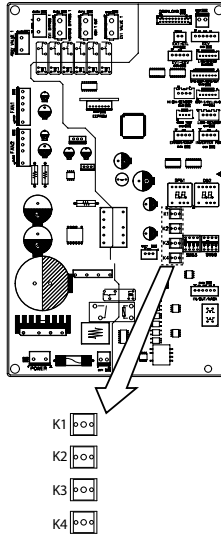

■ Installing and setting the option with tact switch and explanation of the functions

■ Setting the option

(1) Press and hold K2 to enter the option setting. (Only available when the operation is stopped)

- If you enter the option setting, display will show the following.



- Seg 1 and Seg 2 will display the number for selected option.

- Seg 3 and Seg 4 will display the number for set value of the selected option.

(2) If you have entered option setting, you can shortly press the K1 switch to adjust the value of the Seg 1, Seg 2 and select the desired option. (Refer to pages 54~55 for the Seg number of the function for each option)



(3) If you have selected desired option, you can shortly press the K2 switch to adjust the value of the Seg 3, Seg 4 and change the function for the selected option. (Refer to pages 54~55 for the Seg number of the function for each option)



(4) After selecting the function for options, press and hold the K2 switch for 2 seconds. Edited value of the option will be saved when entire segments blinks and tracking mode begins.



Caution

• Edited option will not be saved if you do not end the option setting as explained in above instruction.

- * While you are setting the option, you may press and hold the K1 button to reset the value to previous setting.
- * If you want to restore the setting to factory default, press and hold the K4 button while you are in the option setting mode.
 - If you press and hold the K4 button, setting will be restored to factory default but it doesn't mean that restored setting is saved. Press and hold the K2 button. When the segments shows that tracking mode is in progress, setting will be saved.

Optional item	Input unit	SEG1	SEG2	SEG3	SEG4	Function of the option	Remarks
Emergency operation for compressor malfunction	Main	0	0	0	0	Disabled (Factory Default)	
				0	1	Not applicable	
				0	2	Not applicable	
Cooling capacity correction	Main	0	1	0	0	7-9 (Factory default)	Targeted evaporation temperature [°C]. (When low temperature value is set, discharged air temperature of the indoor unit will decrease)
				0	1	5-7	
				0	2	9-11	
				0	3	10-12	
				0	4	11-13	
				0	5	12-14	
Capacity correction for heating	Main	0	2	0	0	3.0 (Factory default)	Targeted high pressure [MPa]. (When low pressure value is set, discharged air temperature of the indoor unit will decrease)
				0	1	2.5	
				0	2	2.6	
				0	3	2.7	
				0	4	2.8	
				0	5	2.9	
				0	6	3.1	
				0	7	3.2	
Current restriction rate	Main	0	3	0	0	100% (Factory default)	When restriction option is set, cooling and heating performance may decrease.
				0	1	95 %	
				0	2	90 %	
				0	3	85 %	
				0	4	80 %	
				0	5	75 %	
				0	6	70 %	
				0	7	65 %	
				0	8	60 %	
				0	9	55 %	
				1	0	50 %	
1	1	No restriction					


Setting outdoor unit option switch and key function

Optional item	Input unit	SEG1	SEG2	SEG3	SEG4	Function of the option	Remarks
Oil collection interval	Main	0	4	0	0	Factory default	
				0	1	Shorten the interval by 1/2	
Temperature to trigger defrost operation	Main	0	5	0	0	Factory default	
				0	1	Apply setting when the product is being installed in humid area such as near river or lake	
Fan speed correction for outdoor unit	Main	0	6	0	0	Factory default	Increase the outdoor unit's fan speed to maximum value
				0	1	Increase fan speed	
Silent mode for night-time	Main	0	7	0	0	Disabled (Factory default)	Enables the silent mode for night-time in cooling mode. (It operates automatically depending on the temperature.)
				0	1	LEVEL 1	
				0	2	LEVEL 2	
				0	3	LEVEL 3	
High-head condition setting	Main	0	8	0	0	Disabled (Factory default)	When outdoor unit is located 40~80m above the indoor unit
				0	1	Level 1 of height difference type 1 (indoor unit is lower than outdoor unit)	
				0	2	Not applicable	
				0	3	Height difference type 2 (outdoor unit is lower than indoor unit)	
Long-piping condition setting (Setting is unnecessary if high-head condition is set)	Main	0	9	0	0	Disabled (Factory Default)	When equivalent length of farthest indoor unit from the outdoor unit is over 100m
				0	1	LEVEL 1	
				0	2	Not applicable	
Energy saving setting	Main	1	0	0	0	Disabled (Factory default)	Energy saving mode triggers when the room temperature reaches desired temperature while operating in heating mode.
				0	1	Enabled	
Not applicable	Main	1	1	0	0	Not applicable	
				0	1	Not applicable	
Not applicable	Main	1	2	0	0	Not applicable	
				0	1	Not applicable	
Channel address	Main	1	3	A	U	Automatic setting (factory default)	Address for classifying the product from upper level controller(DMS,S-NET 3,etc.)
				0 - 15		Manual setting for channel 0 - 15	
Snow accumulation prevention control	Main	1	4	0	0	Enabled	During snow accumulation , the fan may spin even when the unit is not in operation
				0	1	Disabled (Factory default)	
Silent mode for external contact	Main	1	5	0	0	-	If the external contact interface module (MIM-B14) is used, entering the silent mode is available with contact signal in cooling and heating mode.
				0	1	LEVEL 1	
				0	2	LEVEL 2	
				0	3	LEVEL 3	

Optional item	Input unit	SEG1	SEG2	SEG3	SEG4	Function of the option	Remarks
Unused option	Main	1	6~9	0	0	Unused option	Unused option by this model
Unused option	Main	2	0~1	0	0	Unused option	Unused option by this model
Emergency operation for indoor unit communication error	Main	2	2	0	0	Disabled (Factory default)	When set, emergency operation is possible even if an indoor communication error occurs.
				0	1	Indoor high humidity condition (operating for up to 12hours)	
				0	2	Indoor low humidity condition (operating for up to 24hours)	
Unused option	Main	2	3~4	0	0	Unused option	Unused option by this model
Aux Heater's interworking control for cycle heating (cooling priority control)	Main	2	5	0	0	Not applied	When using the Aux Heating, set the delay time for Switching from cooling to heating. ※ Unused by the cooling only models
				0	1	Switching delay to heating (30 mins.)	
				0	2	Switching delay to heating (15 mins.)	
				0	3	Switching delay to heating (10 mins.)	
				0	4	Switching delay to heating (5 mins.)	
				0	5	Not switching delay	
Auto Change Over	Main	2	6	0	0	Not applied	When Thermo off for all running indoor units, change the operation mode. ※ Unused by the cooling only models
				0	1	Applied	

Setting outdoor unit option switch and key function

Setting key operation and checking the view mode with tact switch

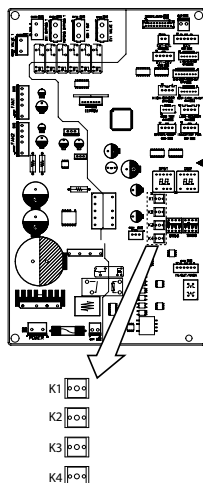

K1 Control	KEY operation	Display on segment
Press and hold 1 time	Auto trial operation	"K" "K" "BLANK" "BLANK"

K1(Number of press)	KEY operation	Display on segment
1 time	Refrigerant charging in Heating mode ^(Note 1)	"K" "1" "BLANK" "BLANK"
2 times	Trial operation in Heating mode ^(Note 1)	"K" "2" "BLANK" "BLANK"
3 times	Pump out in Heating mode ^(Note 1)	"K" "3" "BLANK" "1"
4 times	Vacuumig	"K" "4" "BLANK" "1"
5 times	End Key operation	—

K2(Number of press)	KEY operation	Display on segment
1 time	Refrigerant charging in Cooling mode	"K" "5" "BLANK" "BLANK"
2 times	Trial operation in Cooling mode	"K" "6" "BLANK" "BLANK"
3 times	Pump down in Cooling mode	"K" "7" "BLANK" "BLANK"
4 times	Automatic setting of operation mode (Cooling/Heating) for trial operation	"K" "8" "BLANK" "BLANK"
5 times	Checking the amount of refrigerant	"K" "9" "X" "X" (Display of last two digits may differ depending on the progress)
6 times	Discharge mode of DC link voltage	"K" "A" "BLANK" "BLANK"
7 times	Forced defrost operation ^(Note 1)	"K" "B" "BLANK" "BLANK"
8 times	Forced oil collection	"K" "C" "BLANK" "BLANK"
9 times	Inverter compressor check	"K" "D" "BLANK" "BLANK"
10 times	Fan 1 check	"K" "E" "BLANK" "BLANK"
11 times	Fan 2 check	"K" "F" "BLANK" "BLANK"
12 times	End Key operation	-

(Note 1) Not available on AM***FXM**C Series

- * Even when the outdoor unit power is off, it is dangerous when you come in contact with inverter PCB since it is charged with high DC voltage.
- * When replacing/repairing the PCB, cut-off the power and wait until the DC voltage is discharged before replacing/repairing them. (Wait for more than 15 minutes to allow it to discharge naturally.)
- * When there were error, 'Discharge mode of DC link voltage' may not have been effective. Especially if error E464 has been occurred, power element might be damaged by fire and therefore, do not use the 'Discharge mode of DC link voltage'.
- * During "Discharge mode of DC link voltage", voltage of INV will be displayed.

K3(Number of press)	KEY operation	Display on segment
1 time	Initialize (Reset) setting	Same as initial state


K4 (Press and hold for 2 seconds to enter the setting) → K4 press (Number of press)	Displayed content	Display on segment		
		Page 1	Page 2	
1 time	Main version	MAIN	Ver. (ex) 1412	
2 times	Inverter version	INV1	Ver. (ex) 1412	
3 times	Fan 1 version	FAN 1	Ver. (ex) 1412	
4 times	Fan 2 version	FAN 2	Ver. (ex) 1412	
5 times	EEP version	EEP	Ver. (ex) 1412	
6 times	Assigned address of the units	AUTO	SEG 1,2	SEG 3,4
			Indoor unit: "A", "0"	Address (ex) 07)
7 times	Manually assigned address of the units	MANU	SEG 1,2	SEG 3,4
			Indoor unit: "A", "0"	Address (ex) 15)

K4(Number of press)	KEY operation	Display on segment	
		SEG 1	SEG2, 3, 4
1 time	Outdoor unit model	1	AM080FXM* → 0, 0, 8
2 times	Order frequency of compressor	2	120 Hz → 1,2,0
3 times	High pressure	3	1.52 MPa → 1, 5, 2
4 times	Low pressure	4	0.43 MPa → 0, 4, 3
5 times	Discharge temperature of compressor	5	87 °C → 0, 8, 7
6 times	IPM temperature of compressor	6	87 °C → 0, 8, 7
7 times	CT sensor value of compressor	7	2 A → 0, 2, 0
8 times	Suction temperature	8	-42 °C → -, 4, 2
9 times	COND OUT temperature	9	-42 °C → -, 4, 2
10 times	Liquid pipe temperature	A	-42 °C → -, 4, 2
11 times	TOP temperature of compressor	B	87 °C → 0, 8, 7
12 times	Outdoor temperature	C	-42 °C → -, 4, 2
13 times	EVI inlet temperature	D	-42 °C → -, 4, 2
14 times	EVI outlet temperature	E	-42 °C → -, 4, 2
15 times	Main EEV step	F	2000 steps → 2, 0, 0
16 times	EVI EEV step	G	300 steps → 3, 0, 0
17 times	Fan step	H	13 steps → 0, 1, 3
18 times	Current frequency of compressor	I	120 Hz → 1,2,0
19 times	Master indoor unit address (Master indoor unit can be selected by wired remote-controller)	J	Master indoor unit not selected → BLANK, N, D If indoor unit No.1 is selected as the master unit → 0, 0, 1

Setting outdoor unit option switch and key function

AM030RXMDE* , AM040/050KXMDE*

PBA outline

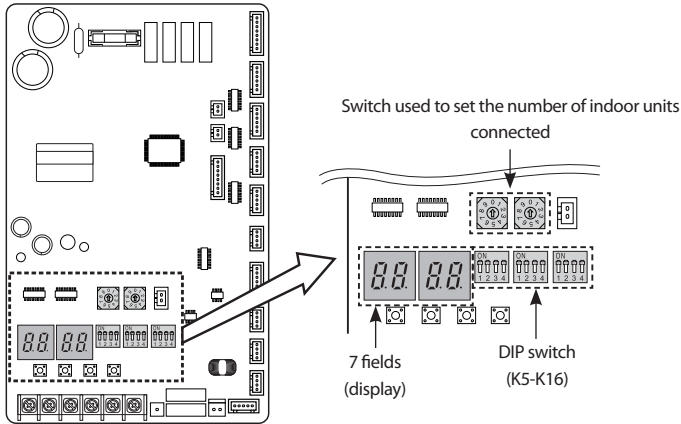

Set up the number of indoor units to be connected.

For example: When three indoor units are to be connected, it is necessary to set "SW02" to "3".

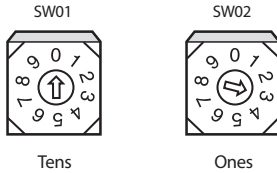


Table of DIP switch setup specifications

Touch switch	Operation of heating key	Operation of cooling key	Reset	Check mode
	K1	K2	K3	K4
DIP switch	Manual silent option	Prevent buildup of snow	Cooling target evaporation temperature	Cooling target evaporation temperature
	K5	K6	K7	K8
	Silent mode	Silent mode	Heating capacity offset	Heating capacity offset
	K9	K10	K11	K12
	Total current option	Total current option	Defrosting offset	Defrosting offset
K13	K14	K15	K16	

Switch functions

Touch switch	Number pressing	Item	SEG1	SEG2	SEG3	SEG4	Remark
K1	Depress	Check operation	1	1			
	1	Fill heating refrigerant	1	1			
	2	Trial run of heating operation	1	2			
	3	Refrigerant discharge under heating mode	1	3			
	4	Vacuum	1	4			
	5	Return to common mode					
K2	1	Fill refrigerant	1	5			
	2	Trial run of refrigeration	1	6			
	3	Refrigerant recovery under cooling mode	1	7			
	4	Sense the amount of refrigerant	1	8			
	5	Inverter check	1	9			
	6	Return to common mode					
K3		Reset					

* If refrigerant is filled or recovered in high temperature ambience, E407 (high temperature protection control) fault or high voltage protection switch may be activated.

Setting outdoor unit option switch and key function

► K4 input displayed sequence

(1) Current frequency → (2) Low voltage → (3) Outdoor ambient temperature → (4) Exhaust temperature → (5) OLP temperature → (6) Condenser outlet temperature → (7) Liquid tube temperature → (8) High voltage → (9) Fan speed → (10) EVI EEV → (11) Primary EEV → (12) Current operating electric current → (13) Number of indoor units connected → (14) Number of indoor units operated → (15) Total capacity of indoor units → (16) Master indoor unit address


K4 (Depress the key to access setup) → Press K4 (number of pressing)	Item displayed	Field displayed		
0	Version of Main Micom	Version (such as 0912)		
1	Version of Inverter Micom	Version (such as 0912)		
2	Version of EEPROM	Version (such as 0912)		
3	Automatic allocation of indoor unit addresses	SEG1	SEG2	SEG3, 4
		Indoor: "A"	Indoor: "0"	Address (such as 05)
4	Manual allocation of indoor unit addresses	SEG1	SEG2	SEG3, 4
		Indoor: "A"	Indoor: "0"	Address (such as 01)

► K5: Automatic/manual silent mode operation setting

Switch	Function (Night silence operation control)
K5	
ON	Automatic silent mode operation
OFF	Manual (external switch signal) silent mode operation

• Set to manual silent mode operation

Set K5 DIP switch to "OFF". Connect the port module (model: MIM-B14) to the "External Con" port of the primary PBA.

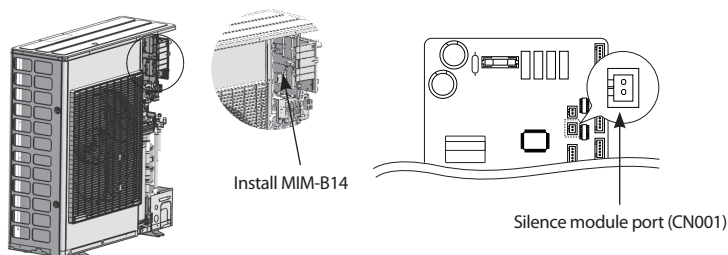

► K6: Options for snow buildup prevention controller

Switch	Function (snow buildup prevention control)
K6	
ON	Snow buildup prevention control disabled (default)
OFF	Snow buildup prevention control enabled

* When snow buildup prevention control is set to "enabled", the outdoor fan will run for one minute every thirty minutes under five Celsius degrees, with ceased cooling/heating operation.

► K7, K8: Table of correcting the modified refrigerating capacity

Switch		Function (Target evaporation temperature)
K7	K8	
ON	ON	7 – 9°C (Default factory setting)
ON	OFF	5 - 7°C
OFF	ON	9 - 11°C
OFF	OFF	10 - 12°C

- ※ Performance improvement is achieved by referring to the performance data of the longer tubing for refrigeration, as described in the technical data manual.
- ※ If performance is improved personally, the lower temperature of air from indoor unit may make you feel uncomfortable. This is only an option of performance correction during installation of the longer tubing.
- K9, K10: Silent mode option. This option can control FAM RPM in order to achieve silent operation of outdoor unit through the night.

Switch		Function (Silent mode)
K9	K10	
ON	ON	Silent mode disabled
ON	OFF	Step 1
OFF	ON	Step 2
OFF	OFF	Step 3

- ※ Enables the silent mode for night-time in cooling mode.(It operates automatically depending on the temperature.)
- ※ However, if the external contact interface module (MIM-B14) is used, entering the silent mode is available with contact signal in cooling and heating mode.
- K11, K12: Table of heating capacity correction

Switch		Function
K11	K12	
ON	ON	Default
ON	OFF	Default – 196 kPa
OFF	ON	Default – 98 kPa
OFF	OFF	Default + 98 kPa

- ※ When current high voltage is higher than target high voltage, the heating operation frequency increases; when current high voltage is lower than target high voltage, frequency drop could result. When target high voltage is higher, exhaust temperature of indoor unit increases. However, energy consumption also increases.
- ※ We recommend you keeping factory default settings. If you want to reduce energy consumption or feel dissatisfied with the heating performance, you may control its operation according to surrounding environment. When reducing target high voltage, you may reduce energy consumption and noise, but indoor air outlet temperature also drops.

Setting outdoor unit option switch and key function

► K13, K14: Table of limited current modification options

Switch		Function			
K13	K14	3 HP	4 HP	5 HP	6 HP
ON	ON	Default	Default	Default	Default
ON	OFF	Default – 2(A)	Default – 4(A)	Default – 2(A)	Default – 2(A)
OFF	ON	Default – 4(A)	Default – 6(A)	Default – 4(A)	Default – 6(A)
OFF	OFF	Default – 6(A)	Default – 8(A)	Default – 6(A)	Default – 10(A)

Category	Model	Default
Ø1	4HP	AM040KXMDEH*
	5HP	AM050KXMDEH*
	3HP	AM030RXMDEH*
		24.00 A
		27.00 A
		16.50 A

► K15, K16: Defrosting options : Used to control access conditions of defrosting mode

Switch		Function
K15	K16	
ON	ON	MID
ON	ON	LOW1
OFF	OFF	LOW2

- * When temperature difference between outdoor ambience and outdoor heat exchanger is higher than certain criteria, the defrosting mode will be activated.
- * MID is factory default. When option controller is used to change the function to LOW, defrosting activation temperature will drop. When defrosting activation temperature drops, the length of operating time will grow. However, this indicates that the operating length of time will increase when the heating capacity is low. This option is chosen at where humidity is high and defrosting mode is frequently activated.
- * Keeping factory default settings is recommended.


Things to check after completing the installation

1. Before supplying the power, use DC 500 V insulation resistance tester to measure the power (3 phase: R, S, T/ 1 phase: L, N) terminal and the outdoor unit grounding.
 - Measurement should be over $30M\Omega$.
2. Before supplying the power, use a voltmeter and phase tester to check the voltage and the phase.
 - R, S, T, N terminal: check if the voltage is within 380-415 V between wires (R-S, S-T, T-R) and 200-240 V between phases (R-N, S-N, T-N) before turning on the switch.
 - L, N terminal: Voltage 220-240V



Caution

- Never measure the communication terminal since communication circuit may get damaged.
- Check for short-circuit of the communication terminal with a general circuit tester.

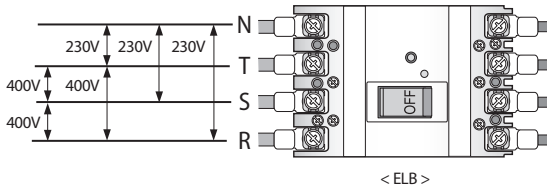

3. Check if the R-410A indoor units are connected.
4. When N phase is not correctly connected to R, S and T phase, over-voltage protection control will be in effect and it will cut-off the power of the PCB. Check the power cable connection of the N phase if the PCB is not turned on.
5. Check the following after the installation is completed.

Things to check after completing the installation

Installation work	Outdoor unit	<ul style="list-style-type: none"> • Have you checked the external surface and the inside of the outdoor unit? • Is there any possibility of short-circuit caused by the heat of an outdoor unit? • Is the place well-ventilated and ensures space for service? • Is the outdoor unit fixed securely to withstand any external force?
	Indoor unit	<ul style="list-style-type: none"> • Have you checked the external surface and the inside of the indoor unit? • Is there enough space for service? • Have you checked if the center of the indoor unit is ensured and it is installed horizontally?
Refrigerant pipe work		<ul style="list-style-type: none"> • Have you selected correct pipes? • Are the liquid and gas valve open? • Is the total number of connected indoor units within the allowable range? • Are the length and the height difference between the refrigerant pipes within the allowable range? • Are the branch joints properly installed? • Did you check the connection of liquid and gas pipes? • Have you selected correct insulator for pipes and insulated them correctly? • Did you insulate the pipes and connection part correctly? • Is the quantity of the additional refrigerant correctly weighed in? (You must record the amount of additional refrigerant on the service record paper placed inside of the outdoor unit.)
Drain pipe work		<ul style="list-style-type: none"> • Have you checked if the drain pipes of the indoor and outdoor unit are connected together? • Have you completed the drain test? • Is the drain pipe properly insulated?
Electrical wiring work		<ul style="list-style-type: none"> • Are the power cable and communication cable tightened firmly on the terminal board within the range of rated tightening torque? • Have you checked for cross-connection of the power and communication cables? • Have you performed the earthing work 3 to the outdoor unit? • Did you make sure to use 2-core cable (not multi-core cable) for the communication cable? • Is the length of the wire within allowed range? • Is the wiring route correct?
Setting address		<ul style="list-style-type: none"> • Did you set the address of the indoor and outdoor units properly? • Did you set the address of the indoor and outdoor units properly? (When using multiple remote controllers)
Option		<ul style="list-style-type: none"> • If there is a possibility of the outdoor unit from vibrating, check whether the anti-vibration frame is correctly installed.

Inspection & trial operation



Precautions before test operation

Caution

- When the outdoor temperature is low, turn on the main power 6 hours before beginning the operation.
- If you start the operation immediately after turning on the main power, it may cause serious damage to the part within the product.
- Do not touch the refrigerant pipe during or right after the operation.
 - Refrigerant pipe may be hot or cold during or right after the operation depending on the status of the refrigerant which flows through the refrigerant pipe, compressor and other parts of the refrigerant cycle.
- Do not operate the product with its panel or protection nets off.
 - There is risk of personal injury from the parts that rotates, heated or with the high voltage.
- Do not turn off the main power immediately after stopping the operation.
 - Wait for at least 5 minutes before turning off the main power. If not, water leakage or other problems may occur.

Checklist before auto trial operation

1. Check the power cable and communication cable of the indoor and outdoor unit.
2. Supply power to the outdoor unit 6 hours (AM100/120/140KXMDG*) / 3 hours (AM040/050KXMDE*) before trial operation to pre-heat the crank case heater.
3. Before supplying the power, use a voltmeter and phase tester to check the voltage and the phase.
 - R, S, T, N terminal: check if the voltage is within 380 -415 V between wires (R-S, S-T, T-R) and 200-240 V between phases (R-N, S-N, T-N).
 - L,N terminal: 220-240V between power lines
4. When the power is supplied, outdoor unit will execute tracking to check the indoor unit connection and other optional functions.
5. Write down the installation report on the service history report paper attached on the front part of the control box.




Caution

- Supply power to the outdoor unit 6 hours (AM100/120/140KXMDG*) / 3 hours (AM040/050KXMDE*) before auto trial operation to pre-heat the crank case heater.

6. Guaranteed range of auto trial operation

For precise judgment, you must perform auto trial operation in below indoor/outdoor temperature condition.

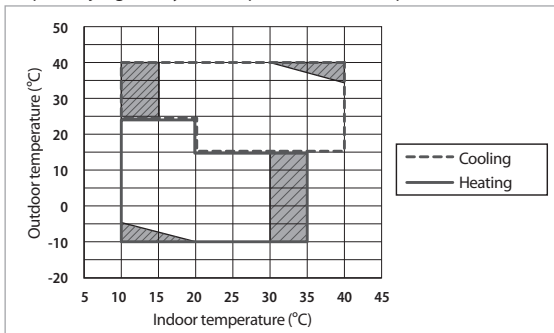

- In Auto trial operation, product will automatically select either cooling or heating mode and operate in selected mode.
- AM***FXM**C (Cooling Only) models operate only cooling mode in Auto trial operation. (Cooling only models don't operate Auto trial operation in case of outdoor temperature below -5°C or indoor temperature below 5°C)
- In the temperature range marked with slashed pattern, system protection control may trigger during operation.(If the system protection control is enabled, it can be hard to get the precise judgment after the auto trial operation.)
- When the temperature is outside of guaranteed range, accuracy of judgment on auto trial operation may decrease near boarder line area.

Inspection & trial operation

Auto trial operation


1. If the Auto Trial Operation is not completed, normal operation will be prohibited.
 - When the auto trial operation is not completed, UP (UnPrepared) will appear on the segment after the communication check and restrict compressor from operating. (UP Mode will be cleared automatically when auto trial mode is completed.)
 - Auto trial operation may take 20 minutes to maximum 2 hours depending on the operation status.
 - During auto trial operation, noise can be generated due to vavle inspection. (Check the product if abnormal noise occurs continuously)
2. When error occurs during auto trial operation, check the error code and take appropriate measures.
 - Refer to next page when E503 error occurs.
 - Refer to service manual if you need inspection or when other errors occur.
3. When auto trial operation ends, use S-NET pro 2 or S-CHECKER to issue a result report.
 - Refer to service manual for further actions if you have any items with "inspection required" sign on the result report.
 - After taking appropriate measure for the items with "inspection required" sign, run the auto trial operation again.
4. Check the following items by running trial operation (cooling/heating).
 - Check if cooling/heating operation performs normally.
 - Individual indoor unit control: Check for air flow direction and fan speed.
 - Check for abnormal operation noise from the indoor and outdoor unit.
 - Check for proper draining from the indoor unit during cooling operation.
 - Use S-NET pro 2 to check the detail operation status.
5. Explain to the user how to use the air conditioner according to the user's manual.
6. Hand over the installation manual to the customer so they can keep it with them.



Caution

- Make sure to close the outdoor unit cabinet during operation. If you operate the unit with the front cabinet open, it may cause damage to the product.

Measure to take when E503 error occurs

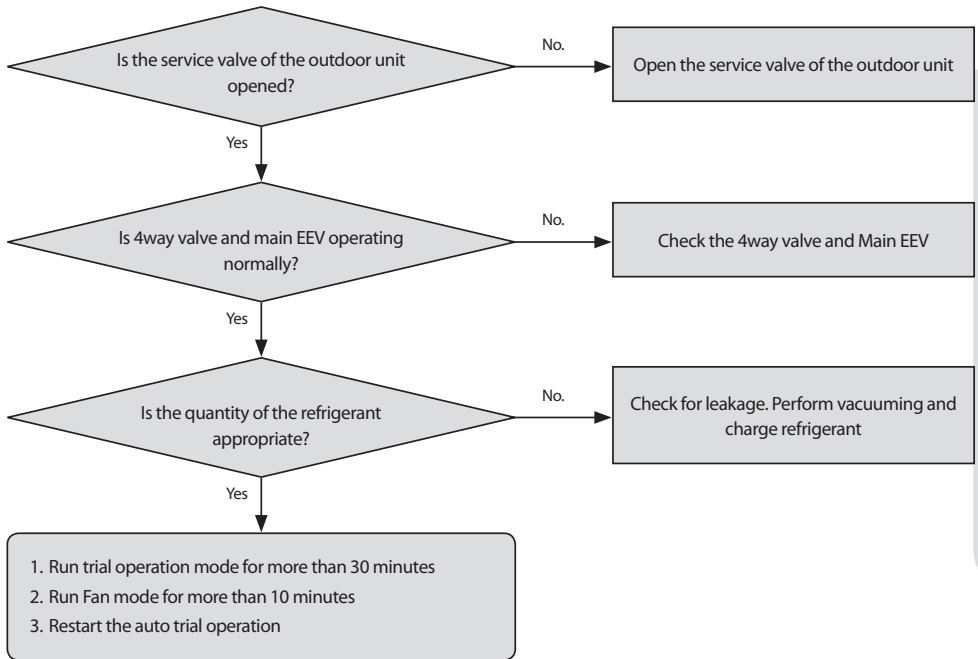

※ Symptoms for abnormal operation of the 4way valve

- Refrigerant noise is increased while compressor operates and suction temperature remains over 20°C compared to low pressure's saturation temperature.
- Temperature of Eva. in/out remains below 0 °C during heating operation.

※ Symptoms for abnormal operation of the Main EEV

- Error on controlling degree of superheat of compressor inlet during heating operation.
 - : If there's operation error while the EEV is fully opened, suction superheat cannot be secured (below 0 °C) and discharge temperature of the compressor will be low. (DSH is below 10°C)
 - : If there's operation error while the EEV is fully closed, low pressure will decrease and suction superheat will increase excessively.




Caution

- If the service valve need to be detected, auto detection mode will end. Check both gas pipe and liquid pipe service valves when detecting service valve.
- When 4way valve, Main EEV detection is needed, run heating trial operation for more than 1 hour and analyze the data to check for a problem.
- If there's frost formed in outdoor unit or the outdoor unit is operating in defrost operation, it may be hard to detect problem normally. In this case, run heating trial operation for more than 1 hour.
- If the operation range is not within guaranteed range, error may occur even though the product is normal.

Automatic refrigerant amount detection function

This function detects amount of refrigerant in the system through refrigerant amount detection operation.

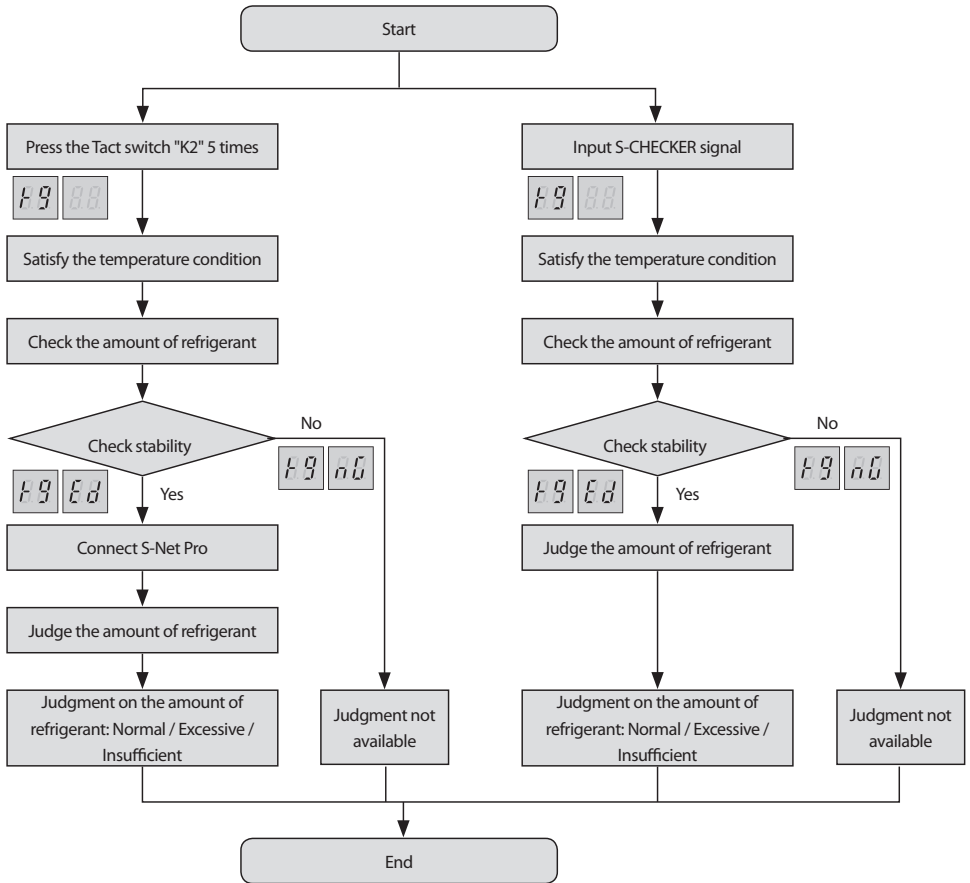



Caution

- If the temperature is out of the guaranteed range below, exact result will not be obtained.
 - Indoor: 20~32 °C
 - Outdoor: 5~43 °C
- If the operation cycle is not stable, the operation of refrigerant amount check may be forcibly finished.
- Accuracy of the result may decrease if the product has not been operated for a long period of time or heat mode has been operated before running the function of refrigerant amount check. Therefore, use the function of refrigerant amount check after operating the product in cool mode for at least 30 minutes.
- Product may trigger system protection operation depending on the installation environment. In this case, the result of refrigerant amount check may not be accurate.

Actions to take for the check result

- Excessive amount of refrigerant
 - Discharge 5% of total amount of refrigerant and restart the refrigerant amount check.
- Insufficient amount of refrigerant
 - Add 5% of the total amount of refrigerant and restart the refrigerant amount check.
- Insufficient degree of supercooling
 - Add 10 % of the total amount of refrigerant and restart the refrigerant amount check.
- Judgment not available
 - Check if the function of refrigerant amount check is executed within the guaranteed temperature range. Run trial operation to check if there are other problems on the system.

Model specification (Dimension and weight)

Dimension and weight			
Type	Model	Net dimension (WxDxH) (mm)	Net weight (kg)
Outdoor unit	AM100KXMDGH/EU	940 x 460 x 1630	145
	AM120KXMDGH/EU	940 x 460 x 1630	155
	AM140KXMDGH/EU	940 x 460 x 1630	162
	AM040KXMDEH/EU	940 x 330 x 998	79
	AM050KXMDEH/EU	940 x 330 x 998	83.5
	AM030RXMDEH/EU	940 x 330 x 998	79

SAMSUNG

Samsung, PO Box 12987, Blackrock, Co. Dublin. IE
or Euro QA Lab. Saxony Way, Yateley, Hampshire GU46 6GG, UK

DB68-05700A-10





DVM S ECO:

AM**XMDG Series**

AM**XMDE Series**

Air Conditioner

Installation manual

imagine the possibilities

Thank you for purchasing this Samsung product.

SAMSUNG