





Leading Innovation >>>

AIR TO WATER HEAT PUMP Installation manual



Hydro Unit

Model name:

HWS-803XWHM3-E

HWS-803XWHT6-E

HWS-803XWHD6-E


HWS-803XWHT9-E

HWS-1403XWHM3-E

HWS-1403XWHT6-E


HWS-1403XWHD6-E


HWS-1403XWHT9-E

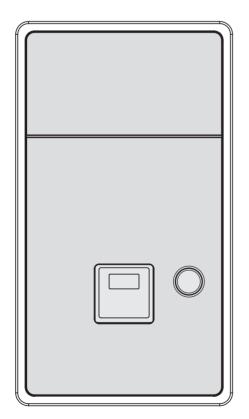


Installation manual Hydro Unit (Air to Water Heat Pump)

English

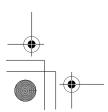

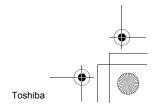



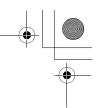

Please read this Installation Manual carefully before installing the Air to Water Heat Pump.


- This Manual describes the installation method of the hydro unit.
- For installation of the outdoor unit, follow the Installation Manual attached to the outdoor unit.


ADOPTION OF NEW REFRIGERANT

This Air to Water Heat Pump is a new type which adopts a new refrigerant HFC (R410A) instead of the conventional refrigerant R22 in order to prevent destruction of the ozone layer.


Contents

1	GENERAL INFORMATION	. 3
2	ACCESSORY PARTS	. 4
3	PREPARATIONS FOR INSTALLATION	. 5
4	PRECAUTIONS FOR SAFETY	. 6
5	EXAMPLE OF HYDRO UNIT INSTALLATION	. 8
6	MAIN COMPONENTS OF HYDRO UNIT	10
7	HYDRO UNIT INSTALLATION	12
8	START UP AND CONFIGURATION	30
9	TEST RUN	39
10	MAINTENANCE	39
11	SENSOR TEMPERATURE MONITORING FUNCTION	40
12	TROUBLESHOOTING	41

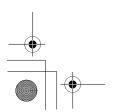

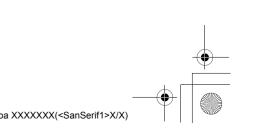



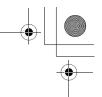

Installation Manual Hydro Unit

GENERAL INFORMATION

■ System Combination

	Outdoor Unit									
Hydro Unit	HWS- 803H-E	HWS- 1103H-E	HWS- 1403H-E	HWS- 1103H8-E	HWS- 1403H8-E	HWS- 1603H8-E	HWS- 1103H8R-E	HWS- 1403H8R-E	HWS- 1603H8R-E	Backup heater
HWS-803XWHM3-E	0	-	-	-	-	-	-	-	-	~, 3kW
HWS-803XWHT6-E	0	-	-	-	-	-	-	-	_	3N ~, 6kW
HWS-803XWHD6-E	0	-	-	-	-	-	-	-	-	3~, 6kW
HWS-803XWHT9-E	0	-	-		-	-	-	-	-	3N~, 9kW
HWS-1403XWHM3-E	-	0	0	0	0	0	0	0	0	~, 3kW
HWS-1403XWHT6-E	-	0	0	0	0	0	0	0	0	3N~, 6kW
HWS-1403XWHD6-E	-	0	0	-	-	-	-	-	-	3~, 6kW
HWS-1403XWHT9-E	-	0	0	0	0	0	0	0	0	3N~, 9kW
	220-230V model			;	3 phase model			se with Cord I	Heater	

■ General Specifications

Outdoor Unit


Single Phase model


	Outdoor unit		HWS-803H-E	HWS-1103H-E	HWS-1403H-E		
Power supply			220-230V ~ 50Hz				
Туре				INVERTER			
Function				Heating & Cooling			
	Capacity	(kW)	8.0	11.2	14.0		
Heating	Input	(kW)	1.82	2.35	3.11		
	COP	(W/W)	4.40	4.77	4.50		
	Capacity	(kW)	6.0	10.0	11.0		
Cooling	Input	(kW)	2.13	3.52	4.08		
	EER	(W/W)	2.82	2.84	2.70		
Refrigerant			R410A				
Dimension	HxWxD	(mm)	890x900x320 1,340x900x320				

3 Phase model

							with Cord heater		
Outdoor unit			HWS- 1103H8-E	HWS- 1403H8-E	HWS- 1603H8-E	HWS- 1103H8R-E	HWS- 1403H8R-E	HWS- 1603H8R-E	
Power supply					380-400V	3N~ 50Hz			
Туре					INVE	RTER			
Function					Heating	& Cooling			
	Capacity	(kW)	11.2	14.0	16.0	11.2	14.0	16.0	
Heating	Input	(kW)	2.39	3.21	3.72	2.39	3.21	3.72	
	COP		4.69	4.36	4.30	4.69	4.36	4.30	
	Capacity	(kW)	10.0	11.0	13.0	10.0	11.0	13.0	
Cooling	Input	(kW)	3.52	4.08	4.80	3.52	4.08	4.80	
	EER		2.84	2.70	2.71	2.84	2.70	2.71	
Refrigerant			R410A						
Dimension	HxWxD	(mm)	1,340x900x320						
Cord heater (W)			- 75						



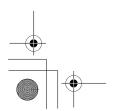

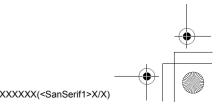







Hydro Unit

80 class

	Hydro Unit		HWS-803XWHM3-E	HWS-803XWHT6-E	HWS-803XWHD6-E	HWS-803XWHT9-E	
Back up heater capacity		3.0	3.0 6.0		9.0		
	for back up heater		220-230V ~ 50Hz	380-400V 3N~ 50Hz	380-400V 3N~ 50Hz		
Power supply	for hot water of (option)	ylinder heater	220-230V ~ 50Hz				
Leaving water	Heating	(°C)		20-	-55		
temperature	Cooling	(°C)	10-25				

112,140,160 class


	Hydro Unit		HWS-1403XWHM3-E	HWS-1403XWHT6-E	HWS-1403XWHD6-E	HWS-1403XWHT9-E
Back up heater ca	Back up heater capacity		3.0 6.0		.0	9.0
	for back up hea	iter	220-230V ~ 50Hz	380-400V 3N~ 50Hz	220-230V 3~ 50Hz	380-400V 3N~ 50Hz
Power supply	for hot water cy (option)	linder heater				
Leaving water	Heating	(°C)		-55		
temperature	Cooling	(°C)				


Hot Water Cylinder (option)

Hot water cylinder (c	option)	HWS-1501CSHM3-E HWS-1501CSHM3-UK	HWS-2101CSHM3-E HWS-2101CSHM3-UK	HWS-3001CSHM3-E HWS-3001CSHM3-UK	
Water volume	(liter)	150	210	300	
Power supply			220-230V ~ 50Hz		
Max water temperature	(°C)	75			
Electric heater	(kW)		2.75		
Height	(mm)	1,090	1,474	2,040	
Diameter	(mm)		550		
Material		Stainless steel			


2 ACCESSORY PARTS

	No	Parts name	Quantity	No	Parts name	Quantity
	1	Installation manual (this document)	1	3	Insulator for cooling	1
ſ	2	Owner's manual	1			

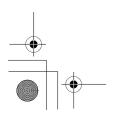

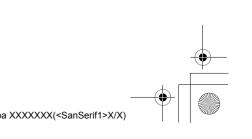



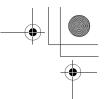

3 PREPARATIONS FOR INSTALLATION

■ Parts required to connect this product (Common items)

Category	Part	Specification	Quantity
	Strainer (water filter)	1 1/4" 30 to 40 meshes	1
Water piping	Drain cock	(for water charge)	1
Trace piping	Isolating ball valves	1 1/4" for service 1 1/4"	2
	Earth leakage breaker for main power supply	30 mA	1
	Earth leakage breaker for backup heater	30 mA	1
Electrical system	(Option) Earth leakage breaker for hot water cylinder heater	30 mA	1

■ Options required for each function

_	In t	he Hydro Unit		Purchased part	
Purpose	Par	t name	Model name	Part name	Prescribed specification
Heating		_	-	Radiator(s), Fan coil(s), Under floor heating	
Heating &Cooling (all rooms)			_	Fan coil(s)	
Heating & Cooling (partly heating only)		_	_	Motorized 2-way valve (for cooling)	Refer to "Control parts specifications" on page 21.
	Hot	water cylinder			
		150 L	HWS-1501CSHM3-E		
			HWS-1501CSHM3-UK		
Hot water supply		210 L	HWS-2101CSHM3-E	Motorized 3-way valve Earth leakage breaker	Refer to "Control parts specifications" on page 21.
		210 L	HWS-2101CSHM3-UK	artir rountage prounts	
		300 L	HWS-3001CSHM3-E		
		300 L	HWS-3001CSHM3-UK		
				Motorized mixing valve	Refer to "Control parts specifications" on page 21.
2-zone control		_	_	Circulator pump	Other power supply
				Buffer tank	
Interlocking with boiler	Out kit (put control board 1)	TBC-PCIN3E	Boiler	Other power supply. Signal 12 V input function is required for boiler.

■ Optional Parts

No.	Part name	Model name	Application	Remarks	
			Boiler-linked output, Alarm output	Unito two boards (according to	
1	External output board	TCB-PCIN3E	Defrost signal output, compressor operation signal output	Up to two boards (according to applications)	
2	External input board	TCB BCMO3E	Cooling/heating thermostat input	Up to two boards (according to	
	2 External input board TCB-PCMO3E		Emergency stop signal input.	applications)	


Use specified products for the outdoor unit, Hydro Unit, and hot water cylinder.

Do not use commercially available products.

Use parts that conform to prescribed specifications for parts to be connected to the Hydro Unit.


If unspecified products or parts are used, a malfunction, failure or fire may be caused.



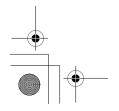





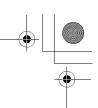



PRECAUTIONS FOR SAFETY

■ General Safety Precautions

Ensure that all Local, National and International regulations are satisfied.

- · Read the "PRECAUTIONS FOR SAFETY" carefully before installation.
- The precautions described below include the important items regarding safety Observe them without fail.
- After the installation work has been completed, perform a trial operation to check for any problems. Follow the Owner's Manual to explain how to use and maintain the unit to the customer.
- Turn off the main power supply switch (or breaker) before unit maintenance.
- Ask the customer to keep the Installation Manual along with the Owner's Manual.


■ Refrigerant Precautions

- If a refrigerant leak is suspected contact the dealer who supplied the system, in the case of a recharge of refrigerant ask service personnel for details of the leak and confirmation of the repairs completed.
 The refrigerant used in the system is harmless.
- Generally the refrigerant does not leak, however, if the refrigerant should leak into a room and a heater or stove burner in the room is lit, toxic gas may be generated.
- Do not install the system in a location subject to a risk of exposure to a combustible gas. If a combustible gas leaks and stays around the unit a fire may occur.
- Install the refrigerant pipe securely during installation and before operation.
 If the compressor is operated with no pipe work connected and valves open the compressor will suck air which would result in over pressurization of the system which may result in bursting or injury.
 - Observe the same precautions for refrigerant recovery work (pump back procedure to outdoor unit) and do not disconnect pipe work until refrigerant is recovered and valves closed.




Installation Precautions


- Ask an authorized dealer or qualified installation professional to install/maintain the Air to Water Heat Pump System.
 Inappropriate installation may result in water leaks, electric shock or fire.
- Electrical work must be performed by a qualified electrician in accordance with the installation manual. An inappropriate power supply capacity or installation may result in fire.
- When completing any electrical works to the system ensure that all Local, National and International regulations are satisfied
- Inappropriate grounding may result in electric shock.
- Ensure all electrical cables, used for the ESTIA installation, comply with all Local and National regulations. Check all electrical terminations are secure and tight.
- · Earth wire connections.
- · Install an earth leakage breaker without fail.
 - Incomplete grounding can cause electric shock.
- Do not ground wires to gas pipes, water pipes, lightning rods or telephone cable ground wires.
- This unit must be connected to the main power supply using a circuit breaker or switch with a contact separation of at least 3 mm.
- Be sure to turn off all main power supply switches or the circuit breaker before starting any electrical work.
 Ensure all power switches are off, failure to do so can cause electric shock.
- Use an exclusive power circuit for the Air to Water Heat Pump system using the rated voltage.
- Ensure correct connection of interconnecting wire between Outdoor Unit and Hydro Unit.
- Incorrect connection of the interconnecting cable may result in the damage of electrical parts.
- Ensure refrigeration system remains sealed to external gases and air.
 Should air or other gases contaminate the refrigeration circuit, high system pressures could result in burst pipes and injuries
- · Do not modify or bypass any of safety guards or switches in this system.
- · After unpacking the outdoor unit, examine the unit carefully for any possible damage
- · Do not install in any place that might increase the vibration of the unit.
- To avoid personal injury (with sharp edges), be careful when handling parts.

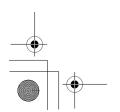



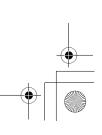



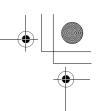


- Perform installation work properly in accordance with the installation manual. Inappropriate installation may result in water leaks, electric shock or fire.
- Tighten all flare nuts with a torque wrench in the specified manner.
 Excessive tightening of the flare nut may result in cracking of the pipe work or flare nut which may result in a refrigerant leakage.
- · Wear heavy duty gloves during installation work to avoid injury.
- Install the outdoor unit securely in a location where the base can sustain the weight adequately.
- · In enclosed areas, if the refrigerant leaks during installation vacate and ventilate immediately.
- After installation is complete ensure and confirm that refrigerant does not leak.
 If refrigerant leaks into a room and flows near a fire source noxious gas may be generated.
- Do not block any drain hoses. Hoses may come off and electric shocks may occur.
- Do not hit the manometer, because it is made of glass. It is breakable.

■ Notes on System Design

- The inlet water temperature to the Hydro Unit must be 55°C or less.
 Especially, be careful when there is an external heating source such as a boiler.
 When hot water over 55°C returns, it may result in a failure of the unit or water leakage.
- The flow rate of the circulating water must meet the following range.
 - 11 and 14 kW 18 L/minute or more
 - 8 kW 13 L/minute or more
 - If the flow rate becomes less than the minimum, the protective device is activated to stop the operation. To ensure the minimum flow rate of the water system, install a bypass valve on one water circuit. Please note this circuit must contain a minimum of 20 liters. Failure to do could result in premature system failure.
- Do not drive water by power other than the pump built in the Hydro Unit.
- The back up heaters, in the hydro unit, are designed to assist the heat pump during periods fo low ambient conditions
- Ensure the Hydro unit and the connecting water pipes are installed in a location that is not exposed to low ambient temperatures which could result in the water circuit freezing.
- The system operation is designed around a closed water circuit. Do not use an open circuit design.
- Circulating water must be 20 liters or more. If total water amount is not enough, the unit may not function fully due to protective operation.




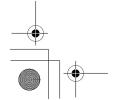







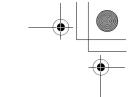



5 EXAMPLE OF HYDRO UNIT INSTALLATION


■ Example of Installation for Cooling and Heating

When both cooling and heating modes are required a 2-way valve must be installed to isolate the radiator or underfloor heating circuit.

▼ Fig. 5-01

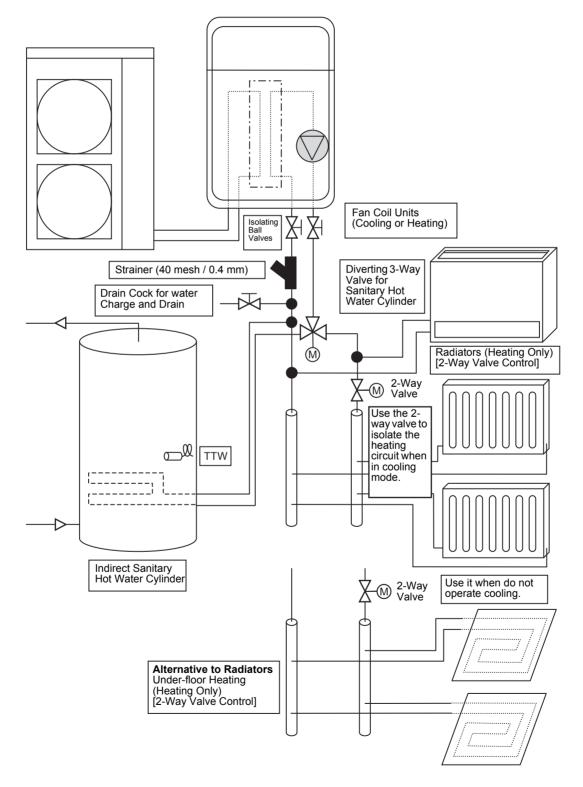

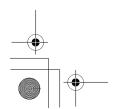

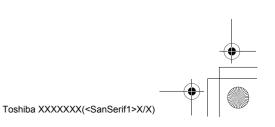




■ Example of 2-Zone Temperature Control and Hot Water Supply System


The following shows an example of the 2-zone temperature control.

A buffer tank and a water pump are required for the 2-zone temperature control.

▼ Fig. 5-02

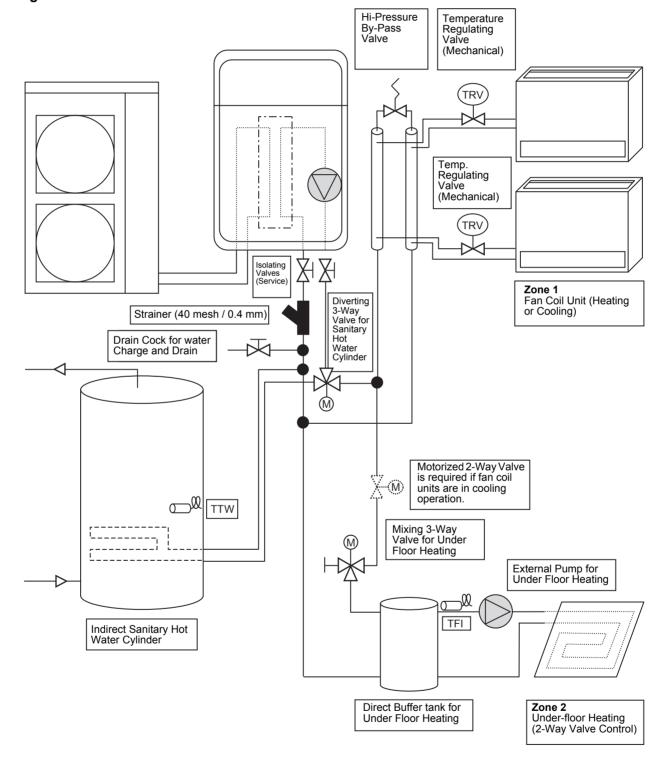




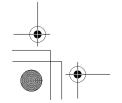






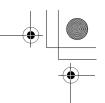


6 MAIN COMPONENTS OF HYDRO UNIT


■ Exploded view and description for Hydro Unit

▼ Fig. 6-01

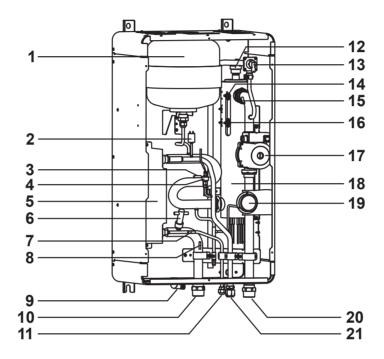

- 1: Expansion vessel
- 2 : Pressure switch (4.15 MPa)
- 3 : Temperature sensor (for Heat pump outlet -TWO)
- 4 : Pressure sensor
- 5: Heat exchanger
- 6 : Flow switch (13.0 L/min (8kw), 17.5 L/min (14kw))
- 7 : Temperature sensor (for refrigerant -TC)
- 8 : Temperature sensor (for water inlet -TWI)
- 9: Drain nipple
- 10: Water inlet connection
- 11 : Refrigerant liquid connection
- 12 : Air relief valve
- 13 : Pressure relief valve (0.3 MPa (3 bar))
- 14 : Thermal protector (auto)
- 15 : Temperature sensor (for water outlet THO)
- 16: Thermal protector (Single operation)
- 17: Water pump
- 18 : Backup heater (3 kW, 3 kW x 2, 3 kW x 3)
- 19: Manometer
- 20: Water outlet connection
- 21: Refrigerant gas connection

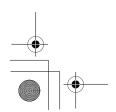


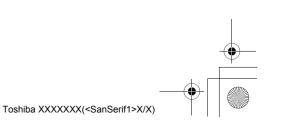





■ E-Box layout

▼ Fig. 6-02

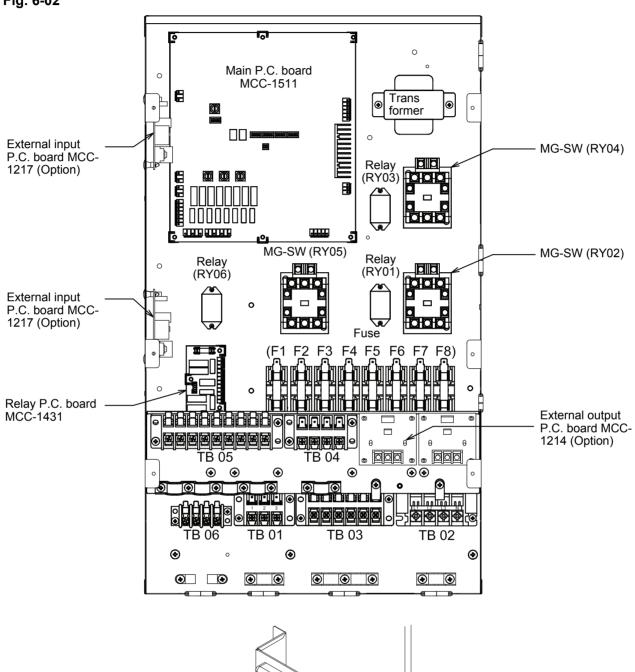


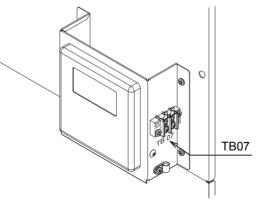



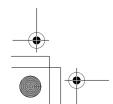



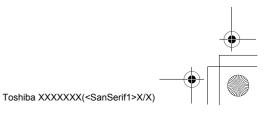



7 HYDRO UNIT INSTALLATION

MARNING

- To protect yourself from injury, always use PPE (Personal Protective Equipment), that is, wear gloves.
- · Install the Hydro Unit by at least two persons.
- Install the Hydro Unit in a place strong enough to withstand the following weights:
 - Hydro Unit weight with no water 60 kg (802) 65 kg (1402)
 - Hydro Unit weight with full water 80 kg (802) 85 kg (1402)

! CAUTION

- Do not install the unit in a place where water freezes.
- Do not install the Hydro Unit in a place where combustible gas may leak.
- Do not install the Hydro Unit in a place exposed to rain or water.
- Do not install the Hydro Unit near equipment which generates heat.
- Do not install the Hydro Unit to a movable object.
- Do not install the Hydro Unit in a place exposed to vibration.

■ Handling, Unpacking, and Checking the Hydro Unit

 The unit should be checked when it is delivered, and any damage reported immediately to the courier claims the department.


■ Positioning

Service space

Secure a service space for the Hydro Unit.

 Do not install the Hydro Unit in a place where heat stagnates.


▼ Fig. 7-01

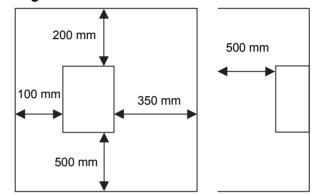



Mounting

Install M10 bolts at the positions shown below and secure them with nuts.

▼ Fig. 7-02

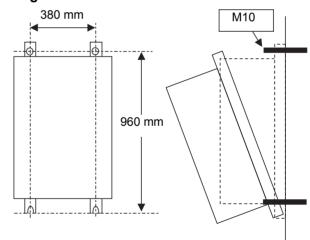

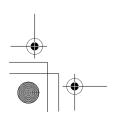

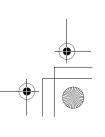




The Hydro Unit can be installed directly without using the fixing angles.


However, the back side of the Hydro Unit can be highly heated, therefore, the installing surface must be heat-resistant.

▼ Fig. 7-03

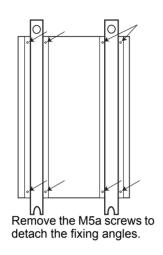

▼ Fig. 7-04 ▼ Fig. 7-05 M10 Secure the Hydro Unit with plain washers and nuts.

Install the Hydro Unit so that its tilting angle falls within the range below.

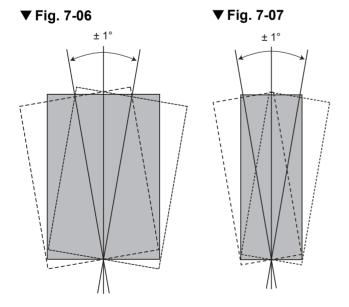

■ Refrigerant Piping

⚠ WARNING

- THIS SYSTEM ADOPTS HFC REFRIGERANT (R410A) WHICH DOES NOT DESTROY THE OZONE LAYER.
- The characteristics of R410A refrigerant are: ease to absorb water, oxidizing membrane or oil, and its pressure is approximately 1.6 times higher that of R22. Accompanied with the new refrigerant the oil has also been changed. Therefore during installation work prevention of the invasion of water, dust, former refrigerant or oil is of a paramount importance. To prevent the charging of incorrect refrigerants into the system the service valve connection ports have also increased in size.
- The use of R410A tools is required for correct installation of the system.
- The use of the correct pipe sizes and wall thicknesses of copper pipe work is required for the correct installation of the system.

A CAUTION


- Ensure all refrigerant pipes are protected from the invasion of dust and water.
- Ensure all pipe work connections are tightened to the required torque settings detailed in this section.
- Perform an air tight using Oxygen Free Nitrogen (OFN) only.
- Evacuate the air in the pipe work using a vacuum pump.
- Check for refrigerant gas leaks at all connections throughout the pipe work.


NOTE

The Air to Water Heat Pump system uses R410A refrigerant. It is important that copper pipes used for refrigerant piping have the following wall thickness:

- 0.8 mm for Ø6.4 mm, Ø9.5 mm and Ø12.7 mm
- 1.0 mm for Ø15.9 mm

ΕN

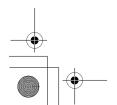

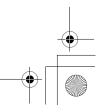






Refrigeration pipe

The length and height of the refrigeration pipe must be within the following values.

As long as the Hydro Unit is installed within these ranges, no additional refrigerant is required.

▼ Fig. 7-08

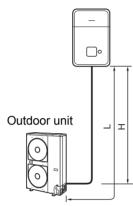

H: Max. ±30 m (above or below)

L: Max. 30 m Min. 5 m

Refrigerant pipe sizes

Hydro Unit Model	Gas Side (mm)	Liquid Side (mm)
8 kW Hydro Unit	Ø 15.88	Ø 9.52
11 & 14 kW Hydro Unit	Ø 15.88	Ø 9.52


Flaring

- Cut the refrigerant pipes to the correct length using a pipe cutter. Remove any burrs that may be on the pipes as these may cause refrigerant leaks or component failure in the refrigeration cycle.
- Place the correct size flare nuts onto the pipes (use the flare nuts supplied with the Hydro Unit or use flare nuts designed specifically for R410A refrigerant) and then flare the pipes using the correct flaring tool.

Tightening

 Connect the refrigerant pipes, from the outdoor unit, to the Hydro Unit as shown below.

▼ Fig. 7-09

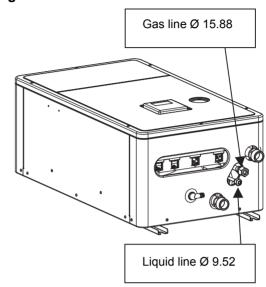

- Align the flare connection on each pipe with the corresponding outlet connection on the Hydro Unit.
 Tighten the flare nuts, using fingers, to secure the pipes in place.
- Tighten the flare nuts, using a torque wrench, to the tightening torques shown below:

Outer Ø of Copper Pipe (mm)	Tightening Torque (N/m)
9.5	33 to 42
15.9	63 to 77

 To prevent damage, to the refrigerant pipes, use two spanners to tighten the flare nut connections to the required torque.

■ Water Pipe


№ WARNING


- Install water pipes according to the regulations of respective countries.
- · Install water pipes in a freeze-free place.
- Make sure that water pipes have sufficient pressure resistance.

The setting value of the pressure relief valve is $0.3\,$ MPa.

ACAUTION

• Do not use zinc plated water pipes. When steel pipes are used, insulate both ends of the pipes.

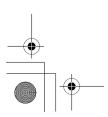

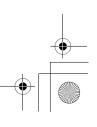








• The water to be used must meet the water quality standard specified in EN directive 98/83 EC.

Water pipe

Design the water pipe length within the QH characteristics of the pump (Refer to "Fig. 7-16" and "Fig. 7-17" on page 17).

The height of the pipe must be 7 m or less.


▼ Fig.7-10

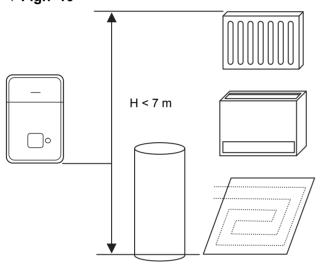


Water circuit


- Install a strainer with 30 to 40 meshes (locally procured) at the water inlet of the Hydro Unit.
- Install drain cocks (locally procured) for water charge and discharge at the lower part of the Hydro Unit.
- Make the piping route a closed circuit. (An open water circuit may cause a failure.)

▼ Fig. 7-11

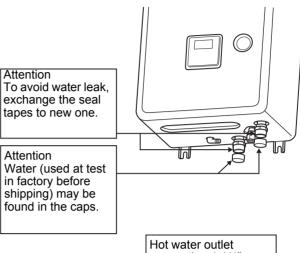


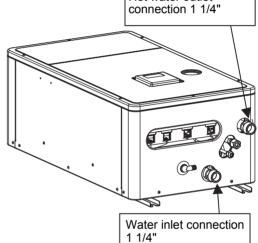


▼ Fig. 7-12

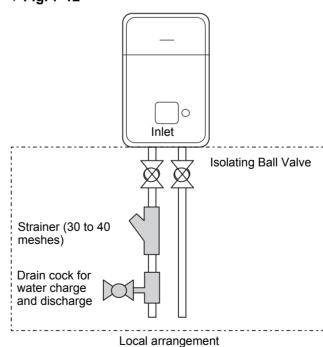



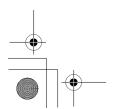



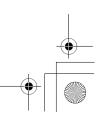




Piping to hot water cylinder (option)

Water supplied to the hot water cylinder is branched by a motorized 3-way valve (locally procured). For the specifications of the motorized 3-way valve, refer to "Control parts specifications" on page 21. Connect the hot water cylinder to port A (open when energized) of the valve.

▼ Fig. 7-13

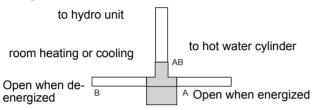


Piping to 2-zone operation

To perform 2-zone temperature control, circulate water by another pump (locally procured) through a motorized mixing valve (locally procured) and a buffer tank (locally procured).

For the specifications of the motorized mixing valve, Refer to "Control parts specifications" on page 21.

▼ Fig. 7-14

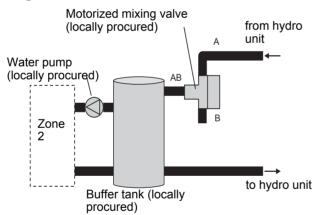

<u>Checking water volume and initial pressure</u> <u>of expansion vessel</u>

The expansion vessel of the Hydro Unit has a capacity of 12 liters.

The initial pressure of the expansion vessel is 0.1 MPa (1 bar).

The pressure of the safety valve is 0.3 MPa (3 bar). Verify whether the capacity of the expansion vessel is sufficient using the following expression. If the volume is insufficient, add the capacity locally.

Expression for expansion vessel selection


$$V = \frac{\epsilon \times Vs}{1 - \frac{P1}{Ps}}$$

- V: Necessary total tank capacity ()
- E: Water expansion coefficient at average hot water temperature
- Vs: Total water amount in the system
- P1: System pressure at tank setting position (MPaabs.)
 (Pipe inner pressure during pump operation before heating device operates = water supply pressure)
- P2: Maximum pressure used during operation at tank setting position (MPaabs.)
 - (= safety valve setting pressure)
- * The absolute pressure value (abs.) is obtained by adding the atmospheric pressure (0.1 MPa (1 bar)) to the gauge pressure.

▼ Tank selection method


Water te	Water temperature and expansion coefficient								
Hot water temperature (°C)	Expansion rate ξ	Hot water temperature (°C)	Expansion rate €						
0	0.0002	50	0.0121						
4	0.0000	55	0.0145						
5	0.0000	60	0.0171						
10	0.0003	65	0.0198						
15	0.0008	70	0.0229						
20	0.0017	75	0.0258						
25	0.0029	80	0.0292						
30	0.0043	85	0.0324						
35	0.0050	90	0.0961						
40	0.0078	95	0.0967						
45	0.0100								

▼ Fig. 7-15

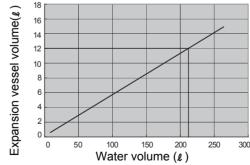


^{*}Hot water temperature 55°C

Install an external expansion vessel when the capacity of the expansion vessel is insufficient.

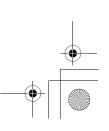




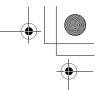



Pump operation/configuration


▼ Fig. 7-16

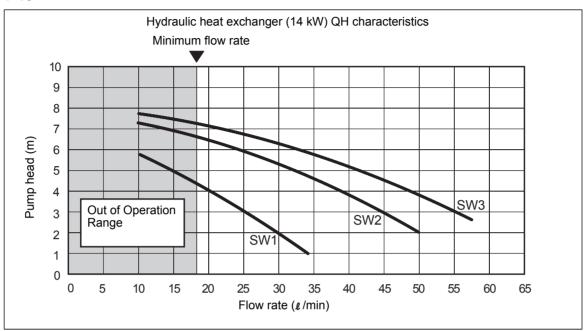

▼ Fig. 7-17

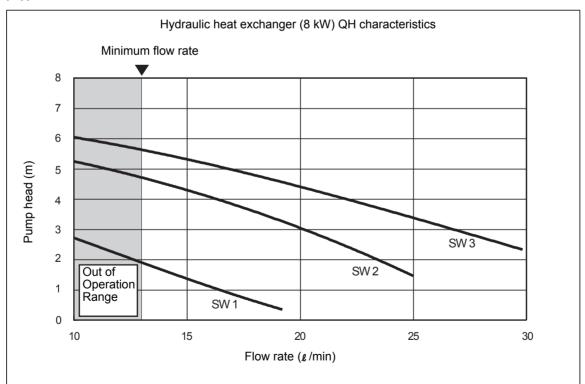


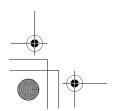

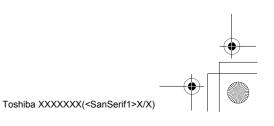

ΕN



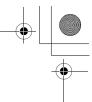


Water charging


Charge water until the pressure gauge shows 0.2 MPa (2 bar).

Hydraulic pressure may drop when the trial run begins. In that case, add water.

Air may enter if the charged hydraulic pressure is low. Loosen the purge valve cap by two turns to release air.

▼ Fig. 7-18

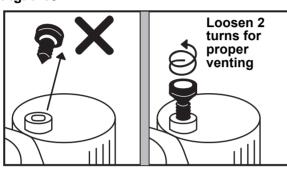

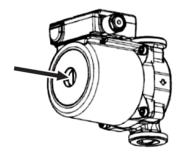

Loosen the air vent screw of the pump, pull out air in the pump, and tighten again.

Loosen the cap of the pressure relief valve to release air.

Water may come out of the pressure relief valve. Release the air completely from the water circuit. Failure to do so may disable correct operation.

Water quality

The water used must satisfy EN directive 98/83 EC.

Piping insulation

It is recommended that insulation treatment be applied to all pipes. To perform optional cooling operation, apply insulation treatment of 20 t or more to all pipes.


■ Electrical Installation


⚠ WARNING

- Ensure electrical circuits are isolated before commencing the electrical installation.
- The electrical installation must be completed by a qualified electrician.
- The electrical installation must comply to all Local, National and International electrical installation regulations.
- This product must be earthed in accordance with Local, National and International electrical installation regulations.

CAUTION


- The Hydro Unit must be connected to a dedicated power supply for the back up heater circuit.
- The electrical supply must be protected by a suitably sized over current protection device (fuse, MCB etc) and an earth leakage protection device.
- The Hydro Unit must be connected to the mains power supply using a isolating switch which disconnects all poles and has a contact separation of at least 3 mm.
- The cord clamps, attached to the Hydro Unit, must be used to secure the electrical cables.
- Wrong connection of electrical cables may result in electrical component failure or fire.
- Ensure the electrical cables are sized in accordance with the installation instructions.

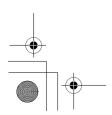

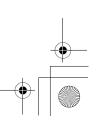






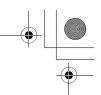


Control line


▼ Fig. 7-19

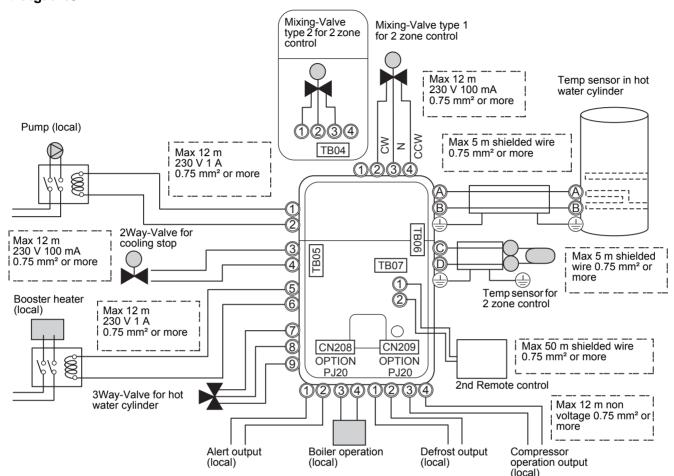

▼ Fig. 7-20

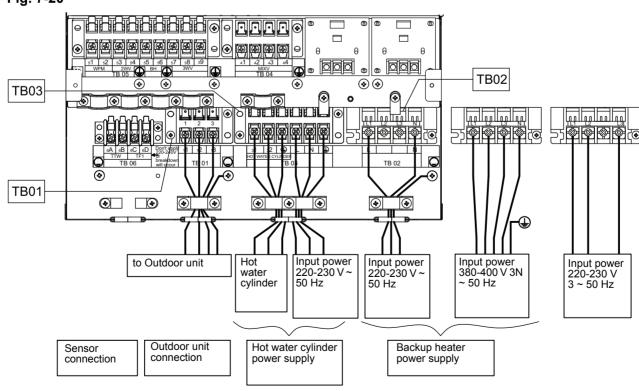




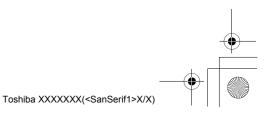

EN



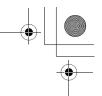


Electrical supply/cable specifications


▼ Wiring specifications

Description		Model name HWS-	POWER SUPPLY	Maximum current	Installation fuse rating	Power wire	Connection des	tination
		1403H-E	220-230 V ~ 50 Hz	22.8A	25 A	2.5 mm² or more		
		1103H-E	220-230 V ~ 50 Hz	22.8A	25 A	2.5 mm² or more	(L), (N)	
Outdoor	Power	803H-E	220-230 V ~ 50 Hz	19.2A	20A	2.5 mm² or more		
unit power	input	1603H8-E, 1603H8R-E	380-400V 3N~ 50Hz	14.6A	16A	2.5 mm² or more	①, ②, ③, Ŋ	
		1403H8-E, 1403H8R-E	380-400V 3N~ 50Hz	14.6A	16A	2.5 mm² or more		
		1103H8-E, 1103H8R-E	380-400V 3N~ 50Hz	14.6A	16A	2.5 mm² or more		
		1403XWHM3-E	220-230V ~ 50Hz	13A	16A	1.5 mm² or more	(L), (N)	
		1403XWHD6-E	220-230V 3~ 50Hz	23A	25A	2.5 mm² or more	(1), (2), (3)	
		1403XWHT6-E	380-400V 3N~ 50Hz	13A(13A x 2P)	16A	1.5 mm² or more	①,②,	
Hydro	Power input for	1403XWHT9-E	380-400V 3N~ 50Hz	13A(13A x 3P)	16A	1.5 mm² or more	(3), (N)	TB02
inlet heater	backup heater	803XWHM3-E	220-230V ~ 50Hz	13A	16A	1.5 mm ² or more	(L), (N)	1602
power		803XWHD6-E	220-230V 3~ 50Hz	23A	25A	2.5 mm² or more	(1), (2), (3)	
		803XWHT6-E	380-400V 3N~ 50Hz	13A(13A x 2P)	16A	1.5 mm² or more	①, ②,	
		803XWHT9-E	380-400V 3N~ 50Hz	13A(13A x 3P)	16A	1.5 mm² or more	(3), (N)	
	Power inpheater	out for cylinder	220-230V ~ 50Hz	12A	16A	1.5 mm ² or more	(L), (N)	TB03
Outdoor-Hydro unit Connection		Connection				1.5 mm ² or more	1,2,3	
Hydro -Cy	ylinder	Connection				1.5 mm ² or more	①,②	TB03

▼ Wiring specifications (control line)

Description	Line spec	Maximum current	Maximum length		Connection destination
3-way valve control	2 line or 3 line	100 mA	12 m	0.75 mm² or more	⑦, ⑧, ⑨ (TB05)
2-way valve control	2 line	100 mA	12 m	0.75 mm ² or more	③, ④ (TB05)
Mixing valve control	3 line	100 mA	12 m	0.75 mm² or more	①, ②, ③ or ②, ③, ④ (TB04)
2-zone thermo sensor	2 line	100 mA	5 m	0.75 mm ² or more	(TB06)
Cylinder thermo sensor	2+GND(shielded wire)	100 mA	5 m	0.75 mm² or more	(A), (B) (TB06)
Second remote controller	2 line	50 mA	50 m	0.5 mm ² or more	①, ② (TB07)

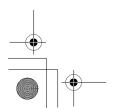

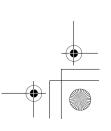





▼ Control parts specifications

	Power	Maximum current	Туре
Motorized 3-way valve (for hot water)	AC 230 V	100 mA	Default: 2-wire spring return valve or 3 wire SPST valve Note: 3 wire SPDT valve can be used by changing DIP switch 13_1.
Motorized 2-way valve (for cooling)	AC 230 V	100 mA	spring return type (normally open)
Motorized mixing valve (for 2-zone)	AC 230 V	100 mA	Default: Drive time = 60sec to 90° Note: 3 wire SPST or SPDT valves, with drive times between 30 and 240 seconds, can be used. Valve drive time can be changed using function code 0C

▼ Output line specifications


Description	Output	Maximum current	Max voltage	Maximum length	
External pump No.1	AC230V	1 A	_	12 m	
External boost heater	AC230V	1 A	_	12 m	Output as required when outdoor air temperature is -20°C or less
		0.5 A	AC230 V	12 m	Output as required when outdoor air
Boiler control	Non-voltage contacts	1 A	DC24 V	12 m	temperature is -10°C or less. The outdoor air temperature, when the boiler output is enabled, can be changed using function code 23.
ALADM Output	Non-voltage		AC230 V	12 m	
ALARM Output	contacts	1 A	DC24 V	12 m	
Compressor operation	Non-voltage	0.5 A	AC230 V	12 m	
output	contacts	1 A	DC24 V	12 m	
Defrost Output	Non-voltage	0.5 A	AC230 V	12 m	
Deliosi Output	contacts	1 A	DC24 V	12 m	

▼ Input line specifications

Description	Input	Maximum length	
Emergency stop control	Non-voltage	12 m	
Cooling thermostat input	Non-voltage	12 m	
Heating thermostat input	Non-voltage	12 m	

Earthing arrangements

The Hydro Unit and related equipment must be earthed in accordance with your local and national electrical regulations. It is essential that the equipment is earthed to prevent the electric shock and damage to the equipment.

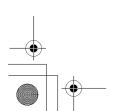



ΕN







Electrical connection to hydro unit

- Remove the front cover and the electrical box cover from the Hydro Unit.
- The Hydro Unit power cable must be sized in accordance with refer to "Electrical supply/cable specifications".
- Connect the Hydro Unit power cable to Terminal 02 as shown below.


▼ Fig. 7-21

Backup heater 380-400V 3N~ Backup heater Backup heater 220-230V 3~ 220-230V ~ type (3kW type) type (6kW type) (6,9kW type) Input power Input power Input power 220-230V 3N~ 220-230V 3~ 220-230V 50Hz 50Hz 50Hz Leakage Leakage Leakage breaker breaker breaker 30mA 30mA 30mA (L1)(L2)(L3)(N) **L1/L2/L3**


- Ensure the Hydro Unit power cable is secured using the cable clamp fitted in the electrical box.
- Ensure the Hydro Unit power cable connection terminals are tight.


Outdoor unit to hydro unit electrical connection

▼ Fig. 7-22

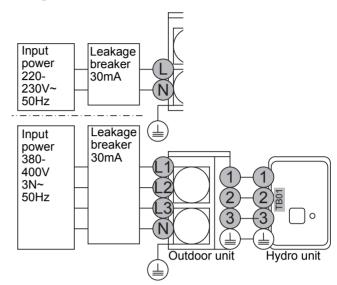

- Ensure electrical circuits are isolated before commencing work.
- The Outdoor Unit to Hydro Unit interconnecting cable must be sized in accordance with refer to "Electrical supply/cable specifications".
- Connect the Outdoor Unit to Hydro Unit interconnecting cable as shown in the diagram above
- Ensure the Outdoor Unit to Hydro Unit interconnecting cable is secured using the cable clamp fitted in the electrical box.
- Ensure the Outdoor Unit to Hydro Unit interconnecting cable connection terminals are tight.

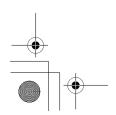

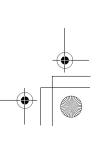






Electrical connection for external booster heater

CAUTION

- The maximum current available from the booster heater output is 1 A. Do not connect the booster heater directly to Terminal Block 05 on the Hydro Unit. A separate contactor, supplied locally, must be used to supply the booster heater.
- The booster heater can be installed only for room heating and cannot be used for hot water supply.
- Install the booster heater downstream of the 3-way valve on the indoor unit side.
 - The booster heater is an external heater, supplied locally, used to assist the Hydro Unit during low ambient conditions.
- The AC230 V 1 A output from the Hydro Unit must only be used to energize an external contactor. (Supplied locally)
- The output from the Hydro Unit is only enabled when the outdoor air temperature is less than -20°C.
- Ensure the external booster heater is installed and set up in accordance with all Local, National and International regulations.
- Connect the external booster heater to the Hydro Unit in accordance with the diagram shown below.
- Connect the coil, of the field supplied contactor, to terminals 5 & 6 on Terminal Block 05. The contactor will energize in the event of low ambient conditions.
- A separate dedicated electrical supply must be used for the external booster heater. This must be connected through the contacts on the field supplied contactor.


▼ Fig. 7-23

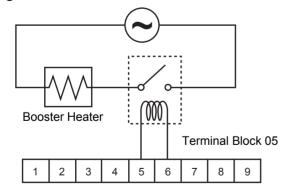


Electrical connection for external additional pumps


- The Hydro Unit has the facility to connect an additional circulating pump, if required, into the heating or cooling system.
- There is an output available from the Hydro Unit. AC230 V 1 A (maximum) is available from each output. The output for each additional pump is synchronized with the operation of the main circulating pump inside the Hydro Unit.
- Connect the additional pumps as shown in the diagram below.
- Connect external pump 1 to terminals 1 & 2 on Terminal Block 05.
- Install external pumps so that their motive power does not affect the internal pump.

▼ Fig. 7-24

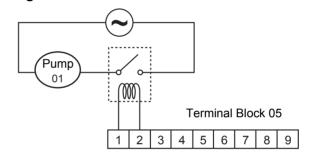



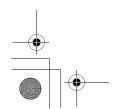

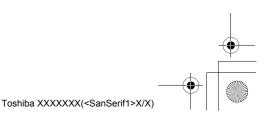





3-way valve (diverter) connection

Required Valve Specification:

Electrical Specification: 230 V; 50 Hz; <100 mA Valve Diameters: Port A, Port B: Ø 1 1/4"

Return Mechanism: 3 types of 3-way valve (diverter)

can be used.

Set the 3-way valve in use with the DIP switch SW13-1 on the Hydro Unit board.

			SW13-1
Тур	oe 1	2-wire spring return	OFF
Тур	pe 2	3-wire SPST	OFF
Тур	oe 3	3-wire SPDT	ON


NOTE

Continuous operation of the valve motor at the fully open position is not recommended.

- The 3-way diverter valve is used to select either domestic hot water or space heating.
- Connect the 3-way diverter valve to terminals 7, 8 and 9 on Terminal Block 05.
- Connect the 3-way diverter valve in accordance with the diagram below:


▼ Fig. 7-25

Type 1: SPRING RETURN

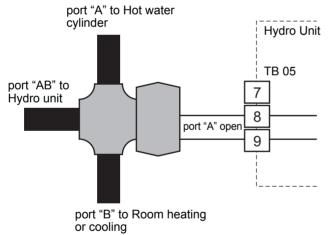


▼ Fig. 7-26


Type 2: SPST

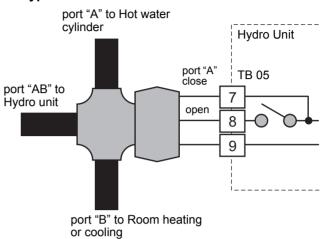


▼ Fig. 7-27

Type 3: SPDT

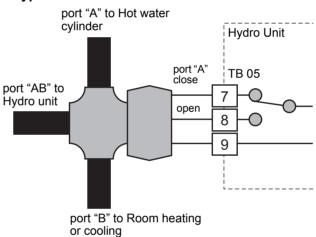

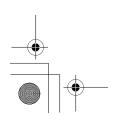

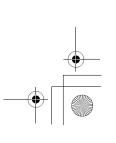



3-way mixing valve connection


Required Actuator Specification

Electrical Specification:230 V; 50 Hz; <100 mA The 3-way mixing valve is used to achieve the temperature differential needed in a 2-zone heating system.

- Connect the 3-way mixing valve to terminals 2, 3 and 4 on Terminal Block 04 (for Type 1 mixing valve) or on terminals 1, 2 and 3 on Terminal Block 04 (for Type 2 mixing valve).
- Connect the 3-way mixing valve in accordance with the diagrams below:

▼ Fig. 7-28


Type 1: SPDT

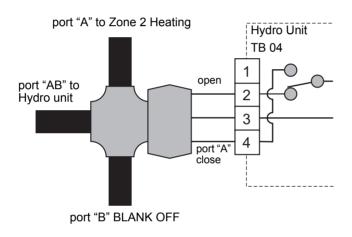

▼ Fig. 7-29

Type 2: SPST

port "A" to Zone 2 Heating

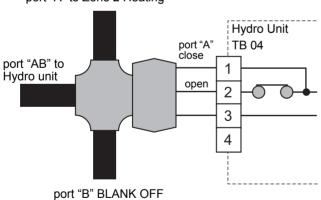

Hot water cylinder connection (optional)

 Please refer to "Electrical supply/cable specifications" for fuse/cable size and for connection details.

Electrical Connection (Hot Water Cylinder Electric Heater)


- The electric heater, incorporated in the hot water cylinder, requires a separate supply to Hydro Unit.
- Connect the hot water cylinder heater electrical supply in accordance with shown below: Live conductor: Terminal L on Terminal Block 03 Neutral conductor: Terminal N on Terminal Block 03 Earth Conductor: Earth terminal on Terminal Block 03
- Connect the hot water cylinder heater to the Hydro Unit as shown below:


Live conductor to hot water cylinder: Terminal 1 on Terminal Block 03


Neutral conductor to hot water cylinder: Terminal 2 on Terminal Block 03

Earth conductor to hot water cylinder: Earth terminal on Terminal Block 03

▼ Fig. 7-30

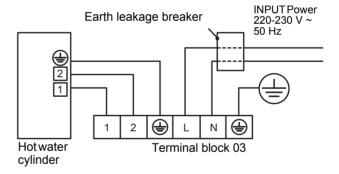

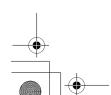

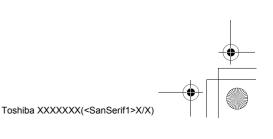

EN






Electrical Connection (Hot Water Cylinder temperature Sensor)

- Connect the hot water cylinder temperature sensor as shown below to terminals A & B on Terminal Block 06 in the Hydro Unit.
- Please ensure that the interconnecting cable, between the Hydro Unit and the hot water cylinder, is connected to earth at both ends of the cable using the shield wire.

▼ Fig. 7-31

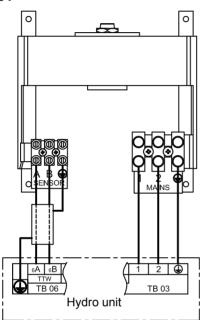

Additional hydro unit outputs

Alarm and Boiler Outputs

Alarm Output: L1: Alarm output


- Output enabled when the system is in alarm/fault condition.
- Volt free contact specification shown below: AC230 V; 0.5 A (maximum)
 DC24 V; 1 A (maximum)
- Connection details: Terminals 1 and 2 (OPERATION) on MCC-1217 TB (Refer to "Fig. 7-32")

Boiler Control Output: L2: Boiler drive permission output

- Output enabled when outdoor ambient temperature <-10°C
- Volt free contact specification shown below: AC230 V; 0.5 A (maximum)
 DC24 V; 1 A (maximum)
- Connection details: Terminals 3 and 4 (EMG) on MCC-1217 TB (Refer to "Fig. 7-32")


▼ Fig. 7-32


Connection Cable

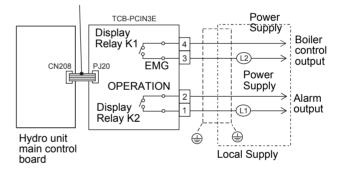

Defrost and Compressor operation Outputs Defrost output

- Display relay is ON when the system defrost.
- Volt free contact AC230 V; 0.5 A (maximum) DC24 V; 1 A (maximum)
- Connection details: Terminals 1 and 2 (OPERATION) on MCC-1217 TB (Refer to "Fig. 7-33")

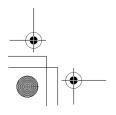

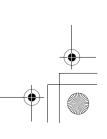








Compressor operation output

- Display relay is ON with outdoor unit compressor operation.
- Volt free contact AC230 V; 0.5 A (maximum) DC24 V; 1 A (maximum)
- Connection details: Terminals 3 and 4 (EMG) on MCC-1217 TB (Refer to "Fig. 7-33")

▼ Fig. 7-33

Connection Cable

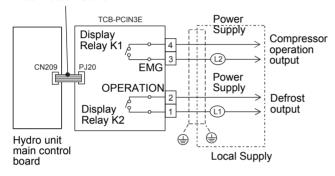

CAUTION

- Be sure to prepare a non-voltage contact for each terminal.
- Display Relay capacity of "EMG" and "OPERATION". Below AC230 V 0.5 A (COS Ø = 100 %) When connecting loads such as relay coil to "L1, L2" load, insert noise surge absorber. Below DC24 V 1 A (Non-inductive load)

When connecting load such as relay coil to "L1, L2" load, insert the bypass circuit.


Optional inputs to hydro unit

Room Thermostat Input:

- 2-3: Room thermostat input for cooling mode
- 1-3: Room thermostat input for heating mode
- Output enabled when either heating or cooling mode selected on room thermostat. (locally supplied)
- · Volt free contacts
- · Connection details:

Cooling Connection: Terminals 3 (COM) and 2 (COOL) on TCB-PCMO3E (Refer to "Fig. 7-34") Heating Connection: Terminals 3 (COM) and 1 (HEAT) on TCB-PCMO3E (Refer to "Fig. 7-34")

▼ Fig. 7-34

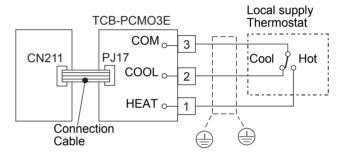


Thermostat operation


	Coo	ling	Heating		
	on	off	on	off	
2 - 3	open	close	_	_	
1 - 3	_	-	close	open	

♠ CAUTION

- Be sure to prepare a non-voltage continuous contact for each terminal.
- Supplementary Insulation must be added to user touchable part of switches.



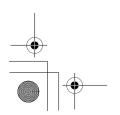

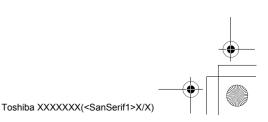






Emergency Shutdown input

S2: Emergency stop input, Tempo* control input This function can be switched over with FC21 and FC61.

- · Non-voltage contacts
- Connection details: Emergency stop, Tempo* control ON: Terminals 3 (COM) and 1 (HEAT) on TCB-PCMO3E (Refer to "Fig. 7-35")
- * a price contract provided by French electric power company EDF

▼ Fig. 7-35

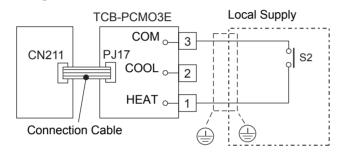

CAUTION

- Be sure to prepare a non-voltage continuous contact for each terminal.
- Supplementary Insulation must be added to user touchable part of switches.

Electrical safety checks

The electrical safety checks must be completed before turning on the electrical supplies to the Air to Water heat pump system. The electrical safety checks should be completed by a qualified electrician. All results measured should comply with your local/national electrical installation regulations.

Earth continuity test

On completion of the electrical installation a resistance test should be completed on the earth conductor to ensure continuity between all pieces of equipment on the earth conductor.

Insulation resistance test

This test must be completed using a 500 V D.C. insulation resistance tester. Insulation resistance tests should be completed between each live terminal and earth.


■ Second remote controller


Installation place


- Install the remote controller 1 m 1.5 m above floor level (average room temperature area).
- Do not install the remote controller in a place exposed to direct sunlight or outside air (such as a window, etc.).
- Do not install the remote controller where ventilation is poor.
- Do not install the remote controller in a freezing or refrigerated area - the remote controller is not water or splash-proof.
- Install the remote controller in a vertical position.

Remote controller installation dimension


Be sure to follow the installation dimension as shown in the figure 1 when you install the remote controller on the wall.

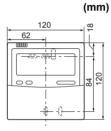

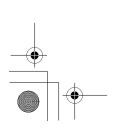

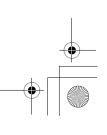



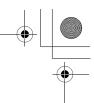


Installation Manual Hydro Unit

Remote controller installation

NOTE

- · The remote controller wire should not be bundled with other wires (mains, etc.), or installed with other wires in the same conduit, as malfunction may
- · Install the remote controller away from sources of electrical interference and electromagnetic fields.
- If electrical interference is unavoidable countermeasures such as appropriate filtering should be employed.

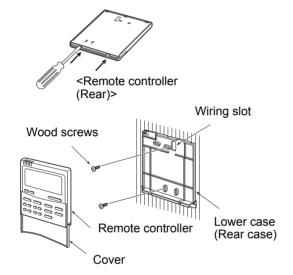


- 1. For removal of the remote controller's lower case (rear case), insert the tip of a straight blade screwdriver, or the like, into the two openings at the bottom of the remote controller to open the lower case.
- 2. Fix the remote controller's rear case by wood screws (2 pcs.). Do not over tighten, as it may damage the rear case.
- 3. Connect the wires from the Hydro unit to the remote controller terminal block. (Refer to "How to wire the remote controller".) Connect the wires of the remote controller following the terminal numbering convention of the Hydro unit to prevent miss wiring. (Do not apply AC 208-230V mains voltage to the remote controller as it will be damaged).

Remote controller wiring


Connection diagram

- Use 0.5 mm2 wire
- Can not use the closed end wire joint.

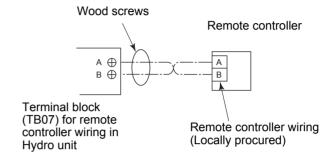

Terminals A and B are nonpolar.


Second remote controller installation requirements

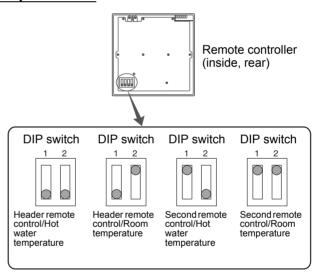


Installation

For a dual remote controller system, install the remote controllers in the following way.

- 1. Set one of remote controllers as the header remote controller. (Remote control of hydro unit is preset as Header (DIP SW1 = OFF).)
- 2. Set the DIP switch on all other remote controller P.C. boards to Second. (Optional remote control is preset as Second (DIP SW1 = ON).)

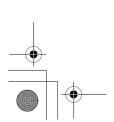


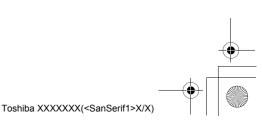

EN





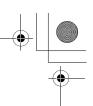

- Set DIP SW2 to ON (Room temperature) on the remote control which you will control the room temperature with.
 - DIP SW2 of optional remote control is preset to ON (Room temperature).
 - Either one of header or second remote control must be set as room temperature control.
- To control room temperature instead of water temperature with this remote control, set function code "40" of hydro unit to "1".


8 START UP AND CONFIGURATION

Set the DIP switches and function codes.

■ Setting DIP Switches on the Board in the Hydro Unit

- · Detach the front cover and the electric parts box cover of the Hydro Unit.
- · Set the DIP switches on the main board.

▼ Fig. 8-01

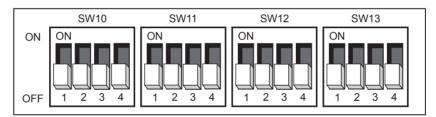

SW No.	DIP No.	Description	Default	After Commissioning	Change 1	Change 2	Change 3
	1	Boiler install location OFF = Heating side after 2 way valve ON = Before 3 way valve	OFF				
	2	Not Used	-	-	-	-	-
02	3	Not Used	-	-	-	-	-
	4	Used to when an external room thermostat is connected OFF = No external room thermostat; ON = External room thermostat connected	OFF				
	1	P1 Pump operation for hot water OFF = synchronised with heat pump ON = Normally run	OFF				
10	2	P1 Pump operation for heating OFF = Normally run ON = Stopped at the outside temperature over 20°C	OFF				
	3	Synchronisation of Pump P2. OFF = P2 continuous operation(pump off when remote controller switched off) ON = P1 synchronised with pump P1	OFF				
	4	Not Used	-	-	-	-	-










Installation Manual Hydro Unit


SW No.	DIP No.	Description	Default	After Commissioning	Change 1	Change 2	Change 3
	1	Used to activate Hydro Unit back up heaters. OFF = Back up heaters activated; ON = back up heaters de-activated	OFF				
11	2	Used to activate hot water cylinder electrical heater. OFF = hot water cylinder heater activated; ON = hot water cylinder heater de-activated	OFF				
	3	Used to activate external booster heater output. OFF = external booster heater output activated; ON = external booster heater output de-activated	OFF				
	4	Not Used	-	-	-	-	-
	1	Used when a hot water cylinder is connected to system. OFF = hot water cylinder connected; ON = hot water cylinder not connected	OFF				
12	2	Used to activate Zone 1 Operation. OFF = Zone 1 activated; ON = Zone 1 de-activated	OFF				
	3	Used to activate Zone 2 Operation. OFF = Zone 2 de-activated; ON = Zone activated	OFF				
	4	Not Used	-	-	-	-	-
13	1	Used to determine type of 3 way diverting valve used on system. OFF = 2 wire/spring return or SPST type valve; ON = SPDT type valve	OFF				
	2	Used to activate external boiler output. OFF = external boiler output de-activated; ON = external boiler output activated	OFF				
	3	Used to activate system auto restart after power failure. OFF = auto restart activated; ON = auto restart de-activated	OFF				
	4	Not Used	-	-	-	-	-

■ Setting DIP Switches on the Board in Second Remote controller (option)

- · Detach the front cover of the Remoto controller.
- Set the DIP switches on the main board

DIP No.	Description	Default	After Commissioning	Change 1	Change 2	Change 3
1	Used to when a second remote controller is connected OFF=Header remote control; ON=Second remote control	OFF	_	-	-	-
2	Used to determine control target when use second remote controller OFF=water temperature; ON;room temperature	OFF	_	_	_	-
3	Not Used	-	-	-	-	-
4	Not Used	-	-	-	-	1

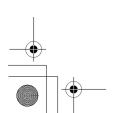

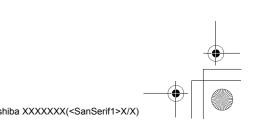

ΕN





■ Setting Function Codes for Hydro Unit and Remote Controller

Set function codes for various operation modes with the remote controller.

There are two types of setting.


- 1) Hydro Unit function code setting
- 2) Remote controller function code setting

Setting remote controller mode

<Setting Hydro Unit Function Code>

1 Press the TEST + SET + SELECT


buttons for four seconds or more to enter the remote controller function code setting mode.

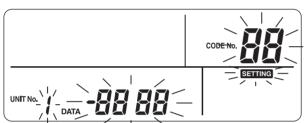

- 2 Set the function code (CODE No.) with the TEMP. buttons. (CODE No.: 01 to 91)
- 3 Set data (DATA) with the TIME ▼ ▲ buttons.
- **4** Press the SET __ button to determine the settings.
- 5 The CL button is enabled only before the SET button is pressed and the function code is changed.
- 6 Press the TEST button to end the settings.


<Setting Remote Controller Function Code>

1 Press the TEST ♠ + CL ← + TEMP. ▼
buttons for four seconds or more to enter
the remote controller function code setting
mode.

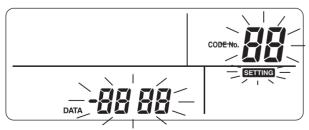

2	Set the function of	code (CODE No.) with the
	TEMP.	buttons. (CODE No.: 01 to
	13)	

- **3** Set data (DATA) with the TIME A buttons.
- **4** Press the SET __ button to determine the settings.
- **5** The CL button is enabled only before the SET button is pressed and the function code is changed.
- 6 Press the TEST button to end the settings.

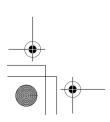





Installation Manual Hydro Unit

Main setting items

(1) Setting Hot Water Temperature Range (function code 18 to 1F)

- Set the temperature range for heating (zone 1, zone 2), cooling, and hot water.
- The upper-limit and lower-limit temperatures of each mode can be set.

(2) Setting Heat Pump Operation Conditions for Hot Water Supply (function code 20 and 21)

- · Set the heat pump start water temperature and heat pump stop water temperature.
- The heat pump starts working when the water temperature lowers below the set start water temperature. It is recommended that the default value be used.

(3) Compensating Hot Water Temperature (function code 24 and 25)

· Compensate the target temperature from the remote controller set temperature when the hot water temperature lowers below the set outside air temperature.

(4) Setting Hot Water Boost (function code 08 and 09)

· Set the control time and target temperature when the HOT WATER BOOST button on the remote controller is pressed.

(5) Setting Anti-Bacteria

- Set the control for the hot water cylinder when ANTI BACTERIA 🔞 is set with the remote controller.
- · Set the target temperature, control period, start time (24-hour notation), and target temperature retention period.
- · Make this control setting according to regulations and rules of respective countries.

(6) Setting Priority Mode Temperature


- · Set the outside air temperature that changes the preferred operation mode.
- · Hot Water Heating Switching Temperature Heating operation takes precedence when the temperature lowers the set temperature.
- · Boiler HP Switching Temperature When the temperature lowers the set temperature the external boiler output is made.

(7) Setting Heating Auto Mode Temperature (function code 27 to 31)

- Compensate the target temperature when Auto is set for temperature setting on the remote
- The outside air temperature can be set to one of three points (T1 and T3) within a range of -15 to 15°C.
- The target temperature can be set to a value from 20 to 55°C.

• However, A > B > C > D > E.

▼ Fig. 8-02

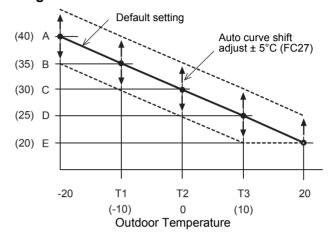

 The entire curve can be adjusted plus and minus 5°C by function code 27.

(8) Setting Frost Protection Temperature (function code 3A to 3B)

- Set the function when the FROST PROTECTION (8) button on the remote controller is pressed.
- Set enabling/disabling of this function and the target water temperature.
- · If disabling is set, the frost protection operation is not performed even when the FROST PROTECTION (8) button is pressed.

(9) Setting Frequency of Output to Internal Heater (function code 33 to 34)

The increase/decrease time is used to set the response time.

(10) Setting Night Setback (function code 26. remote controller function code 0E to 0F)

- Set the function when the NIGHT button on the remote controller is pressed.
- Set enabling/disabling of this function, reduction temperature, start time, and end time.
- If disabling is set, the night setback operation is not performed even when the NIGHT button is pressed.


(11)Room temperature control setting (option external. room tehermostat control)


Set the amount of control parameter from the external thermostat signal (option)

(12) Hydro 2-Way Diverting valve operation. control

 When using both cooling and heating operations and there is an indoor unit only for heating (such as floor heating), install the 2-way valve and set this function code.

ΕN

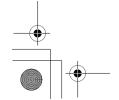

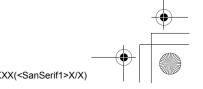







(13)Setting 3way Valve Operation (function code 54)

 This setting is not necessary for normal installation. Make this setting to invert the logic circuit in case ports A and B of the 3-way valve are wrongly attached and it cannot be rectified on site.

(14) Mixing valve operation setting

 Set the time period from full close to full open of the 2-zone control mixing valve. Set a value that is 1/10 of the actual time. And. setting the interval control time. (minutes)

(15)Setting Heating/Hot Water Switching when Boiler Is Used (function code 3E)

 When boiler is used, make this setting to operate the Hydro Unit by the instruction from the boiler.

(16)Setting Heat Pump Operating Time for Hot Water Supply Operation

 Set the time period from the start of heat pump run to the start of heater energization at the beginning of hot water supply operation. If a long period is set, it takes long time for heating water.

(17)Setting Cooling ON/OFF

Set this function when performing cooling operation.

(18)Remote controller time indication

24-hour or 12-hour notation is selected for the timer.

(19)Setting Nighttime Quiet Operation


 Issue an instruction for low-noise mode operation to the outdoor unit. Enabling/disabling of this function, start time, and end time can be set.


(20)Setting Alarm Tone

· The remote controller alarm tone can be set.

(21)Selection of mode of operation by external input.


Select the logic of an external input signal (option)

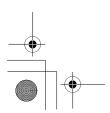

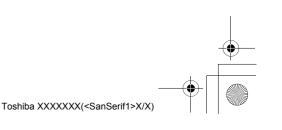





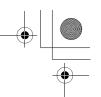


Installation Manual **Hydro Unit**

Function code settings

			Location & FC Number						
		FC Description	Hydro	RC	Range	Default	After Commissioning	Change 1	Change 2
		Heating Upper Limit - Zone 1	1A	-	37~55°C	55°C			
		Heating Lower Limit - Zone 1	1B	-	20~37°C	20			
		Heating Upper Limit - Zone 2	1C	_	37~55°C	55			
1	Setting Temperature Range	Heating Lower Limit - Zone 2	1D	_	20~37°C	20			
'		Cooling - Upper Limit	18	_	18~30°C	25			
		Cooling - Lower Limit	19	_	10~20°C	10			
		Hot Water - Upper limit	1E	_	60~75°C	75			
		Hot Water - Lower limit	1F	_	40~60°C	40			
2	Hot Water Operation	Heat Pump Start Temperature	20	_	20~45°C	38			
۷		Heat Pump Stop Temperature	21	_	40~50°C	45			
3	Hot Water Temperature Compensation	Temperature Compensation Outside Air Temperature (°C)	24	_	-20~10°C	0			
)		Compensation Temperature (°C)	25	_	0~15°C	3			
4	Hot Water Boost	Operation Time (x10 min)	08	_	3~18	6			
4	Hot Water Boost	Setting Temperature (°C)	09	_	40~75°C	75			
		Setting Temperature (°C)	0A	_	65~75°C	75			
5	Anti Bacteria	Start Cycle (Day)	-	0D	1~10	7			
3		Start Time (Hour)	-	0C	0~23	22			
		Operation Time (min)	0B	_	0~60	30			
6	Priority Mode	Hot Water & Heating Switching Temperature (°C)	22	_	-20~20	0			
O		Boiler & Heat Pump Switching Temperature (°C)	23	_	-20~20	-10			
	Heating Auto Curve Settings	Outside Temperature T1 (°C)	29	_	-15~0°C	-10			
		Outside Temperature T2 (°C)	-	_	0	0			
		Outside Temperature T3 (°C)	2B	_	0~15°C	10			
		Setting Temperature A @ OAT -20°C (°C)	2C	_	20~55°C	40			
		Setting Temperature B @ OAT T1 (°C)	2D	_	20~55°C	35			
7		Setting Temperature C @ OAT T2 (°C)	2E	_	20~55°C	30			
		Setting Temperature D @ OAT T3 (°C)	2F	_	20~55°C	25			
		Setting Temperature E @ OAT 20°C (°C)	30	_	20~55°C	20			
		Ratio Of Zone 2 In Zone 1 Auto Mode (%)	31	_	0~100%	80			
		Auto Curve - Temperature Shift (°C)	27	_	-5~5°C	0			
	Frost Protection	Function 0=Invalid; 1=Valid	3A	_	0~1	1			
8		Frost Protection Setting Temperature (°C)	3B	_	10~20°C	15			
		Schedule date	-	12	0~99	0			
		Schedule time	-	13	0~23	0			
_	Back Up Heater Control	Downtime Back Up Heater 0=5min; 1=10min;2=15min;3=20min	33	-	0~3	1			
9		Uptime Back Up Heater 0=10min; 1=20min; 2=30min; 3=40min	34	-	0~3	0			




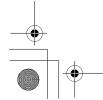









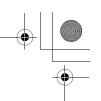

			Location & FC Number						
		FC Description	Hydro	RC	Range	Default	After Commissioning	Change 1	Change 2
10	Night Setback	Change Setback Temperature	26	_	3~20°C	5			
		Zone selection 0=Zone 1 & 2; 1= Zone 1 Only	58	_	0~1	1			
		Start Time (Hour)	_	0E	0~23	22			
		End Time (Hour)	_	0F	0~23	06			
		Compensating Temperature	35	_	1~5°C	1			
		Downtime zone B (x5min)	36	_	1~24	6			
		Uptimezone C (x5min)	37	_	1~24	6			
		Cooling upper limit	92	_	0~55	29			
	Room	Cooling lower limit	93	_	0~55	18			
11	Temperature control Setting	Heating upper limit	94	_	0~55	29			
	· ·	Heating lower limit	95	_	0~55	18			
		Target water temperature in cooling mode	96	-	10~30	20			
		Target water temperature in heating mode	9D	_	20~55	40			
12	Hydro 2 Way Valve Operation Control	Cooling 2 Way Valve - Operation Logic 0=Activated during cooling; 1=Not activated during cooling	3C	-	0~1	0			
13	Hydro 3 Way Diverting Valve Operation Control	3 Way Diverting Valve Operation Logic 0=Activated during hot water operation; 1=not activated during hot water operation	54	-	0~1	0			
14	2 Zone Mixing Valve Drive Time	Specified Drive Time for Mixing Valve (x10sec)	0C	_	3~24	6			
14		Mixing valve OFF (control time - mins)	59	_	1~30	4			
15	Boiler/Heat Pump Synchronisation	External Boiler/Heat Pump Synchronisation 0=Synchronised; 1=Not synchronised	3E	-	0~1	0			
16	Maximum Operation Time Of Hot Water Heat Pump	Maximum Heat Pump Operation Time In Hot Water Operation Priority Mode (minutes)	07	_	1~120	30			
17	Cooling Operation	0=Cooloing & Heating Operation; 1=Heating Only Operation	02	-	0~1	1			
18	Remote Controller Indication	24h or 12h Time Indication 0= 24h; 1=12h	-	05	0~1	0			
	CDU Night Time Low Noise Operation	Low Noise Operation 0=Invalid; 1=Valid	-	09	0~1	0			
19		Start Time (Hour)	_	0A	0~23	22			
		End Time (Hour)	-	0B	0~23	06			
20	Alarm Tone	Tone Switching 0=OFF; 1=ON	-	11	0~1	1			

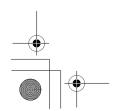

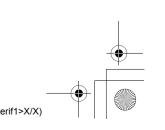



			Location & FC Number						
		FC Description	Hydro	RC	Range	Default	After Commissioning	Change 1	Change 2
21	E-Stop Switch Logic	0 = Contacts low > high system stop. System restart with remote controller 1 = Contacts high > low system stop. System restart with remote controller 2 = Contacts high > low system stop. Contacts low > high system restart 3 = Contacts low > high system stop. Contacts low > high (second time) system restart	52	-	0~3	0			
		0 = Restart hot water and heating 1 = Restart in the mode when stopping 2 = Restart heating 3 = Restart hot water 4 = Tempo control 1; without heater 5 = Tempo control 2; without HP and heater	61	-	0~5	0			
22	Hydro Unit Capacity Setting	0012 = 80*XWH**E 0017 = 140*XWH**E Factory set but function code is needed for PCB replacement or function code reset procedure has been completed.	01	-	0012 or 0017	Depends on Hydro Unit			
23	Second Remote Controller Target temperature Setting	0=Water temperature 1=Room thermo temperature	40	-	0~1	0			
24	Room Temperature	Temperature shift for heating	_	02	-10~10	-1			
24	Sensor Setting	Temperature shift for cooling	-	03	-10~10	-1			
25	Synchronization control at low outside temperature	0 = HP + Boiler 1 = Boiler 2 = Backup heater	5B	_	0~2	0			

■ Settings by Purpose


Settings when hot water supply function is not used


 When the hot water supply function is not used, set DIP SW12-1 on the Hydro Unit board to ON. (Refer to page 30.)

Setting for cooling

• For Hydro Units that do not perform cooling (those for floor heating, etc.), procure a motorized 2-way valve (for cooling) (refer to "Control parts specifications" on page 21 for the details.) locally and attach it to the water pipe that is not used for cooling. Connect the valve cables to terminals TB05 (3) and (4) of the Hydro Unit.


Press long the TEST → + SET → + SELECT
 □ ⇒ switches on the remote controller to change the Hydro Unit function code, and change address 02 to 0, and then press the SET → button to enable the function. Press the TEST → button to exit the setting mode.

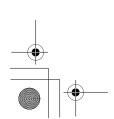

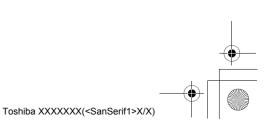



• Stick the optional insulator for cooling to the bottom of the Hydro Unit.

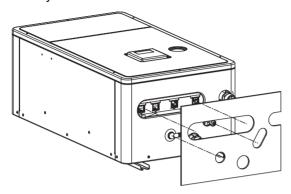

Settings for hot water supply

- · Prepare the optional hot water cylinder.
- Procure a motorized 3-way valve (refer to "Control parts specifications" on page 21 for the details.)
 locally and perform piping. Connect the valve cables to terminals TB05 (7), (8) and (9) of the Hydro Unit.
- Set DIP SW12-1 on the Hydro Unit board to OFF. (Refer to page 30.)
- Connect the power supply unit for the hot water cylinder heater to terminals TB03 L and N of the Hydro Unit.
- Connect cables between the Hydro Unit and the hot water cylinder as follows:

Hydro Unit terminals TB03 (1), (2), and earth — Hot water cylinder (1), (2), and earth

TB06 A B and earth — Hot


TB06 A, B, and earth — Hot water cylinder A, B, and earth

Settings for 2-zone temperature control


- Procure a motorized mixing valve (refer to "Control parts specifications" on page 21 for the details.) locally and perform piping. Connect the valve cables to terminals TB04 (1), (2), (3) and (4) of the Hydro Unit.
- · Procure a buffer tank locally.
- Procure a water pump locally, and connect its cables to terminals TB05 (1) and (2) of the Hydro Unit.
 To inhibit interlocking the water pump with the internal pump of the Hydro Unit, set DIP SW10-3 on the Hydro Unit board to OFF.
- Set DIP SW12-3 on the Hydro Unit board to ON. (Refer to page 30.)
 Attach the temperature sensor (TFI) connected to terminals TB06 C and D of the Hydro Unit near the hot water inlet of the Hydro Unit.
- Fix TFI sensor on the room heating supply pipe by using the connector procured in locally.
- Cover the cables with insulation tube (minimum 1 mm) or conduit so that the user cannot touch them directly.

 Cover the TFI sensor's cables and sensor with insulation tube (minimum 1 mm) shown in the diagram on the right.

▼ Fig. 8-03

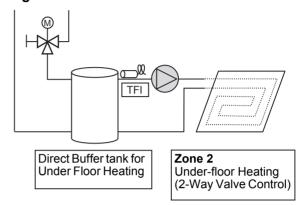



▼ Fig. 8-04

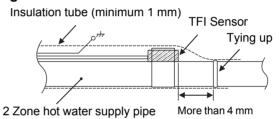

Setting for second remote controler


- · Prepare the optional second remote controller.
- Connect the cable to terminals TB07 A,B of theHydro unit and remote controller.
- Set dip switch1 on the second remote controller board to ON.
- Press long the TEST → + SET → + SELECT → switches on the remote controller to change the Hydro Unit function code, and change address 40 to 1,and then press the SET → button to enable the function.

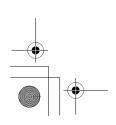

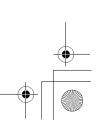





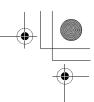

9 TEST RUN

Use operation buttons usually to conduct a test run. If the outside air temperature or water temperature is outside the setting value range, press the TEST button on the remote controller and then start a test run. Since the protection setting is disabled in the TEST mode, do not continue a test run longer than 10 minutes.


- Press the TEST button on the remote controller.
 An indication "TEST" appears on the remote controller.
- Press the ZONE1, 2 button and select "heating" with the OPERATE MODE button. The pump is activated in 30 seconds. If air is not released completely, the flow rate switch is activated to stop operation. Release air again according to the piping procedure. Little air bite is discharged from the purge valve.
- · Check that the air bite sound disappears.
- Check that the hydraulic pressure has become the predetermined pressure 0.1 to 0.2 MPa (1 to 2 bar).
 If the hydraulic pressure is insufficient, replenish water.
- Heating operation starts. Check that the hydro unit starts heating.
- Press the OPERATE MODE button and select "cooling."
- Cooling operation starts. Check that the hydro unit starts cooling and that the floor heating system is not cooled.
- Press the ZONE1, 2 button to stop operation.
- Press the HOT WATER button to start hot water supply operation.
- · Check that there is no air bite.
- Check that hot water is present at the connection port of the hot water cylinder.
- Press the HOT WATER ______ button to stop the hot water supply operation.
- Press the TEST button to exit the test mode.

10 MAINTENANCE

Execute periodic maintenance at least once a year.


Check points

- Check all electrical connections and make adjustments if they are necessary.
- Check the water pipes of the heating systems in particular any evidence of leakage.
- Check the expansion tank inner pressure. If it is insufficient, enclose nitrogen or dry air in the tank.
- Check that the hydraulic pressure is 0.1 MPa (1 bar) or more with a water manometer. If it is insufficient, replenish tap water.
- Pull the lever of the pressure relief valve and check operation.
- · Clean the strainer.
- Check the pump for an abnormal sound or other abnormalities.

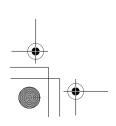





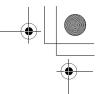

11 SENSOR TEMPERATURE MONITORING FUNCTION

The sensor sensing temperature is displayed on the remote controller.

This function allows you to make sure whether the sensor is installed properly.


Press the TEST + CL buttons for four seconds or more.


Press the TEST (button to exit the test mode.

)	
	Item code	Data name	Unit
	00	Control temperature (Hot water cylinder)	°C
	01	Control temperature (Zone1)	°C
_	02	Control temperature (Zone2)	°C
Jata	03	Remote controller sensor temperature	°C
Hydro unit data	04	Condensed temperature (TC)	°C
In o	06	Water inlet temperature (TWI)	°C
ydr	07	Water outlet temperature (TWO)	°C
Í	08	Water heater outlet temperature (THO)	°C
	09	Floor inlet temperature (TFI)	°C
	0A	Hot water cylinder temperature (TTW)	°C
	0B	Mixing valve position	step
OE		Low pressure (Ps) × 100	MPa

	Item code	Data name	Unit	
	60	Heat exchange temperature (TE)	°C	
	61 Outside air temperature (TO)			
ata	62	Discharge temperature (TD)	°C	
it d	63	Suction temperature (TS)	°C	
62 63 65 6A 6D		Heat sink temperature (THS)	°C	
00	6A	Current	Α	
utc	6D	Heat exchanger coil temperature (TL)	°C	
0	70	Compressor operation Hz	Hz	
	72	Number of revolutions of outdoor fan (lower)	rpm	
	73	Number of revolutions of outdoor fan (upper)	rpm	
	74	Outdoor PMV position × 1/10	pls	


	Item code	Data name				
	F0	Micro computer energized accumulation time				
	F1	Hot water compressor ON accumulation time	× 100h			
	F2	Cooling compressor ON accumulation time	× 100h			
ta	F3	Heating compressor ON accumulation time				
Hydro unit data	F4	Built-in AC pump operation accumulation time	× 100h			
dro u	F5	Hot water cylinder heater operation accumulation time	× 100h			
Ŧ	F6	Backup heater operation accumulation time	× 100h			
	F7	Booster heater operation accumulation time	× 100h			
	09	Floor inlet temperature (TFI)	°C			
	0A	Hot water cylinder temperature (TTW)	°C			
	0B	Mixing valve position	step			
	OE	Low pressure (Ps) × 100	MPa			

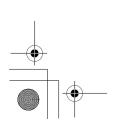

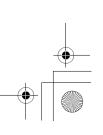





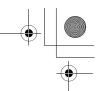

12 TROUBLESHOOTING

■ Fault Symptoms

Symptom	Possible cause	Corrective action	
	Incorrect remote controller setting	Check remote controller operation and temperature setting	
Room is not heated or	Incorrect function code setting	Check function code setting with the function code table.	
cooled.	Backup heater disconnected	Check backup heater and bimetal thermostat.	
Water is not hot enough.	Insufficient capacity	Check selection of equipment.	
	Sensor defect	Check whether temperature sensor is installed at the normal position.	
Niethierie die deutsche en the	Power is not supplied.	Check power supply wiring.	
Nothing is displayed on the remote controller.	Incorrect setting	Check DIP switch setting on the Hydro Unit board. Check the setting with the function code table.	
	Air bite in the pump	Release air completely according to the procedure.	
Flow rate switch is	Low hydraulic pressure	Set hydraulic pressure considering pipe height, and replenish water until manometer shows a value of set hydraulic pressure or more.	
activated.	Strainer is clogged.	Clean the strainer.	
Error code [A01]	Large resistance on the hydro side	Widen water path to the hydro unit or adopt a bypass valve.	
	Malfunction of motorized 3-way valve for hot water supply	Check wiring and parts.	
	Excessive hydraulic pressure	Set hydraulic pressure considering pipe height, and replenish water until manometer shows a value of set hydraulic pressure or more.	
Hot water leaks from pressure relief valve.	Insufficient capacity of expansion tank	Check expansion tank capacity compared to total water amount. If it is insufficient, install another expansion tank.	
	Expansion tank failure	Check the air pressure.	


Defect mode detected by the water heat exchange


O ... Possible

× Not possible

Check code	Diagnostic functional operation				
	Operational cause	Backup present	Automatic reset	Determination and action	
	Pump or flowing quantity error 1) Detected by TC sensor	or	× × 1	Almost no or little water flow. Not enough vent air	
	2)Detected by flow switch abnormality			Dirt clogging in the water piping system.	
A01	Detection of chattering abnormality in the flow switch input	×		The water piping is too long.Installation of buffer tank and secondary pump	
	4) Disconnection of the flow switch connector			Disconnection of the flow switch connector. Defect of the flow switch.	
A02	Temperature increase error (heating) (TWI, TWO, THO)	Heating O Hot water ×	0	Check the water inlet, water outlet and heater outlet (TWI, TWO, THO) sensors. Defect of the backup heater (defect automatic reset thermostat).	
A03	Temperature increase error (hot water supply) (TTW)	Heating O Hot water ×	0	Check the hot water cylinder sensor (TTW). Check the hot water cylinder thermal cut-out.	



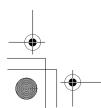

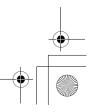









O ... Possible

_	 	
×	 Not	possible

Check	Diagnostic functional	operation		
code	Operational cause	Backup present	Automatic reset	Determination and action
A04	Antifreeze operation	0	V	 Almost no or little water flow. Dirt clogging in the water piping system. The water piping is too long. Check the heater power circuit. Power supply voltage, breaker, power supply
AU4		O	×	connection 3. Set the presence of the backup heater. 4. Check the water inlet, water outlet and heat exchange (TWI, TWO, TC) sensors.
A05	Piping antifreeze operation	0	0	 Check the heater power circuit. Power supply voltage, breaker, power supply connection Check the water inlet, water outlet and heater outlet sensors (TWI, TWO, THO). Disconnection of the backup heater.
A07	Pressure switch operation	0	×	 Almost no or little water flow. Defect of the flow switch. On-load operation under the above conditions. Defect in the pressure switch.
A08	Low pressure sensor operation error	0	×	 Almost no or little water flow. Defect of the flow switch. On-load cooling or prolonged defrosting (a lot of frost formation) under the above conditions.
	Overthe est marks at large an austicus			4. Defect in the low pressure sensor.
A09	Overheat protection operation (Thermostat of the backup heater)	0	×	No water (heating without water) or no water flow. Defect of the flow switch. Defect of the backup heater (poor automatic reset thermostat).
A11	Operation of the release protection	Heating Cooling X Hot water O	×	Almost no water flow. Defect of the flow switch. Check the water outlet temperature sensor (TWO).
A12	Heating, hot water heater error	0	0	Activated by a large load of heating or hot water supply. Check the heater power circuit (backup or hot water cylinder heater). Power supply voltage, breaker, power supply connection
E03	Regular communication error between hydro unit and remote controller	×	0	Check remote control connection. Defect in the remote control.
E04	Regular communication error between hydro unit and outdoor unit	0	0	Check the serial circuit. Miswiring of the crossover between the water heat exchanger and the outdoor unit
F03	TC sensor error	0	0	Check the resistance value and connection of the heat exchange temperature sensor (TC).
F10	TWI sensor error	0	0	Check the resistance value and connection of the water inlet temperature sensor (TWI).
F11	TWO sensor error	×	0	Check the resistance value and connection of the water outlet temperature sensor (TWO).

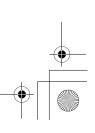



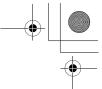

O ... Possible


× Not possible


Check code	Diagnostic functional	operation		
	Operational cause	Backup present	Automatic reset	Determination and action
F14	TTW sensor error	×	0	Check the resistance value and connection of the hot water cylinder sensor (TTW).
F17	TFI sensor error	×	0	Check the resistance value and connection of the floor-inlet temperature sensor (TFI).
F18	THO sensor error	×	0	Check the resistance value and connection of the heater outlet temperature sensor (THO).
F19	Detection of THO disconnection error	×	×	Check for any disconnection of the heater outlet temperature sensor (THO).
F20	TFI sensor error	×	×	Check the connection of the floor-inlet temperature sensor (TFI).
F23	Low pressure sensor error	0	0	Check the connection (body or connection wiring) of the low pressure sensor. Check the resistance value of the low pressure sensor.
F29	EEROM error	×	×	Replace the water heat exchange control board.
F30	Extended IC error	×	×	Replace the water heat exchange control board.
L07	Communication error	×	×	Replace the water heat exchange control board.
L09	Communication error	×	×	1. Check the setting of the FC01 capability specifications. HWS-802xx-E = 0012 HWS-1402xx-E = 0017
L16	Setting error When ZONE1 has not been set, while ZONE2 has been set.	×	×	1. Check the body DP-SW12_2,3.

Defect mode detected by the water heat exchange

Check	Diagnostic function	nal operation		
code	Operational cause	Backup present	Automatic reset	Determination and action
F04	TD sensor error	0	×	Check the resistance value and connection of the discharge sensor (TD).
F06	TE sensor error	0	×	Check the resistance value and connection of the heat exchange temperature sensor (TE).
F07	TL sensor error	0	×	Check the resistance value and connection of the heat exchange temperature sensor (TL).
F08	TO sensor error	0	×	Check the resistance value and connection of the outdoor temperature sensor (TO).
F12	TS sensor error	0	×	Check the resistance value and connection of the suction temperature sensor (TS).
F13	TH sensor error	0	×	Check the resistance value and connection of the heat-sink temperature sensor (TH).
F15	TE, TS sensors error	0	×	Check for any wrong installation of the heat exchange temperature sensor (TE) and the suction temperature sensor (TS).
F31	EEPROM error	0	×	
H01	Compressor breakdown	0	×	Check the power supply voltage. Over-loaded condition of the refrigeration cycle. Check that the service valve is fully open.



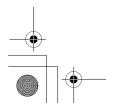


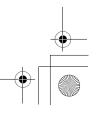





Check	Diagnostic functional	operation		
code	Operational cause	Backup present	Automatic reset	Determination and action
H02	Compressor lock	0	×	Defect of compressor (lock) Replace the compressor. Defect of compressor wiring (open phase).
H03	Defect in the current detection circuit	0	×	Replace the outdoor inverter control board.
H04	Operation of case thermostat	O	×	 Check the refrigeration cycle (gas leak). Check the case thermostat and connector. Check that the service valve is fully open. Defect of the pulse motor valve. Check for kinked piping.
L10	Unset service PC board jumper Jumpers have not been cut.	0	×	Cut outdoor PC board jumper wire (for service).
L29	The communication between the outdoor PC board MUCs error	0	×	1. Replace the outdoor control board.
P03	The outlet temperature error	0	×	Check the refrigeration cycle (gas leak). Defect of the pulse motor valve. Check the resistance value of the discharge temperature sensor (TD).
P04	The high pressure switch error	0	×	
P05	The power supply voltage error	0	×	1. Check the power supply voltage.
P07	Overheating of heat-sink error	0	×	Check the thread fastening and heat-sink grease between the outdoor control board and the heat-sink. Check the heat-sink fan duct. Check the resistance value of the heat-sink temperature sensor (TH).
P15	Detection of gas leak	0	×	 Check the refrigeration cycle (gas leak). Check that the service valve is fully open. Defect of the pulse motor valve. Check for kinked piping. Check the resistance value of the discharge temperature sensor (TD) and the suction temperature sensor (TS).

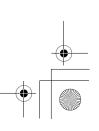







Installation Manual

Hydro Unit

Charle	Diagnostic functional operation			
Check code	Operational cause	Backup present	Automatic reset	Determination and action
	The 4-way valve inversion error			Check the operation of the 4-way valve unit or the coil characteristics.
P19		0	×	2. Defect of the pulse motor valve.
1 10		O		3. Check the resistance value of the heat exchange temperature sensor (TE) and the suction temperature sensor (TS).
	High pressure protection operation			1. Check that the service valve is fully open.
				2. Defect of the pulse motor valve.
			×	3. Check the outdoor fan system (including clogging).
P20		0		4. Over-filling of refrigerant.
				5. Check the resistance value of the heat exchange temperature sensor (TL) and the water outlet temperature sensor (TWO).
	Outdoor fan system error			1. Check the lock status of the motor fan.
P22		0	×	Check the connection of the fan motor cable connector.
				3. Check the power supply voltage.
P26	Short circuit of the compressor driver element error	0	×	Abnormality occurs when operating with the compressor wiring disconnected Check the control board.
F 20		0		2. No abnormality occurs when operating with the compressor wiring disconnected Compressor rare short.
P29	Compressor rotor position error	0	×	Even if the connection lead wire of the compressor is disconnected, it stops due to an abnormality in the position detection Replace the inverter control board.
•		-		Check the wire wound resistor of the compressor. Short circuit Deployed the compressor.



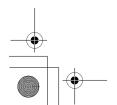

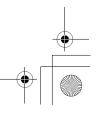








Defect mode detected by the remote control

Check code	Diagnostic functional operation			
	Operational cause	Status of air- conditioning	Condition	Determination and action
Not displaying at all (cannot operate by the remote control)	No communication between hydro unit an remote controller	Stop	_	Defect in the remote control power supply 1. Check the remote controller wiring. 2. Check the remote controller. 3. Check the hydro unit power supply wiring. 4. Check the water heat exchange control board.
E01	No communication between hydro unit and remote controller	Stop (Automatic reset)	Displayed when the abnormality is detected.	Defect in the reception of the remote control 1. Check the remote control crossover. 2. Check the remote control. 3. Check the hydro power supply wiring. 4. Check the water heat exchanger board.
E02	Defect in the signal transmission to the hydro unit. (Detected on the remote control side)	Stop (Automatic reset)	Displayed when the abnormality is detected.	Defect in the transmission of the remote control 1. Check the transmitter circuit inside the remote control Replace the remote control.
E09	Several remote control base units (Detected on the remote control side)	Stop (The handset continues)	Displayed when the abnormality is detected.	1.2 Check several base units with the remote control The base unit is only one, and others are handsets.

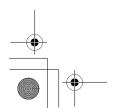

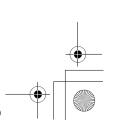





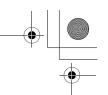



MEMO




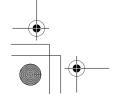

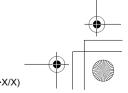

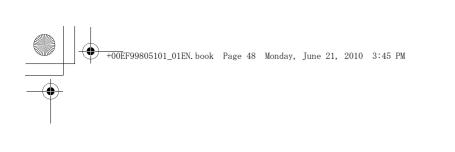

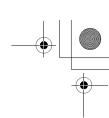 



EF99805101

