



# 30RB 162-262 “B” 30RB 302-802


## Air-Cooled Liquid Chillers

Nominal cooling capacity 163-760 kW

50 Hz

PRO-DIALOG

AQUASNAP™

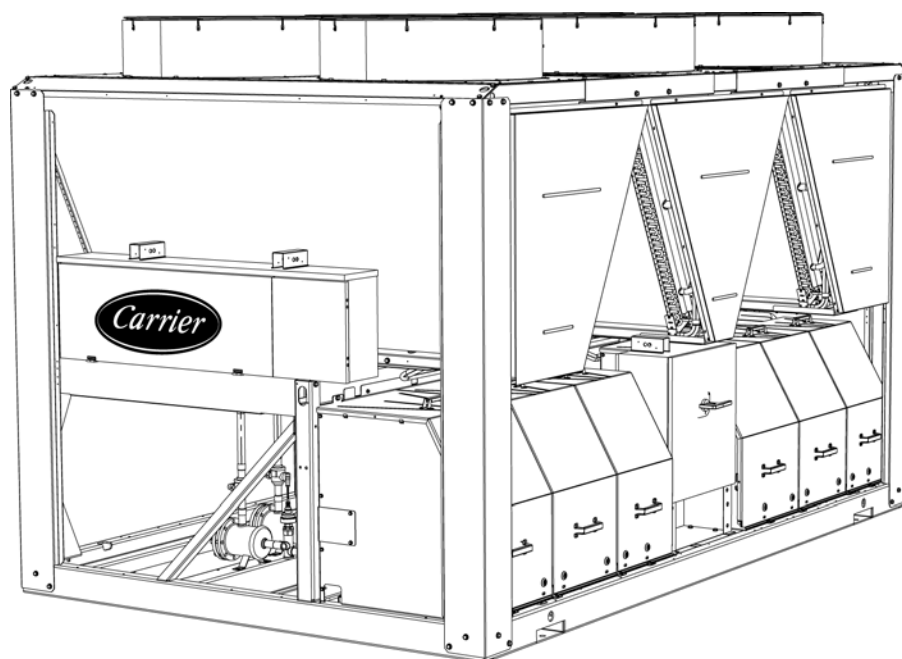

Unit with low-noise option shown

Installation, operation and maintenance instructions



Quality and Environment  
Management Systems  
Approval

## CONTENTS

|  |           |
|--|-----------|
| <b>1 - INTRODUCTION .....</b>  | <b>4</b>  |
| 1.1 - Check equipment received .....   | 4         |
| 1.2 - Installation safety considerations .....   | 4         |
| 1.3 - Equipment and components under pressure .....  | 5         |
| 1.4 - Maintenance safety considerations .....  | 5         |
| 1.5 - Repair safety considerations .....   | 6         |
| <b>2 - MOVING AND SITING THE UNIT.....</b>   | <b>7</b>  |
| 2.1 - Moving.....  | 7         |
| 2.2 - Siting the unit.....   | 7         |
| 2.3 - Checks before system start-up .....  | 8         |
| <b>3 - DIMENSIONS, CLEARANCES.....</b>   | <b>9</b>  |
| 3.1 - 30RB 162-262 "B", standard units .....   | 9         |
| 3.2 - 30RB 162-262 "B", option 280 .....   | 10        |
| 3.3 - 30RB 302-522.....  | 11        |
| 3.4 - 30RB 602-802.....  | 12        |
| 3.5 - Multiple chiller installation .....  | 12        |
| <b>4 - PHYSICAL DATA - 30RB .....</b>  | <b>13</b> |
| 4.1 - 30RB 162-262 "B" standard units .....  | 13        |
| 4.2 - 30RB 162-262 "B" units with option 280 and 30RB 302-802 units .....                      | 14        |
| <b>5 - ELECTRICAL DATA - 30RB.....</b>   | <b>15</b> |
| 5.1 - 162-262 "B" standard (units and units with option 280) and 30RB 302-802 units.....       | 15        |
| 5.2 - Short-circuit stability current .....  | 15        |
| 5.3 - Electrical data, hydronic module (sizes 162 to 522) .....                                | 16        |
| 5.4 - Compressor usage and electrical data.....  | 17        |
| 5.5 - Electric power user reserve .....  | 17        |
| <b>6 - APPLICATION DATA .....</b>  | <b>18</b> |
| 6.1 - Unit operating range.....  | 18        |
| 6.2 - Minimum chilled water flow (units without hydronic module) .....                         | 18        |
| 6.3 - Maximum chilled water flow (units without hydronic module) .....                         | 19        |
| 6.4 - Variable flow evaporator .....   | 19        |
| 6.5 - Minimum system water volume.....   | 19        |
| 6.6 - Maximum system water volume .....  | 19        |
| 6.7 - Evaporator flow rate .....   | 19        |
| 6.8 - Pressure drop curves for the evaporator and standard entering/leaving water piping ..... | 20        |
| <b>7 - ELECTRICAL CONNECTION.....</b>  | <b>21</b> |
| 7.1 - Power supply .....   | 21        |
| 7.2 - Voltage phase imbalance (%) .....  | 21        |
| 7.3 - Power connection/disconnect switch.....  | 21        |
| 7.4 - Recommended wire sections .....  | 21        |
| 7.5 - Field control wiring .....   | 22        |
| 7.6 - Power supply .....   | 23        |
| <b>8 - WATER CONNECTIONS.....</b>  | <b>23</b> |
| 8.1 - Operating precautions and recommendations.....   | 23        |
| 8.2 - Hydronic connections .....   | 24        |
| 8.3 - Flow control .....   | 26        |
| 8.4 - Frost protection .....   | 26        |
| 8.5 - Operation of two units in master/slave mode .....  | 27        |

|   |           |
|---|-----------|
| <b>9 - NOMINAL SYSTEM WATER FLOW CONTROL .....</b>                                      | <b>28</b> |
| 9.1 - Water flow control procedure .....  | 28        |
| 9.2 - Pump pressure/flow rate curves.....   | 29        |
| 9.3 - Available static system pressure .....  | 31        |
| <b>10 - MAJOR SYSTEM COMPONENTS.....</b>  | <b>35</b> |
| 10.1 - Compressors.....   | 35        |
| 10.2 - Lubricant .....  | 35        |
| 10.3 - Condensers.....  | 35        |
| 10.4 - Fans .....   | 35        |
| 10.5 - Electronic expansion valve (EXV) .....   | 35        |
| 10.6 - Moisture indicator.....  | 35        |
| 10.7 - Filter drier .....   | 35        |
| 10.8 - Evaporator .....   | 35        |
| 10.9 - Refrigerant .....  | 36        |
| 10.10 - High-pressure safety switch .....   | 36        |
| 10.11 - Fan arrangement.....  | 37        |
| 10.12 - Fan stages .....  | 37        |
| <b>11 - OPTIONS AND ACCESSORIES.....</b>  | <b>38</b> |
| 11.1 - Free-cooling system (option 118A).....   | 38        |
| 11.2 - Total heat reclaim (option 50).....  | 38        |
| 11.3 - Partial heat reclaim using desuperheaters (option 49) .....                      | 43        |
| 11.4 - Units with fans with available pressure for indoor installation (option 12)..... | 49        |
| 11.5 - Brine option .....   | 56        |
| 11.6 - Unit storage above 48°C (option 241) .....                                       | 57        |
| 11.7 - Other options and accessories .....  | 58        |
| <b>12 - STANDARD MAINTENANCE.....</b>   | <b>59</b> |
| 12.1 - Level 1 maintenance (see note opposite).....                                     | 59        |
| 12.2 - Level 2 maintenance (see note opposite).....                                     | 59        |
| 12.3 - Level 3 (or higher) maintenance (see note below) .....                           | 59        |
| 12.4 - Tightening torques for the main electrical connections.....                      | 60        |
| 12.5 - Tightening torques for the main bolts and screws .....                           | 60        |
| 12.6 - Condenser coil.....  | 60        |
| 12.7 - Evaporator maintenance .....   | 61        |
| 12.8 - Characteristics of R-410A .....  | 61        |
| <b>13 - START-UP CHECKLIST FOR 30RB LIQUID CHILLERS (USE FOR JOB FILE) .....</b>        | <b>62</b> |

**The cover photograph is for illustrative purposes only and is not part of any offer for sale or contract.**

## 1 - INTRODUCTION

Prior to the initial start-up of the 30RB units, the people involved should be thoroughly familiar with these instructions and with the technical characteristics of the installation site.

30RB chillers are designed to provide a very high safety and reliability level making installation, start-up, operation and maintenance easier and more secure. They will provide safe and reliable service if used within their application range.

The procedures in this manual are arranged in the sequence required for machine installation, start-up, operation and maintenance.

Be sure you understand and follow the procedures and safety precautions contained in the instructions supplied with the machine, as well as those listed in this guide, such as: protective clothing such as gloves, safety glasses, safety shoes and appropriate tools, and suitable qualifications (electrical, air conditioning, local legislation).

To find out, if these products comply with European directives (machine safety, low voltage, electromagnetic compatibility, equipment under pressure etc.) check the declarations of conformity for these products.

### 1.1 - Check equipment received

- Check that the unit has not been damaged during transport and that no parts are missing. If the unit has been damaged or the shipment is incomplete, send a claim to the shipping company.
- Compare the name plate data with the order. The name plate is attached in two places to the unit:
  - on one of the unit sides on the outside,
  - on the control box door on the inside.
- The unit name plate must include the following information:
  - Model number - size
  - CE marking
  - Serial number
  - Year of manufacture and pressure and leak tightness test date
  - Refrigerant used
  - Refrigerant charge per circuit
  - PS: Min./max. allowable pressure (high and low pressure side)
  - TS: Min./max. allowable temperature (high and low pressure side)
  - Pressure switch cut-out pressure
  - Unit leak test pressure
  - Voltage, frequency, number of phases
  - Maximum current drawn
  - Maximum power input
  - Unit net weight
- Confirm that all accessories ordered for on-site installation have been delivered, are complete and undamaged.

***The unit must be checked periodically, if necessary removing the insulation (thermal, acoustic), during its whole operating life to ensure that no shocks (handling accessories, tools etc.) have damaged it. If necessary, the damaged parts must be repaired or replaced. See also chapter "Maintenance".***

## 1.2 - Installation safety considerations

After the unit has been received, and before it is started up, it must be inspected for damage. Check that the refrigerant circuits are intact, especially that no components or pipes have shifted or been damaged (e.g. following a shock). If in doubt, carry out a leak tightness check. If damage is detected upon receipt, immediately file a claim with the shipping company.

***Do not remove the skid or the packaging until the unit is in its final position. These units can be moved with a fork lift truck, as long as the forks are positioned in the right place and direction on the unit.***

***The units can also be lifted with slings, using only the designated lifting points marked on the unit (labels on the chassis and a label with all unit handling instructions are attached to the unit).***

***Use slings with the correct capacity, and always follow the lifting instructions on the certified drawings supplied for the unit.***

***Safety is only guaranteed, if these instructions are carefully followed. If this is not the case, there is a risk of material deterioration and injuries to personnel.***

### **DO NOT COVER ANY PROTECTION DEVICES.**

***This applies to fuse plugs and safety valves (if used) in the refrigerant or heat transfer medium circuits. Check if the original protection plugs are still present at the valve outlets. These plugs are generally made of plastic and should not be used. If they are still present, please remove them. Install devices at the valve outlets or drain piping that prevent the penetration of foreign bodies (dust, building debris, etc.) and atmospheric agents (water can form rust or ice). These devices, as well as the drain piping, must not impair operation and not lead to a pressure drop that is higher than 10% of the control pressure.***

### **Classification and control**

***In accordance with the Pressure Equipment Directive and national usage monitoring regulations in the European Union the protection devices for these machines are classified as follows:***

|                                 | Safety accessory* | Damage limitation accessory** in case of an external fire |
|---------------------------------|-------------------|---|
| <b>Refrigerant side</b>         |                   |   |
| High-pressure switch            | x                 |   |
| External relief valve***        |                   | x   |
| Rupture disk                    |                   | x   |
| Fuse plug                       |                   | x   |
| <b>Heat transfer fluid side</b> |                   |   |
| External relief valve****       | x                 | x   |

\* Classified for protection in normal service situations.

\*\* Classified for protection in abnormal service situations.

\*\*\* The instantaneous over-pressure limited to 10% of the operating pressure does not apply to this abnormal service situation. The control pressure can be higher than the service pressure. In this case either the design temperature or the high-pressure switch ensures that the service pressure is not exceeded in normal service situations.

\*\*\*\* The classification of these safety valves must be made by the personnel that completes the whole hydronic installation.

*Do not remove these valves and fuses, even if the fire risk is under control for a particular installation. There is no guarantee that the accessories are re-installed if the installation is changed or for transport with a gas charge.*

*All factory-installed safety valves are lead-sealed to prevent any calibration change.*

*The external safety valves must always be connected to drain pipes for units installed in a closed room. Refer to the installation regulations, for example those of European standard EN 378 and EN 13136.*

*These pipes must be installed in a way that ensures that people and property are not exposed to refrigerant leaks. As the fluids can be diffused in the air, ensure that the outlet is far away from any building air intake, or that they are discharged in a quantity that is appropriate for a suitably absorbing environment.*

*Safety valves must be checked periodically. See paragraph "Repair safety considerations".*

*Provide a drain in the drain pipe, close to each safety valve, to avoid an accumulation of condensate or rain water.*

*All precautions concerning handling of refrigerant must be observed in accordance with local regulations.*

### **1.3 - Equipment and components under pressure**

These products incorporate equipment or components under pressure, manufactured by Carrier or other manufacturers. We recommend that you consult your appropriate national trade association or the owner of the equipment or components under pressure (declaration, re-qualification, retesting, etc.). The characteristics of this equipment/these components are given on the nameplate or in the required documentation, supplied with the products.

These units comply with the European Pressure Equipment Directive.

### **1.4 - Maintenance safety considerations**

Engineers working on the electric or refrigeration components must be authorized, trained and fully qualified to do so.

All refrigerant circuit work must be carried out by a trained person, fully qualified to work on these units. He must have been trained and be familiar with the equipment and the installation. All welding operations must be carried out by qualified specialists.

Aquasnap Puron units use high-pressure R-410A refrigerant (the unit operating pressure is above 40 bar, the pressure at 35°C air temperature is 50% higher than for R-22). Special equipment must be used when working on the refrigerant circuit (pressure gauge, charge transfer, etc.).

*Any manipulation (opening or closing) of a shut-off valve must be carried out by a qualified and authorised engineer, observing applicable standards (e.g. during draining operations). The unit must be switched off during all operations.*

*NOTE: The unit must never be left shut down with the liquid line valve closed, as liquid refrigerant can be trapped between this valve and the expansion device and lead to the risk of a pressure increase. This valve is situated on the liquid line before the filter drier box.*

*During any handling, maintenance and service operations the engineers working on the unit must be equipped with safety gloves, glasses, shoes and protective clothing.*

*Never work on a unit that is still energized. Never work on any of the electrical components, until the general power supply to the unit has been cut.*

*If any maintenance operations are carried out on the unit, lock the power supply circuit in the open position ahead of the machine.*

*If the work is interrupted, always ensure that all circuits are still deenergised before resuming the work.*

*ATTENTION: Even if the unit has been switched off, the power circuit remains energised, unless the unit or circuit disconnect switch is open. Refer to the wiring diagram for further details. Attach appropriate safety labels.*

*It is recommended to install an indicating device to show if part of the refrigerant has leaked from the valve. The presence of oil at the outlet orifice is a useful indicator that refrigerant has leaked. Keep this orifice clean to ensure that any leaks are obvious. The calibration of a valve that has leaked is generally lower than its original calibration. The new calibration may affect the operating range. To avoid nuisance tripping or leaks, replace or re-calibrate the valve.*

#### **OPERATING CHECKS:**

- **IMPORTANT INFORMATION REGARDING THE REFRIGERANT USED:**  
*This product contains fluorinated greenhouse gas covered by the Kyoto protocol.*  
**Refrigerant type: R410A**  
**Global Warming Potential (GWP): 1975**  
*Periodic inspections for refrigerant leaks may be required depending on European or local legislation. Please contact your local dealer for more information.*
- *During the life-time of the system, inspection and tests must be carried out in accordance with national regulations.*

#### **Protection device checks:**

- *If no national regulations exist, check the protection devices on site in accordance with standard EN378: once a year for the high-pressure switches, every five years for external safety valves.*
- *Check manual "30RB/RQ Pro-Dialog Plus control" for a detailed explanation of the high-pressure switch test method.*

*If the machine operates in a corrosive environment, inspect the protection devices more frequently.*

*Regularly carry out leak tests and immediately repair any leaks.*

***Ensure regularly that the vibration levels remain acceptable and close to those at the initial unit start-up.***

***Before opening a refrigerant circuit, purge and consult the pressure gauges.***

***Change the refrigerant after an equipment failure, following a procedure such as the one described in NF E29-795 or carry out a refrigerant analysis in a specialist laboratory.***

***If the refrigerant circuit remains open for longer than a day after an intervention (such as a component replacement), the openings must be plugged and the circuit must be charged with nitrogen (inertia principle). The objective is to prevent penetration of atmospheric humidity and the resulting corrosion on the internal walls and on non-protected steel surfaces.***

### **1.5 - Repair safety considerations**

All installation parts must be maintained by the personnel in charge, in order to avoid deterioration and injury. Faults and leaks must be repaired immediately. The authorised technician must have the responsibility to repair the fault immediately. After each repair of the unit, check the operation of the protection devices and create a report of the parameter operation at 100%.

Comply with the regulations and recommendations in unit and HVAC installation safety standards, such as: EN 378, ISO 5149, etc.

***Never use air or a gas containing oxygen during leak tests to purge lines or to pressurise a machine. Pressurised air mixtures or gases containing oxygen can be the cause of an explosion. Oxygen reacts violently with oil and grease.***

***Only use dry nitrogen for leak tests, possibly with an appropriate tracer gas.***

***If the recommendations above are not observed, this can have serious or even fatal consequences and damage the installation.***

***Never exceed the specified maximum operating pressures. Verify the allowable maximum high- and low-side test pressures by checking the instructions in this manual and the pressures given on the unit name plate.***

***Do not unweld or flame-cut the refrigerant lines or any refrigerant circuit component until all refrigerant (liquid and vapour) as well as the oil have been removed from the chiller. Traces of vapour should be displaced with dry nitrogen. Refrigerant in contact with an open flame produces toxic gases.***

***The necessary protection equipment must be available, and appropriate fire extinguishers for the system and the refrigerant type used must be within easy reach.***

***Do not siphon refrigerant.***

***Avoid spilling liquid refrigerant on skin or splashing it into the eyes. Use safety goggles and safety gloves. Wash any spills from the skin with soap and water. If liquid refrigerant enters the eyes, immediately and abundantly flush the eyes with water and consult a doctor. Never apply an open flame or live steam to a refrigerant container. Dangerous overpressure can result.***

***During refrigerant removal and storage operations follow applicable regulations. These regulations, permitting conditioning and recovery of halogenated hydrocarbons under optimum quality conditions for the products and optimum safety conditions for people, property and the environment are described in standard NF E29-795.***

***Refer to the certified dimensional drawings for the units.***

***It is dangerous and illegal to re-use disposable (non-returnable) cylinders or attempt to refill them. When cylinders are empty, evacuate the remaining gas pressure, and move them to a designated place for recovery. Do not incinerate.***

***Do not attempt to remove refrigerant circuit components or fittings, while the machine is under pressure or while it is running. Be sure pressure is at 0 kPa and that the unit has been shut-down and de-energised before removing components or opening a circuit.***

***Do not attempt to repair or recondition any safety devices when corrosion or build-up of foreign material (rust, dirt, scale, etc.) is found within the valve body or mechanism. If necessary, replace the device. Do not install safety valves in series or backwards.***

***ATTENTION: No part of the unit must be used as a walkway, rack or support. Periodically check and repair or if necessary replace any component or piping that shows signs of damage.***

***Do not step on refrigerant lines. The lines can break under the weight and release refrigerant, causing personal injury.***

***Do not climb on a machine. Use a platform, or staging to work at higher levels.***

***Use mechanical lifting equipment (crane, hoist, winch, etc.) to lift or move heavy components. For lighter components, use lifting equipment when there is a risk of slipping or losing your balance.***

***Use only original replacement parts for any repair or component replacement. Consult the list of replacement parts that corresponds to the specification of the original equipment.***

***Do not drain water circuits containing industrial brines, without informing the technical service department at the installation site or a competent body first.***

***Close the entering and leaving water shutoff valves and purge the unit hydronic circuit, before working on the components installed on the circuit (screen filter, pump, water flow switch, etc.).***

*Periodically inspect all valves, fittings and pipes of the refrigerant and hydronic circuits to ensure that they do not show any corrosion or any signs of leaks.*

*It is recommended to wear ear defenders, when working near the unit and the unit is in operation.*

## 2 - MOVING AND SITING THE UNIT


### 2.1 - Moving

*See chapter 1.1 “Installation safety considerations”.*

In some cases vertical supports are added for the transport and handling of the unit. These supports must be removed for access or connection, if required.

**IMPORTANT:** Follow the disassembly sequence shown in the disassembly instruction notes.

- Unscrew screws marked 1 and 2
- Loosen screw 3, and lift and remove support 4
- Unscrew screw 5 and loosen screw 6.
- Lift and remove support 7.
- Unscrew screw 8 and remove plate 9.

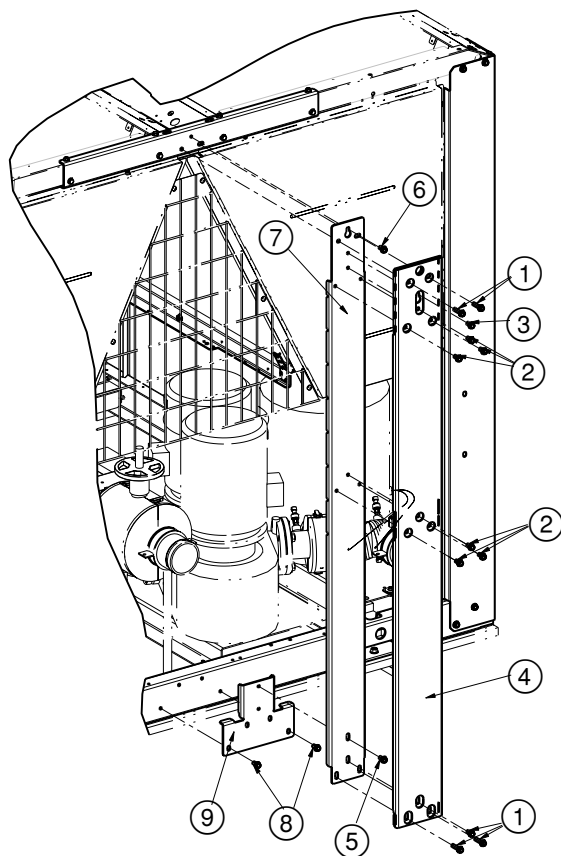

Keep the vertical supports after commissioning the units and re-insert them when the unit is moved.

### 2.2 - Siting the unit

The machine must be installed in a place that is not accessible to the public or protected against access by non-authorised persons.

*In case of extra-high units the machine environment must permit easy access for maintenance operations.*

*Always refer to the chapter “Dimensions and clearances” to confirm that there is adequate space for all connections and service operations. For the centre of gravity coordinates, the position of the unit mounting holes, and the weight distribution points, refer to the certified dimensional drawing supplied with the unit.*

*Typical applications of these units do not require earthquake resistance. Earthquake resistance has not been verified.*

**CAUTION:** Only use slings at the designated lifting points which are marked on the unit.

Before siting the unit check that:

- the permitted loading at the site is adequate or that appropriate strengthening measures have been taken.
- the unit is installed level on an even surface (maximum tolerance is 5 mm in both axes).
- there is adequate space above the unit for air flow and to ensure access to the components (see dimensional drawings).
- the number of support points is adequate and that they are in the right places.
- the location is not subject to flooding.
- for outdoor installations, where heavy snowfall is likely and long periods of sub-zero temperatures are normal, provision has to be made to prevent snow accumulating by raising the unit above the height of drifts normally experienced. Baffles may be necessary to deflect strong winds. They must not restrict air flow into the unit.

**CAUTION:** Before lifting the unit, check that all casing panels are securely fixed in place. Lift and set down the unit with great care. Tilting and jarring can damage the unit and impair unit operation.

If 30RB units are hoisted with rigging, it is advisable to protect coils against crushing while a unit is being moved. Use struts or a lifting beam to spread the slings above the unit. Do not tilt a unit more than 15°.

**WARNING:** Never push or lever on any of the enclosure panels of the unit. Only the base of the unit frame is designed to withstand such stresses.

*If a unit includes a hydronic module (options 116B, C, F, G, M, N P, Q), the hydronic module and pump piping must be installed in a way that does not submit it to any strain. The hydronic module pipes must be fitted so that the pump does not support the weight of the pipes.*

### 2.3 - Checks before system start-up

Before the start-up of the refrigeration system, the complete installation, including the refrigeration system must be verified against the installation drawings, dimensional drawings, system piping and instrumentation diagrams and the wiring diagrams.

During the installation test national regulations must be followed. If the national regulation does not specify any details, refer to standard EN 378-2 as follows:


External visual installation checks:

- Compare the complete installation with the refrigeration system and power circuit diagrams.
- Check that all components comply with the design specifications.
- Check that all protection documents and equipment provided by the manufacturer (dimensional drawings, P&ID, declarations etc.) to comply with the regulations are present.
- Verify that the environmental safety and protection and devices and arrangements provided by the manufacturer to comply with the regulations are in place.
- Verify that all documents for pressure containers, certificates, name plates, files, instruction manuals provided by the manufacturer to comply with the regulations are present.
- Verify the free passage of access and safety routes.
- Verify the instructions and directives to prevent the deliberate removal of refrigerant gases.
- Verify the installation of connections.
- Verify the supports and fixing elements (materials, routing and connection).
- Verify the quality of welds and other joints.
- Check the protection against mechanical damage.
- Check the protection against heat.
- Check the protection of moving parts.
- Verify the accessibility for maintenance or repair and to check the piping.
- Verify the status of the valves.
- Verify the quality of the thermal insulation.


**IMPORTANT:** The compressor assemblies are “floating” on rubber blocks between the unit chassis and the sub-assembly chassis (they are not visible). To protect the piping during transport, a flange is installed in the factory.

**This flange must be removed on site.**

**The flange is identified by red rings. A label attached to the compressor sub-assembly warns the installer.**

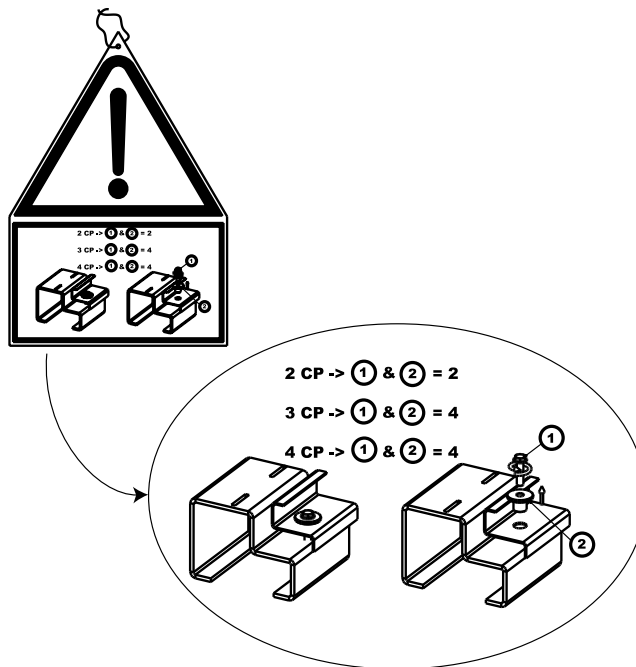

Compressor flange to be removed

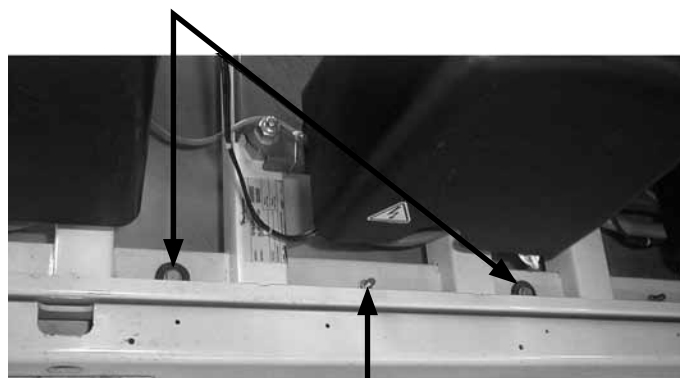


Chassis fixing to be kept




### 3 - DIMENSIONS, CLEARANCES

For the heat reclaim condenser option, please refer to the relevant chapter.



#### 3.1 - 30RB 162-262 “B”, standard units

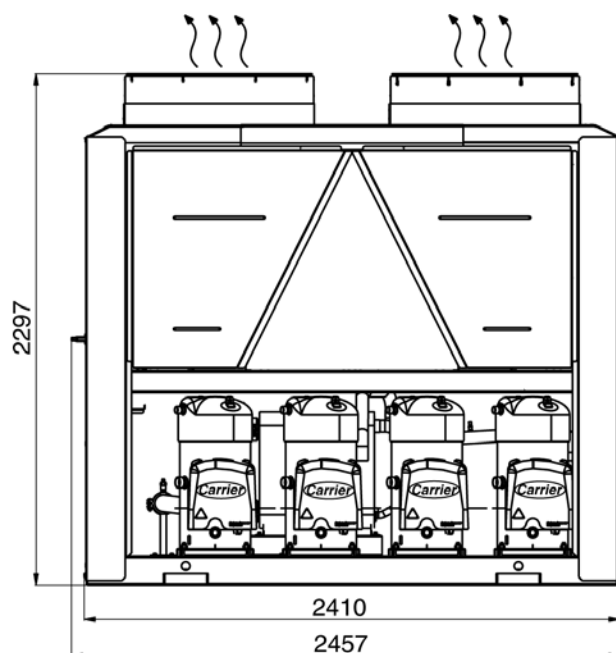

**With hydronic module**

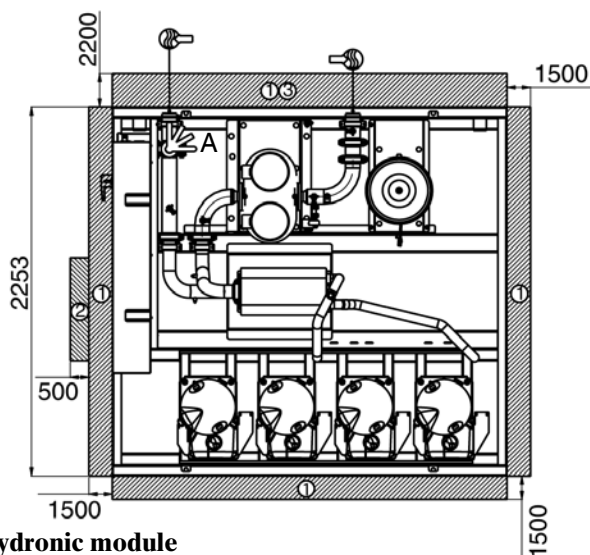

**Without hydronic module**

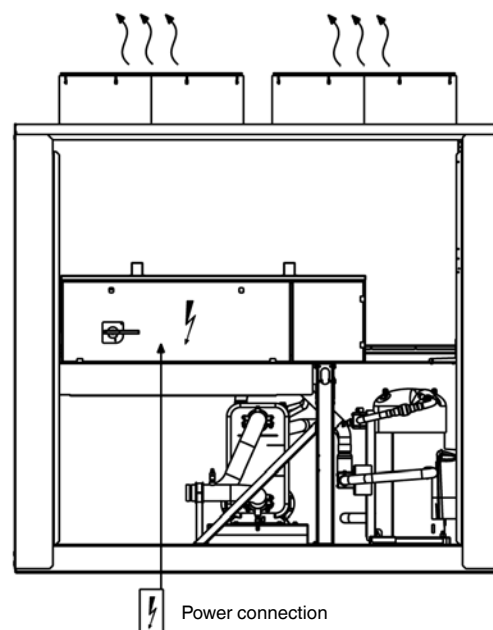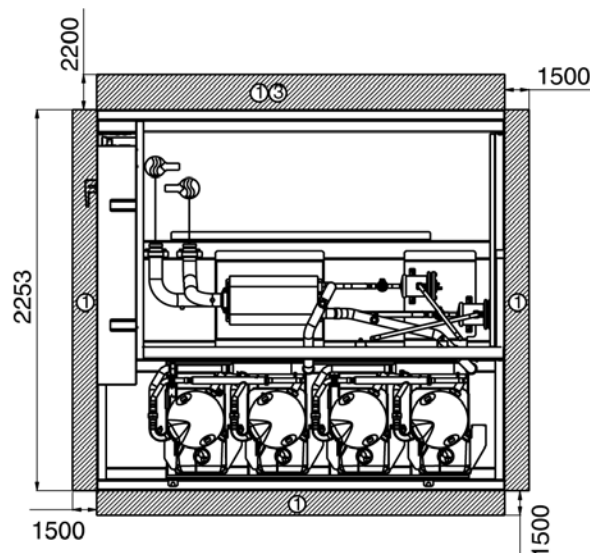

#### Legend:

All dimensions are in mm.

- ① Clearances required for maintenance and air flow
- ② Clearances recommended for evaporator tube removal
- ③ Clearances recommended for heat exchanger removal

Water inlet

Water outlet

Air outlet, do not obstruct


Control box

| Options 116 | B, C, F, G | M, N, P, Q    |
|-------------|------------|---------------|
| A           | with valve | without valve |


**NOTE: Non-contractual drawings.**

**When designing an installation, refer to the certified dimensional drawings, available on request.**


**For the positioning of the fixing points, weight distribution points and centre of gravity coordinates please refer to the dimensional drawings.**

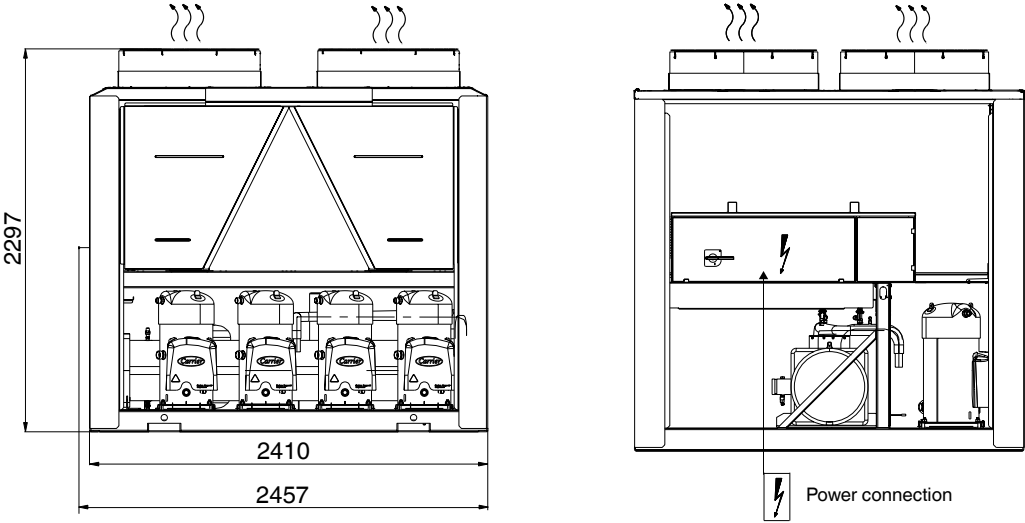

With hydronic module

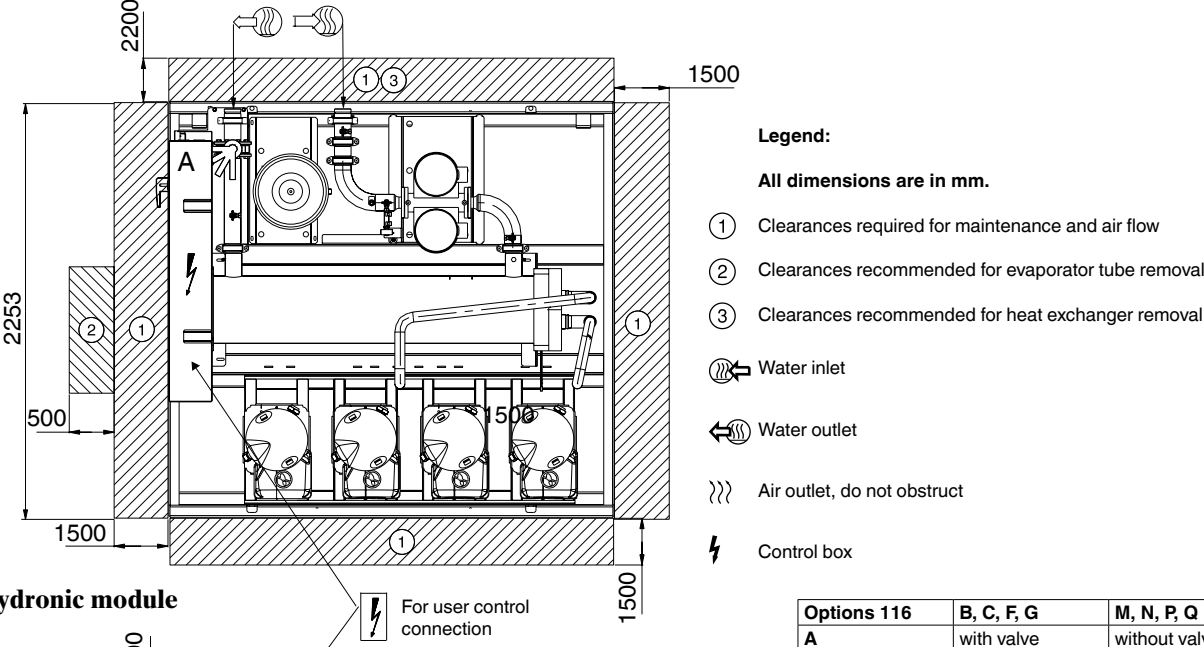

Without hydronic module

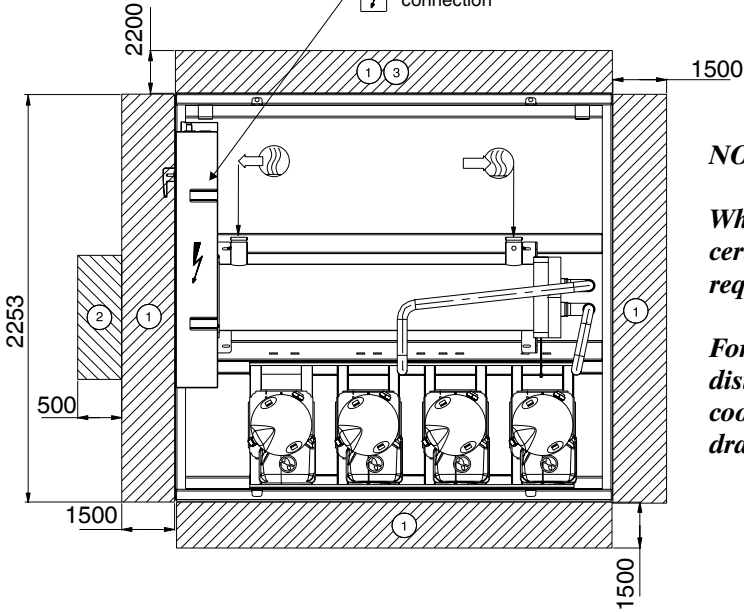


| Options 116 | B, C, F, G | M, N, P, Q    |
|-------------|------------|---------------|
| A           | with valve | without valve |

NOTE: Non-contractual drawings.

When designing an installation, refer to the certified dimensional drawings, available on request.


For the positioning of the fixing points, weight distribution points and centre of gravity coordinates please refer to the dimensional drawings.

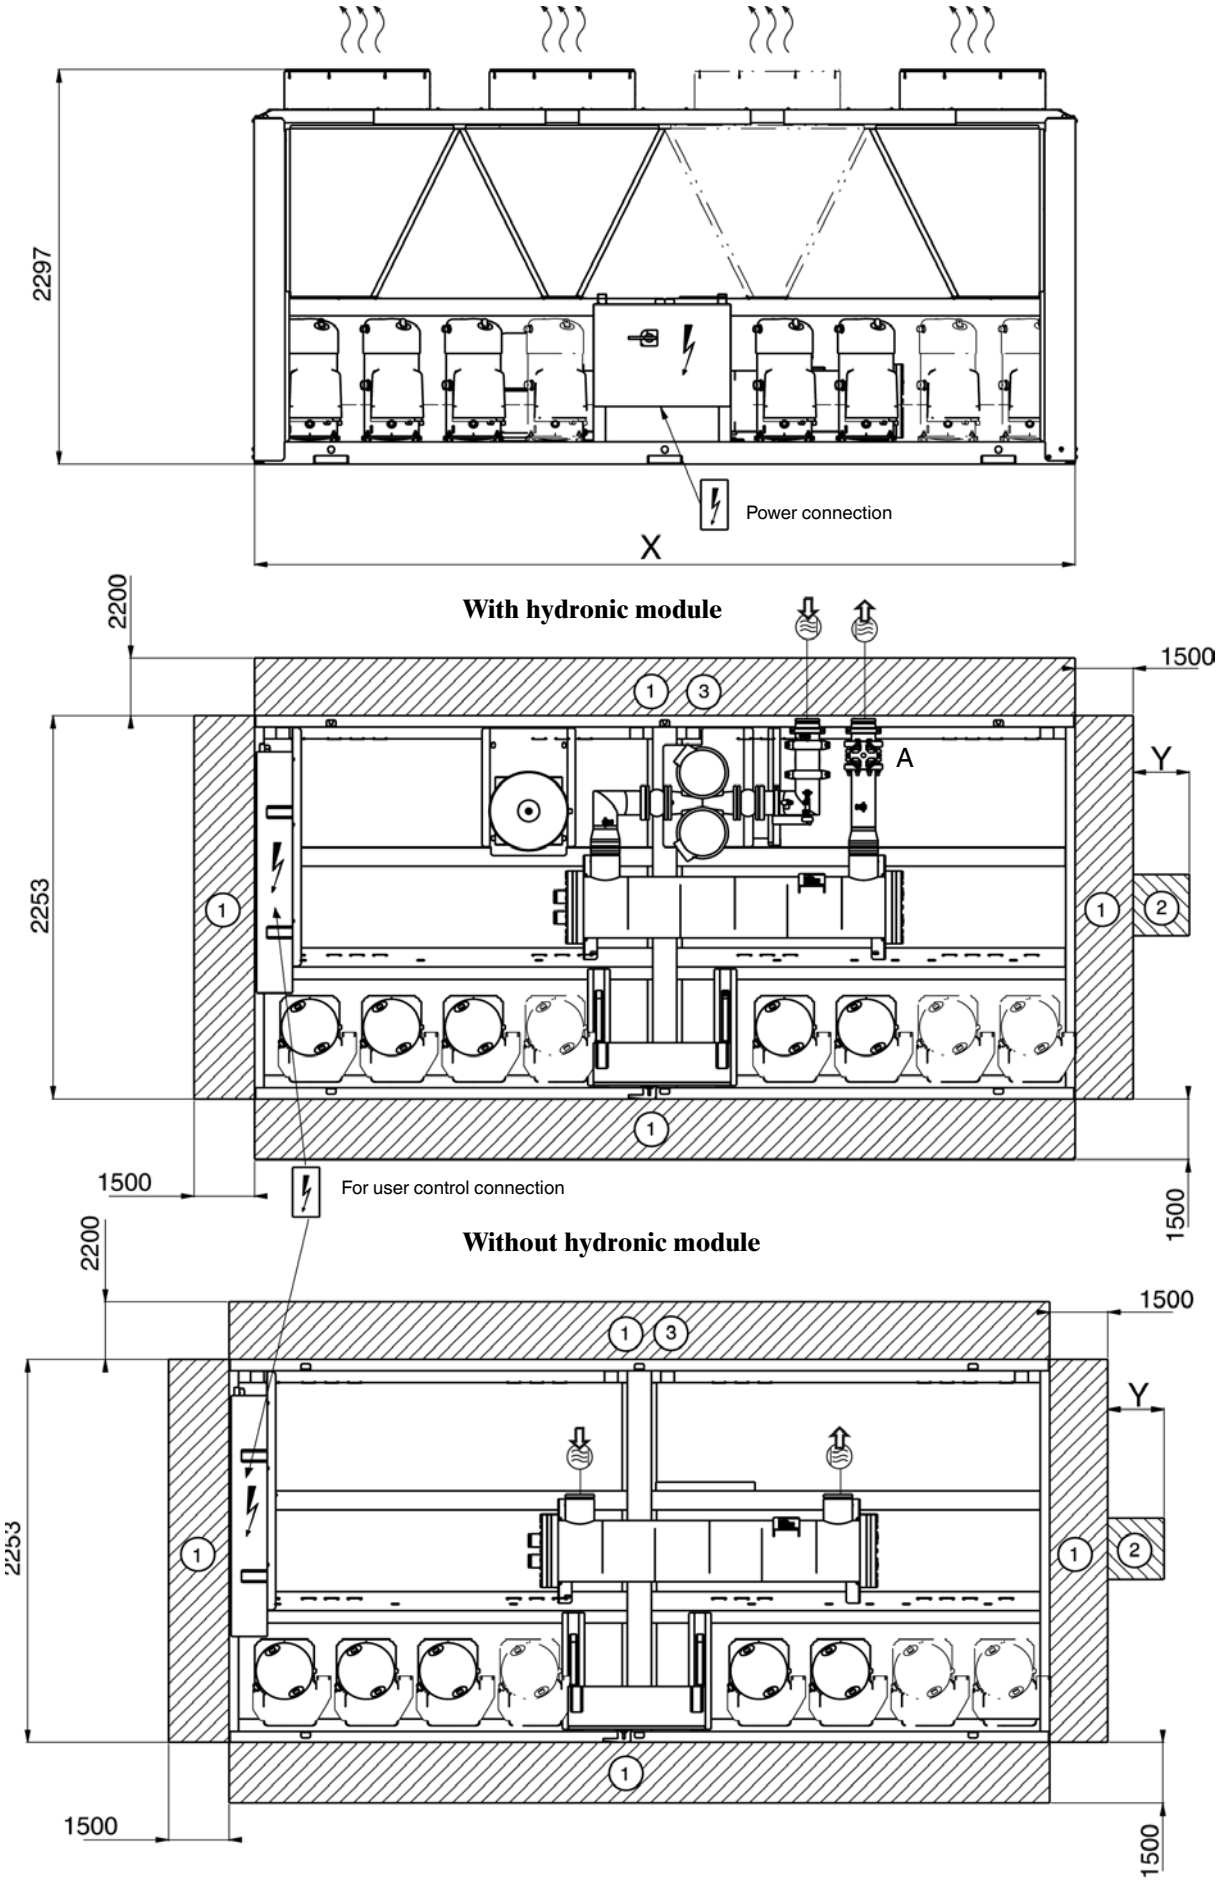

|             |            |               |
|-------------|------------|---------------|
| Options 116 | B, C, F, G | M, N, P, Q    |
| A           | with valve | without valve |

|         |      |     |
|---------|------|-----|
| 30RB    | X    | Y   |
| 302-402 | 3604 | 200 |
| 432-522 | 4798 | 0   |

3.4 - 30RB 602-802

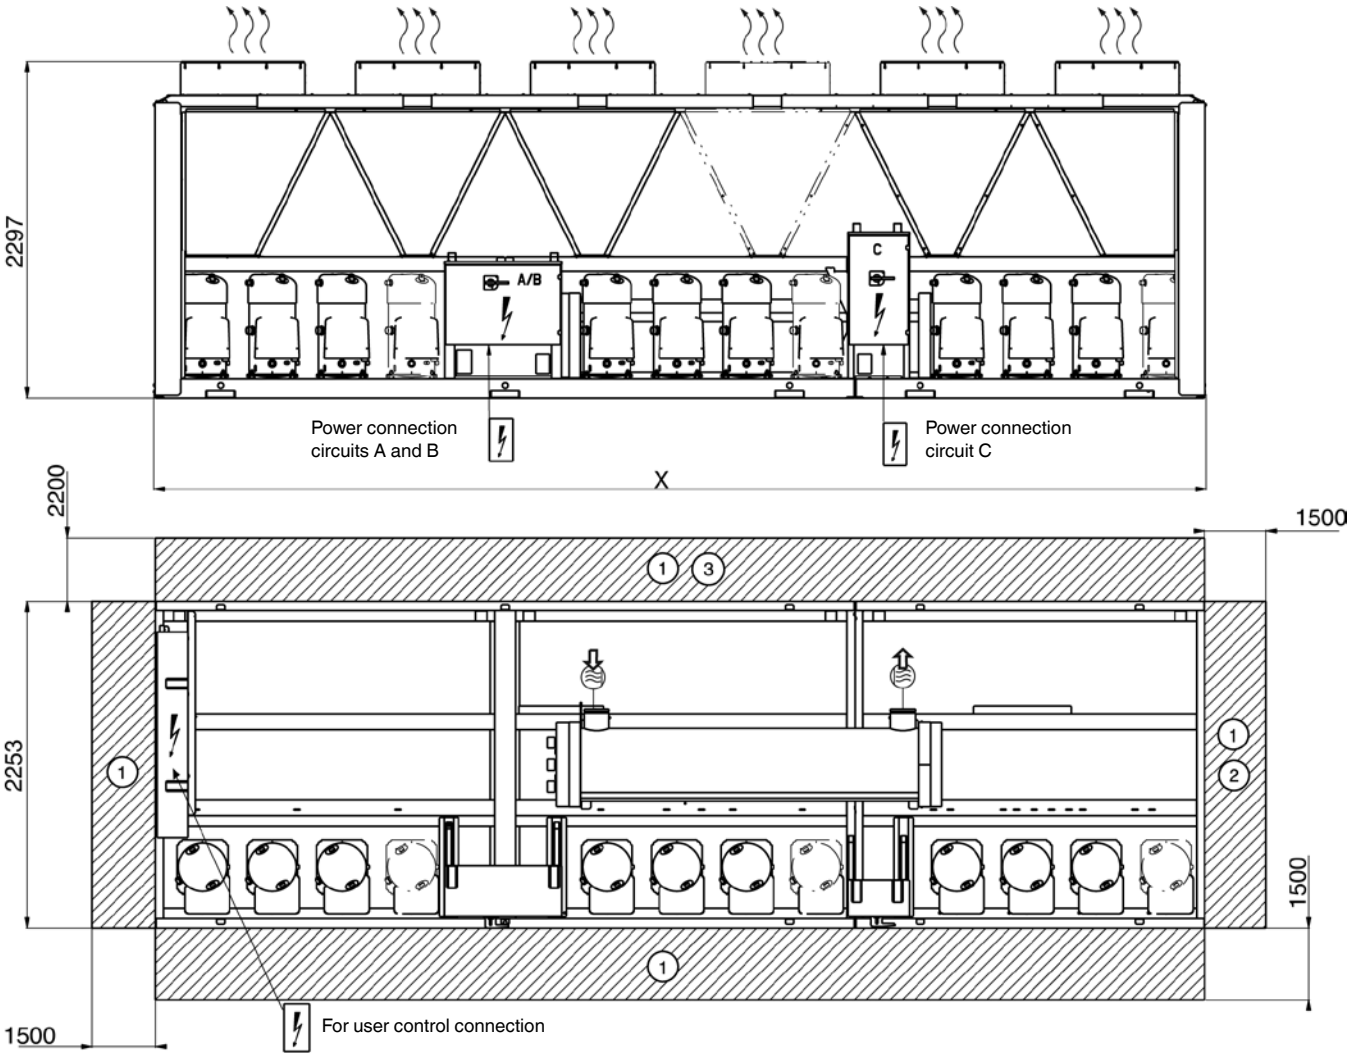

Legend:  
All dimensions are in mm.

| 30RB    | X    |
|---------|------|
| 602-672 | 5992 |
| 732-802 | 7186 |

- ① Clearances required for maintenance and air flow
- ② Clearances recommended for evaporator tube removal
- ③ Clearances recommended for heat exchanger removal

- Water inlet
- Water outlet
- Air outlet, do not obstruct
- Control box


NOTE: Non-contractual drawings.

When designing an installation, refer to the certified dimensional drawings, available on request.

For the positioning of the fixing points, weight distribution points and centre of gravity coordinates please refer to the dimensional drawings.

3.5 - Multiple chiller installation

NOTE: If the walls are higher than 2 m, contact the factory

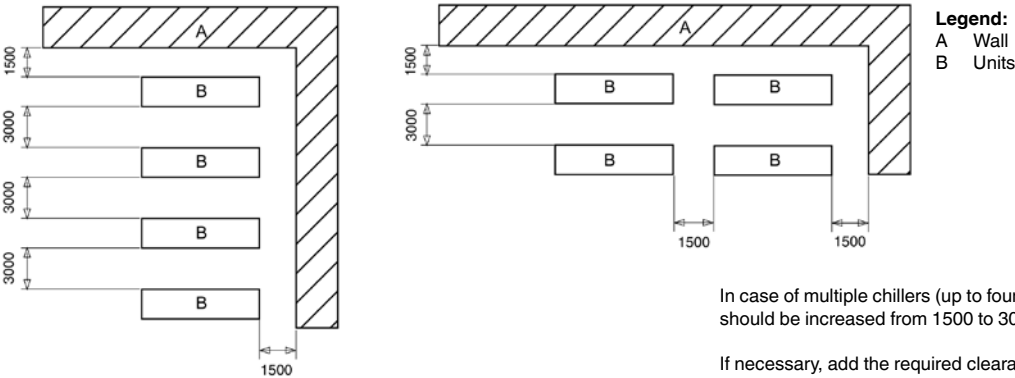

In case of multiple chillers (up to four units), the respective clearance between them should be increased from 1500 to 3000 mm for the side space requirement.

If necessary, add the required clearances for evaporator tube or coil removal.

## 4 - PHYSICAL DATA - 30RB

### 4.1 - 30RB 162-262 "B" standard units

| 30RB   |       | 162   | 182   | 202   | 232   | 262   |
|--|-------|---|-------|-------|-------|-------|
| <b>Operating weight*</b>   |       |   |       |       |       |       |
| Standard unit + option 15 + high-pressure dual-pump hydronic module option | kg    | 1561  | 1671  | 1770  | 1818  | 1993  |
| Unit with option 15  | kg    | 1385  | 1495  | 1594  | 1634  | 1809  |
| Standard unit**  | kg    | 1310  | 1420  | 1519  | 1539  | 1714  |
| <b>Sound levels</b>  |       |   |       |       |       |       |
| <b>Unit with option 15LS (very low noise level)</b>                        |       |   |       |       |       |       |
| Sound power level 10 <sup>-12</sup> W***                                   | dB(A) | 84  | 84    | 84    | 85    | 85    |
| Sound pressure level at 10 m distance****                                  | dB(A) | 52  | 52    | 52    | 53    | 53    |
| <b>Unit with option 15 (low noise level)</b>                               |       |   |       |       |       |       |
| Sound power level 10 <sup>-12</sup> W***                                   | dB(A) | 89  | 89    | 89    | 89    | 89    |
| Sound pressure level at 10 m distance****                                  | dB(A) | 57  | 57    | 57    | 57    | 57    |
| <b>Base unit without option 15 and without hydronic module</b>             |       |   |       |       |       |       |
| Sound power level 10 <sup>-12</sup> W***                                   | dB(A) | 91  | 91    | 91    | 91    | 91    |
| Sound pressure level at 10 m distance****                                  | dB(A) | 59  | 59    | 59    | 59    | 59    |
| <b>Compressors</b>   |       | Hermetic scroll, 48,3 r/s   |       |       |       |       |
| Circuit A  |       | 1   | 1     | 1     | 2     | 2     |
| Circuit B  |       | 2   | 2     | 2     | 2     | 2     |
| Circuit C  |       | -   | -     | -     | -     | -     |
| No. of control stages  |       | -   | -     | -     | -     | 4     |
| <b>Refrigerant</b>   |       | R-410A  |       |       |       |       |
| Circuit A  | kg    | 8.8   | 11.6  | 11.6  | 14.0  | 13.2  |
| Circuit B  | kg    | 13.0  | 13.0  | 12.9  | 13.5  | 12.9  |
| <b>Control</b>   |       | Pro-Dialog Plus   |       |       |       |       |
| Minimum capacity   | %     | 33  | 28    | 33    | 25    | 25    |
| <b>Condensers</b>  |       | All aluminium micro-channel heat exchanger (MCHX)   |       |       |       |       |
| <b>Fans</b>  |       | Axial Flying Bird 4 with rotating shroud  |       |       |       |       |
| Quantity   |       | 3   | 4     | 4     | 4     | 4     |
| Total air flow   | l/s   | 13542   | 18056 | 18056 | 18056 | 18056 |
| Speed  | r/s   | 16  | 16    | 16    | 16    | 16    |
| <b>Evaporator</b>  |       | Twin-circuit plate heat exchanger   |       |       |       |       |
| Water volume   | l     | 10.76   | 10.76 | 12.64 | 16.38 | 16.69 |
| Max. water-side operating pressure without hydronic module                 | kPa   | 1000  | 1000  | 1000  | 1000  | 1000  |
| <b>Hydronic module (option)</b>  |       | Pump, Victaulic screen filter, safety valve, expansion tank, pressure gauge, water + air purge valves, flow control valve |       |       |       |       |
| Water pump   |       | Centrifugal, monocoil, low or high pressure (as required), 48.3 r/s, single or twinned dual pump (as required)            |       |       |       |       |
| Quantity   |       | 1   | 1     | 1     | 1     | 1     |
| Expansion tank volume  | l     | 50  | 50    | 50    | 50    | 50    |
| Max. water-side operating pressure with hydronic module                    | kPa   | 400   | 400   | 400   | 400   | 400   |
| <b>Water connections without hydronic module</b>                           |       | Victaulic   |       |       |       |       |
| Diameter   | inch  | 2-1/2   | 2-1/2 | 2-1/2 | 2-1/2 | 2-1/2 |
| Outside tube diameter  | mm    | 76.1  | 76.1  | 76.1  | 76.1  | 76.1  |
| <b>Water connections with hydronic module</b>                              |       | Victaulic   |       |       |       |       |
| Diameter   | inch  | 3   | 3     | 3     | 3     | 3     |
| Outside tube diameter  | mm    | 88.9  | 88.9  | 88.9  | 88.9  | 88.9  |
| <b>Chassis paint colour</b>  |       | Colour code: RAL 7035   |       |       |       |       |

\* Weight shown is a guideline only. To find out the unit refrigerant charge, please refer to the unit nameplate.

\*\* Standard unit = base unit without option 15 and hydronic module option.

\*\*\* In accordance with ISO 9614-1 and certified by Eurovent.

\*\*\*\* For information, calculated from the sound power level  $L_w(A)$ .

## 4.2 - 30RB 162-262 "B" units with option 280 and 30RB 302-802 units

| 30RB  |       | 162   | 182   | 202   | 232   | 262   | 302   | 342   | 372   | 402   | 432   | 462   | 522   | 602   | 672   | 732   | 802   |
|---|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| <b>Operating weight*</b>  |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| Standard unit + option 15 + high-pressure dual-pump hydronic module option  | kg    | 1896  | 2006  | 2093  | 2118  | 2292  | 2911  | 3102  | 3258  | 3358  | 3720  | 3977  | 4183  | -     | -     | -     | -     |
| Unit with option 15   | kg    | 1720  | 1830  | 1917  | 1934  | 2108  | 2606  | 2797  | 2913  | 3013  | 3375  | 3582  | 3768  | 4828  | 5091  | 5597  | 5861  |
| Standard unit**   | kg    | 1645  | 1755  | 1842  | 1839  | 2013  | 2489  | 2680  | 2779  | 2879  | 3224  | 3431  | 3600  | 4627  | 4873  | 5362  | 5609  |
| <b>Sound levels</b>   |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| <b>Unit with option 15LS (very low noise level)</b>   |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| Sound power level 10 <sup>-12</sup> W***  | dB(A) | 84    | 84    | 84    | 85    | 85    | 86    | 86    | 87    | 87    | 88    | 88    | 88    | 89    | 89    | 89    | 90    |
| Sound pressure level 10 m distance****  | dB(A) | 52    | 52    | 52    | 53    | 53    | 54    | 54    | 55    | 55    | 55    | 55    | 56    | 56    | 57    | 57    | 57    |
| <b>Unit with option 15 (low noise level)</b>  |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| Sound power level 10 <sup>-12</sup> W***  | dB(A) | 89    | 89    | 89    | 89    | 89    | 90    | 90    | 91    | 91    | 92    | 92    | 92    | 93    | 93    | 94    | 94    |
| Sound pressure level 10 m distance****  | dB(A) | 57    | 57    | 57    | 57    | 57    | 58    | 58    | 59    | 59    | 60    | 60    | 60    | 61    | 61    | 61    | 62    |
| <b>Base unit without option 15 and without hydronic module</b>  |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| Sound power level 10 <sup>-12</sup> W***  | dB(A) | 91    | 91    | 91    | 91    | 91    | 92    | 92    | 93    | 93    | 94    | 94    | 94    | 95    | 95    | 96    | 96    |
| Sound pressure level 10 m distance****  | dB(A) | 59    | 59    | 59    | 59    | 59    | 60    | 60    | 61    | 61    | 62    | 62    | 62    | 62    | 63    | 63    | 64    |
| <b>Compressors</b>  |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| Hermetic scroll, 48.3 r/s   |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| Circuit A   |       | 1     | 1     | 1     | 2     | 2     | 3     | 3     | 3     | 3     | 4     | 4     | 4     | 3     | 3     | 4     | 4     |
| Circuit B   |       | 2     | 2     | 2     | 2     | 2     | 2     | 2     | 3     | 3     | 3     | 3     | 4     | 3     | 3     | 4     | 4     |
| Circuit C   |       | -     | -     | -     | -     | -     | -     | -     | -     | -     | -     | -     | -     | 3     | 4     | 3     | 4     |
| No. of control stages   |       | -     | -     | -     | -     | 4     | 5     | 5     | 6     | 6     | 7     | 7     | 8     | 9     | 10    | 11    | 12    |
| <b>Refrigerant</b>  |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| R-410A  |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| Circuit A   | kg    | 9.2   | 11    | 11    | 13.5  | 13.5  | 18.5  | 19.5  | 19.5  | 19    | 24.3  | 24.5  | 24.5  | 21.5  | 21.5  | 26    | 26    |
| Circuit B   | kg    | 12.8  | 12.8  | 12.8  | 13    | 13    | 13    | 14    | 19.5  | 20    | 21.5  | 21.5  | 25.5  | 22    | 21.5  | 28    | 28    |
| Circuit C   | kg    | -     | -     | -     | -     | -     | -     | -     | -     | -     | -     | -     | -     | 23.5  | 28    | 24    | 31    |
| <b>Control</b>  |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| Pro-Dialog Plus   |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| Minimum capacity  | %     | 33    | 28    | 33    | 25    | 25    | 18    | 20    | 15    | 17    | 13    | 14    | 13    | 11    | 10    | 9     | 8     |
| <b>Condensers</b>   |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| All aluminium micro-channel heat exchanger (MCHX)   |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| <b>Fans</b>   |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| Axial Flying Bird 4 with rotating shroud  |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| Quantity  |       | 3     | 4     | 4     | 4     | 4     | 5     | 5     | 6     | 6     | 7     | 7     | 8     | 9     | 10    | 11    | 12    |
| Total air flow  | l/s   | 13542 | 18056 | 18056 | 18056 | 18056 | 22569 | 22569 | 27083 | 27083 | 31597 | 31597 | 36111 | 40623 | 45139 | 49653 | 54167 |
| Speed   | r/s   | 16    | 16    | 16    | 16    | 16    | 16    | 16    | 16    | 16    | 16    | 16    | 16    | 16    | 16    | 16    | 16    |
| <b>Evaporator</b>   |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| Direct expansion, shell-and-tube  |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| Water volume  | l     | 110   | 110   | 110   | 110   | 110   | 110   | 125   | 125   | 125   | 113   | 113   | 113   | 284   | 284   | 284   | 284   |
| Max. water-side operating pressure without hydronic module  | kPa   | 1000  | 1000  | 1000  | 1000  | 1000  | 1000  | 1000  | 1000  | 1000  | 1000  | 1000  | 1000  | 1000  | 1000  | 1000  | 1000  |
| <b>Hydronic module (option)</b>   |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| Pump, Victaulic screen filter, safety valve, expansion tank, pressure gauge, water + air purge valves, flow control valve |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| Centrifugal, monocell, low or high pressure (as required), 48.3 r/s, single or twinned dual pump (as required)            |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| Quantity  |       | 1     | 1     | 1     | 1     | 1     | 1     | 1     | 1     | 1     | 1     | 1     | 1     | -     | -     | -     | -     |
| Expansion tank volume   | l     | 50    | 50    | 50    | 50    | 50    | 80    | 80    | 80    | 80    | 80    | 80    | 80    | -     | -     | -     | -     |
| Max. water-side operating pressure with hydronic module   | kPa   | 400   | 400   | 400   | 400   | 400   | 400   | 400   | 400   | 400   | 400   | 400   | 400   | -     | -     | -     | -     |
| <b>Water connections without hydronic module</b>  |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| Victaulic   |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| Diameter  | inch  | 3     | 3     | 3     | 3     | 3     | 4     | 4     | 4     | 4     | 6     | 6     | 6     | 6     | 6     | 6     | 6     |
| Outside tube diameter   | mm    | 88.9  | 88.9  | 88.9  | 88.9  | 88.9  | 114.3 | 114.3 | 114.3 | 114.3 | 168.3 | 168.3 | 168.3 | 168.3 | 168.3 | 168.3 | 168.3 |
| <b>Water connections with hydronic module</b>   |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| Victaulic   |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| Diameter  | inch  | 3     | 3     | 3     | 3     | 3     | 4     | 4     | 4     | 4     | 5     | 5     | 5     | -     | -     | -     | -     |
| Outside tube diameter   | mm    | 88.9  | 88.9  | 88.9  | 88.9  | 88.9  | 114.3 | 114.3 | 114.3 | 114.3 | 139.7 | 139.7 | 139.7 | -     | -     | -     | -     |
| <b>Chassis paint colour</b>   |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
| Colour code: RAL 7035   |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |

\* Weight shown is a guideline only. To find out the unit refrigerant charge, please refer to the unit nameplate.

\*\* Standard unit = base unit without option 15 and hydronic module option.

\*\*\* In accordance with ISO 9614-1 and certified by Eurovent.

\*\*\*\* For information, calculated from the sound power level Lw(A).

## 5 - ELECTRICAL DATA - 30RB

### 5.1 - 162-262 “B” standard (units and units with option 280) and 30RB 302-802 units

| 30RB (without hydronic module)                             |         | 162                            | 182  | 202  | 232  | 262  | 302  | 342  | 372  | 402  | 432  | 462  | 522  | 602  | 672  | 732  | 802  |
|--|---------|--------------------------------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| <b>Power circuit</b>                                       |         |                                |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| Nominal power supply                                       | V-ph-Hz | 400-3-50                       |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| Voltage range  | V       | 360-440                        |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| <b>Control circuit supply</b>                              |         | 24 V, via internal transformer |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| <b>Nominal unit current draw*</b>                          |         |                                |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| Circuits A + B (one supply)                                | A       | 101                            | 113  | 129  | 135  | 167  | 185  | 209  | 227  | 251  | 269  | 293  | 334  | 251  | 251  | 334  | 334  |
| Circuit C (separate supply)                                | A       | -                              | -    | -    | -    | -    | -    | -    | -    | -    | -    | -    | -    | 125  | 167  | 125  | 167  |
| <b>Maximum unit power input**</b>                          |         |                                |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| Circuits A + B (one supply)                                | kW      | 76                             | 85   | 98   | 102  | 127  | 140  | 159  | 172  | 191  | 204  | 223  | 255  | 191  | 191  | 255  | 255  |
| Circuit C (separate supply)                                | kW      | -                              | -    | -    | -    | -    | -    | -    | -    | -    | -    | -    | -    | 96   | 127  | 96   | 127  |
| <b>Cosine phi, unit at max. capacity**</b>                 |         | 0.84                           | 0.84 | 0.84 | 0.84 | 0.84 | 0.84 | 0.84 | 0.84 | 0.84 | 0.84 | 0.84 | 0.84 | 0.84 | 0.84 | 0.84 | 0.84 |
| <b>Maximum unit current draw (Un-10%)*</b>                 |         |                                |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| Circuits A + B (one supply)                                | A       | 143                            | 159  | 183  | 191  | 239  | 263  | 299  | 323  | 359  | 383  | 419  | 478  | 359  | 359  | 478  | 478  |
| Circuit C (separate supply)                                | A       | -                              | -    | -    | -    | -    | -    | -    | -    | -    | -    | -    | -    | 179  | 239  | 179  | 239  |
| <b>Maximum unit current draw****</b>                       |         |                                |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| Circuits A + B (one supply)                                | A       | 131                            | 146  | 168  | 175  | 219  | 241  | 274  | 296  | 329  | 351  | 384  | 438  | 329  | 329  | 439  | 438  |
| Circuit C (separate supply)                                | A       | -                              | -    | -    | -    | -    | -    | -    | -    | -    | -    | -    | -    | 164  | 219  | 164  | 219  |
| <b>Maximum start-up current, standard unit (Un)†</b>       |         |                                |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| Circuits A + B   | A       | 304                            | 353  | 375  | 348  | 426  | 448  | 481  | 502  | 535  | 557  | 590  | 645  | 535  | 535  | 645  | 645  |
| Circuit C  | A       | -                              | -    | -    | -    | -    | -    | -    | -    | -    | -    | -    | -    | 371  | 426  | 371  | 426  |
| <b>Max. start-up current, unit with soft starter (Un)†</b> |         |                                |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| Circuits A + B†  | A       | 259                            | 283  | 305  | 277  | 356  | 378  | 411  | 433  | 466  | 489  | 521  | 575  | -    | -    | -    | -    |
| Circuit C  | A       | -                              | -    | -    | -    | -    | -    | -    | -    | -    | -    | -    | -    | -    | -    | -    | -    |

- \* Standardised Eurovent conditions: evaporator entering/leaving water temperature 12°C/7°C, outside air temperature 35°C, evaporator fouling factor  $0.18 \times 10^{-4} \text{ (m}^2\text{K)/W}$ .
- \*\* Power input, compressors and fans, at the unit operating limits (saturated suction temperature 10°C, saturated condensing temperature 65°C) and nominal voltage of 400 V (data given on the unit nameplate).
- \*\*\* Maximum unit operating current at maximum unit power input and 360 V.
- \*\*\*\* Maximum unit operating current at maximum unit power input and 400 V (values given on the unit nameplate).
- † Maximum instantaneous start-up current at operating limit values (maximum operating current of the smallest compressor(s) + fan current + locked rotor current of the largest compressor).
- Fan motor electrical data: current used in the tables below:  
Units at Eurovent conditions and motor ambient air temperature of 50°C at 400 V:  
3.8 A, start-up current 20 A, power input 1.75 kW.  
These values are those given on the motor nameplate.

### 5.2 - Short-circuit stability current

#### Short-circuit stability current (TN system)\*

| 30RB   |       | 162  | 182  | 202     | 232      | 262      | 302   | 342   | 372   | 402   | 432     | 462     | 522     | 602     | 672     | 732     | 802     |
|--|-------|------|------|---------|----------|----------|-------|-------|-------|-------|---------|---------|---------|---------|---------|---------|---------|
| <b>Unit without main disconnect (except for units 30RB 162 to 262, that are supplied with the disconnect switch installed as standard)</b> |       |      |      |         |          |          |       |       |       |       |         |         |         |         |         |         |         |
| <b>With fuses upstream - maximum fuse values assigned (gL/gG)</b>  |       |      |      |         |          |          |       |       |       |       |         |         |         |         |         |         |         |
| Circuits A and B   | A     | -    | -    | -       | -        | -        | 500   | 500   | 500   | 500   | 630/500 | 630/500 | 630/500 | 630/500 | 630/500 | 630/500 | 630/500 |
| Circuit C  | A     | -    | -    | -       | -        | -        | -     | -     | -     | -     | -       | -       | -       | 400     | 400     | 400     | 400     |
| <b>With fuses upstream - admissible rms current value (gL/gG)</b>  |       |      |      |         |          |          |       |       |       |       |         |         |         |         |         |         |         |
| Circuits A and B   | kA    | -    | -    | -       | -        | -        | 70    | 70    | 70    | 70    | 60/70   | 60/70   | 60/70   | 70      | 70      | 60/70   | 60/70   |
| Circuit C  | kA    | -    | -    | -       | -        | -        | -     | -     | -     | -     | -       | -       | -       | 60      | 60      | 60      | 60      |
| <b>Unit with optional main disconnect without fuse (standard for units 30RB 162 to 262, and option for units 30RB 302 to 802)</b>          |       |      |      |         |          |          |       |       |       |       |         |         |         |         |         |         |         |
| <b>Short-time assigned current I<sub>cn</sub>** (1s) rms value/peak I<sub>pk</sub>***</b>  |       |      |      |         |          |          |       |       |       |       |         |         |         |         |         |         |         |
| Circuits A and B   | kA/kA | 9/26 | 9/26 | 9/26    | 9/26     | 9/26     | 13/26 | 13/26 | 13/26 | 13/26 | 15/30   | 15/30   | 15/30   | 13/26   | 13/26   | 15/30   | 15/30   |
| Circuit C  | kA/kA | -    | -    | -       | -        | -        | -     | -     | -     | -     | -       | -       | -       | 13/26   | 13/26   | 13/26   | 13/26   |
| <b>With fuses upstream - maximum fuse values assigned (gL/gG)</b>  |       |      |      |         |          |          |       |       |       |       |         |         |         |         |         |         |         |
| Circuits A and B   | A     | 200  | 200  | 200/250 | 250/315† | 250/315† | 400   | 400   | 400   | 400   | 500     | 630     | 630     | 400     | 400     | 630     | 630     |
| Circuit C  | A     | -    | -    | -       | -        | -        | -     | -     | -     | -     | -       | -       | -       | 400     | 400     | 400     | 400     |
| <b>With fuses upstream - conditional short-circuit assigned current I<sub>cc</sub>/I<sub>cf</sub>††</b>                                    |       |      |      |         |          |          |       |       |       |       |         |         |         |         |         |         |         |
| Circuits A and B   | kA    | 50   | 50   | 50      | 50       | 50       | 50    | 50    | 50    | 50    | 50      | 50      | 50      | 50      | 50      | 50      | 50      |
| Circuit C  | kA    | -    | -    | -       | -        | -        | -     | -     | -     | -     | -       | -       | -       | 50      | 50      | 50      | 50      |
| <b>Unit with optional main disconnect with fuses (not available for units 30RB 162 to 262, and option for units 30RB 302 to 802)</b>       |       |      |      |         |          |          |       |       |       |       |         |         |         |         |         |         |         |
| <b>Short-circuit stability current I<sub>cc</sub>/I<sub>cf</sub>†† increased with fuses - maximum fuse values assigned (gL/gG)</b>         |       |      |      |         |          |          |       |       |       |       |         |         |         |         |         |         |         |
| Circuits A and B   | kA    | -    | -    | -       | -        | -        | 315   | 315   | 400   | 400   | 400     | 630     | 630     | 400     | 400     | 630     | 630     |
| Circuit C  | kA    | -    | -    | -       | -        | -        | -     | -     | -     | -     | -       | -       | -       | 250     | 250     | 250     | 250     |
| <b>Short-circuit stability current I<sub>cc</sub>/I<sub>cf</sub>†† increased with fuses - admissible rms current value (gL/gG)</b>         |       |      |      |         |          |          |       |       |       |       |         |         |         |         |         |         |         |
| Circuits A and B   | kA    | -    | -    | -       | -        | -        | 50    | 50    | 50    | 50    | 50      | 50      | 50      | 50      | 50      | 50      | 50      |
| Circuit C  | kA    | -    | -    | -       | -        | -        | -     | -     | -     | -     | -       | -       | -       | 50      | 50      | 50      | 50      |

- \* Type of system earthing
- \*\* I<sub>cn</sub>: assigned short-time current
- \*\*\* I<sub>pk</sub>: assigned current, admissible peak
- † For units with options 12 and 116 use the higher value.
- †† I<sub>cc</sub>/I<sub>cf</sub>: assigned conditional short-circuit current

#### IT system:

The short circuit current stability values given above for the TN system are also valid for IT for units 30RB 302 to 522. For units 30RB 162 to 262 and 30RB 602 to 802 modifications are required.

### 5.3 - Electrical data, hydronic module (sizes 162 to 522)

*The pumps that are factory-installed in these units have motors with efficiency class IE2. The additional electrical data required\* is as follows:*

#### Motors of single and dual low-pressure pumps for 30RB162-262 B standard units (options 116F, 116G, 116P, 116Q)

| No.** | Description***  |           | 30RB   |      |      |      |      |
|-------|---|-----------|--|------|------|------|------|
|       |   |           | 162  | 182  | 202  | 232  | 262  |
| 1     | Nominal efficiency at full load and nominal voltage   | %         | 83.4   | 83.4 | 83.4 | 83.4 | 84.8 |
| 1     | Nominal efficiency at 75% rated load and nominal voltage                                    | %         | 82.9   | 82.9 | 82.9 | 82.9 | 84.5 |
| 1     | Nominal efficiency at 50% rated load and nominal voltage                                    | %         | 80.4   | 80.4 | 80.4 | 80.4 | 83.1 |
| 2     | Efficiency level  |           | IE2  |      |      |      |      |
| 3     | Year of manufacture   |           | This information varies depending on the manufacturer and model at the time of incorporation. Please refer to the motor name plates. |      |      |      |      |
| 4     | Manufacturer's name and trademark, commercial registration number and place of manufacturer |           |  |      |      |      |      |
| 5     | Product's model number  |           |  |      |      |      |      |
| 6     | Number of motor poles   |           | 2  | 2    | 2    | 2    | 2    |
| 7-1   | Rated shaft power output at full load and nominal voltage (400 V)                           | kW        | 2.2  | 2.2  | 2.2  | 2.2  | 3    |
| 7-2   | Maximum power input (400 V)****   | kW        | 2.6  | 2.6  | 2.6  | 2.6  | 3.5  |
| 8     | Rated input frequency   | Hz        | 50   | 50   | 50   | 50   | 50   |
| 9-1   | Rated voltage   | V         | 3 x 400  |      |      |      |      |
| 9-2   | Maximum current drawn (400 V)†  | A         | 4.4  | 4.4  | 4.4  | 4.4  | 5.8  |
| 10    | Rated speed   | r/s (rpm) | 48 (2900)  |      |      |      |      |
| 11    | Product disassembly, recycling or disposal at end of life                                   |           | Disassembly using standard tools. Disposal and recycling using an appropriate company.   |      |      |      |      |
| 12    | Operating conditions for which the motor is specifically designed                           |           |  |      |      |      |      |
|       | I - Altitudes above sea level   | m         | < 1000††   |      |      |      |      |
|       | II - Ambient air temperature  | °C        | < 40   |      |      |      |      |
|       | IV - Maximum air temperature  |           | Please refer to the operating conditions given in this manual or in the specific conditions in the Carrier selection programs.       |      |      |      |      |
|       | V - Potentially explosive atmospheres   |           | Non-ATEX environment   |      |      |      |      |

#### Motors of single and dual low-pressure pumps for 30RB 162-262 B units with option 280 and 30RB 302-522 units (options 116F, 116G, 116P, 116Q)

| No.** | Description***  |           | 30RB   |      |      |      |      |      |      |      |      |      |      |      |
|-------|---|-----------|--|------|------|------|------|------|------|------|------|------|------|------|
|       |   |           | 162  | 182  | 202  | 232  | 262  | 302  | 342  | 372  | 402  | 432  | 462  | 522  |
| 1     | Nominal efficiency at full load and nominal voltage   | %         | 83.4   | 83.4 | 83.4 | 83.4 | 83.4 | 84.8 | 84.8 | 86.1 | 86.1 | 86.1 | 88.6 | 88.6 |
| 1     | Nominal efficiency at 75% rated load and nominal voltage                                    | %         | 82.9   | 82.9 | 82.9 | 82.9 | 82.9 | 84.5 | 84.5 | 85.7 | 85.7 | 85.7 | 86.9 | 86.9 |
| 1     | Nominal efficiency at 50% rated load and nominal voltage                                    | %         | 80.4   | 80.4 | 80.4 | 80.4 | 80.4 | 83.1 | 83.1 | 84.3 | 84.3 | 84.3 | 85.2 | 85.2 |
| 2     | Efficiency level  |           | IE2  |      |      |      |      |      |      |      |      |      |      |      |
| 3     | Year of manufacture   |           | This information varies depending on the manufacturer and model at the time of incorporation. Please refer to the motor name plates. |      |      |      |      |      |      |      |      |      |      |      |
| 4     | Manufacturer's name and trademark, commercial registration number and place of manufacturer |           |  |      |      |      |      |      |      |      |      |      |      |      |
| 5     | Product's model number  |           |  |      |      |      |      |      |      |      |      |      |      |      |
| 6     | Number of motor poles   |           | 2  | 2    | 2    | 2    | 2    | 2    | 2    | 2    | 2    | 2    | 2    | 2    |
| 7-1   | Rated shaft power output at full load and nominal voltage (400 V)                           | kW        | 2.2  | 2.2  | 2.2  | 2.2  | 2.2  | 3    | 3    | 4    | 4    | 4    | 5.5  | 5.5  |
| 7-2   | Maximum power input (400 V)****   | kW        | 2.6  | 2.6  | 2.6  | 2.6  | 2.6  | 3.5  | 3.5  | 4.6  | 4.6  | 4.6  | 6.2  | 6.2  |
| 8     | Rated input frequency   | Hz        | 50   | 50   | 50   | 50   | 50   | 50   | 50   | 50   | 50   | 50   | 50   | 50   |
| 9-1   | Rated voltage   | V         | 3 x 400  |      |      |      |      |      |      |      |      |      |      |      |
| 9-2   | Maximum current drawn (400 V)†  | A         | 4.4  | 4.4  | 4.4  | 4.4  | 4.4  | 5.8  | 5.8  | 7.7  | 7.7  | 7.7  | 10.2 | 10.2 |
| 10    | Rated speed   | r/s (rpm) | 48 (2900)  |      |      |      |      |      |      |      |      |      |      |      |
| 11    | Product disassembly, recycling or disposal at end of life                                   |           | Disassembly using standard tools. Disposal and recycling using an appropriate company  |      |      |      |      |      |      |      |      |      |      |      |
| 12    | Operating conditions for which the motor is specifically designed                           |           |  |      |      |      |      |      |      |      |      |      |      |      |
|       | I - Altitudes above sea level   | m         | < 1000††   |      |      |      |      |      |      |      |      |      |      |      |
|       | II - Ambient air temperature  | °C        | < 40   |      |      |      |      |      |      |      |      |      |      |      |
|       | IV - Maximum air temperature  |           | Please refer to the operating conditions given in this manual or in the specific conditions in the Carrier selection programs.       |      |      |      |      |      |      |      |      |      |      |      |
|       | V - Potentially explosive atmospheres   |           | Non-ATEX environment   |      |      |      |      |      |      |      |      |      |      |      |

\* Required by regulation 640/2009 with regard to the application of directive 2005/32/EC on the eco-design requirements for electric motors

\*\* Item number imposed by regulation 640/2009, annex I2b.

\*\*\* Description given by regulation 640/2009, annex I2b.

\*\*\*\* To obtain the maximum power input for a unit with hydronic module add the maximum unit power input from the electrical data table to the pump power input.

† To obtain the maximum unit operating current draw for a unit with hydronic module add the maximum unit current draw from the electrical data table to the pump current draw.

†† Above 1000 m, a degradation of 3% for each 500 m should be taken into consideration.



## Motors of single and dual high-pressure pumps for 30RB 162-262 B units with or without option 280 and 30RB 302-522 units (options 116B, 116C, 116M, 116N)

| No.** | Description***  |           | 30RB   |      |      |      |      |      |      |      |      |      |      |      |
|-------|---|-----------|--|------|------|------|------|------|------|------|------|------|------|------|
|       |   |           | 162  | 182  | 202  | 232  | 262  | 302  | 342  | 372  | 402  | 432  | 462  | 522  |
| 1     | Nominal efficiency at full load and nominal voltage   | %         | 86.1   | 86.1 | 86.1 | 86.1 | 86.1 | 88.6 | 88.6 | 88.5 | 88.5 | 88.5 | 90.5 | 90.5 |
| 1     | Nominal efficiency at 75% rated load and nominal voltage                                    | %         | 85.7   | 85.7 | 85.7 | 85.7 | 85.7 | 88.9 | 88.9 | 87.7 | 87.7 | 87.7 | 89.7 | 89.7 |
| 1     | Nominal efficiency at 50% rated load and nominal voltage                                    | %         | 84.3   | 84.3 | 84.3 | 84.3 | 84.3 | 85.2 | 85.2 | 85.2 | 85.2 | 85.2 | 85.7 | 85.7 |
| 2     | Efficiency level  |           | IE2  |      |      |      |      |      |      |      |      |      |      |      |
| 3     | Year of manufacture   |           | This information varies depending on the manufacturer and model at the time of incorporation. Please refer to the motor name plates. |      |      |      |      |      |      |      |      |      |      |      |
| 4     | Manufacturer's name and trademark, commercial registration number and place of manufacturer |           |  |      |      |      |      |      |      |      |      |      |      |      |
| 5     | Product's model number  |           |  |      |      |      |      |      |      |      |      |      |      |      |
| 6     | Number of motor poles   |           | 2  | 2    | 2    | 2    | 2    | 2    | 2    | 2    | 2    | 2    | 2    | 2    |
| 7-1   | Rated shaft power output at full load and nominal voltage (400 V)                           | kW        | 4  | 4    | 4    | 4    | 4    | 5.5  | 5.5  | 7.5  | 7.5  | 7.5  | 11   | 11   |
| 7-2   | Maximum power input (400 V)****   | kW        | 4.6  | 4.6  | 4.6  | 4.6  | 4.6  | 6.2  | 6.2  | 8.5  | 8.5  | 8.5  | 12.1 | 12.1 |
| 8     | Rated input frequency   | Hz        | 50   | 50   | 50   | 50   | 50   | 50   | 50   | 50   | 50   | 50   | 50   | 50   |
| 9-1   | Rated voltage   | V         | 3 x 400  |      |      |      |      |      |      |      |      |      |      |      |
| 9-2   | Maximum current drawn (400 V)†  | A         | 7.7  | 7.7  | 7.7  | 7.7  | 7.7  | 10.2 | 10.2 | 13.7 | 13.7 | 13.7 | 20.5 | 20.5 |
| 10    | Rated speed   | r/s (rpm) | 48 (2900)  |      |      |      |      |      |      |      |      |      |      |      |
| 11    | Product disassembly, recycling or disposal at end of life                                   |           | Disassembly using standard tools. Disposal and recycling using an appropriate company  |      |      |      |      |      |      |      |      |      |      |      |
| 12    | Operating conditions for which the motor is specifically designed                           |           |  |      |      |      |      |      |      |      |      |      |      |      |
|       | I - Altitudes above sea level   | m         | < 1000††   |      |      |      |      |      |      |      |      |      |      |      |
|       | II - Ambient air temperature  | °C        | < 40   |      |      |      |      |      |      |      |      |      |      |      |
|       | IV - Maximum air temperature  |           | Please refer to the operating conditions given in this manual or in the specific conditions in the Carrier selection programs.       |      |      |      |      |      |      |      |      |      |      |      |
|       | V - Potentially explosive atmospheres   |           | Non-ATEX environment   |      |      |      |      |      |      |      |      |      |      |      |

\* Required by regulation 640/2009 with regard to the application of directive 2005/32/EC on the eco-design requirements for electric motors

\*\* Item number imposed by regulation 640/2009, annex I2b.

\*\*\* Description given by regulation 640/2009, annex I2b.

\*\*\*\* To obtain the maximum power input for a unit with hydronic module add the maximum unit power input from the electrical data table to the pump power input.

† To obtain the maximum unit operating current draw for a unit with hydronic module add the maximum unit current draw from the electrical data table to the pump current draw.

†† Above 1000 m, a degradation of 3% for each 500 m should be taken into consideration.

### 5.4 - Compressor usage and electrical data

| Compressor        | I Nom | I Max (Un) | I Max (Un-10%) | LRA (Un) | Cosine Phi (max.) | Circuit | 162 | 182 | 202 | 232 | 262 | 302 | 342 | 372 | 402 | 432 | 462 | 522 | 602 | 672 | 732 | 802 |
|-------------------|-------|------------|----------------|----------|-------------------|---------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| 00PPG-00047-0903A | 30    | 40         | 44             | 215      | 0.86              | A       | 1   | -   | -   | 2   | -   | 3   | -   | -   | -   | -   | -   | -   | -   | -   | -   | -   |
|                   |       |            |                |          |                   | B       | 2   | 2   | -   | 2   | -   | -   | -   | 3   | -   | 3   | -   | -   | -   | -   | -   | -   |
|                   |       |            |                |          |                   | C       | -   | -   | -   | -   | -   | -   | -   | -   | -   | -   | -   | -   | -   | -   | -   | -   |
| 00PPG-00047-1003A | 38    | 51         | 56             | 260      | 0.86              | A       | -   | 1   | 1   | -   | 2   | -   | 3   | 3   | 3   | 4   | 4   | 4   | 3   | 3   | 4   | 4   |
|                   |       |            |                |          |                   | B       | -   | -   | 2   | -   | 2   | 2   | -   | 3   | -   | 3   | 4   | 3   | 3   | 3   | 4   | 4   |
|                   |       |            |                |          |                   | C       | -   | -   | -   | -   | -   | -   | -   | -   | -   | -   | -   | 3   | 4   | 3   | 4   | 4   |

#### Legend

I Nom Nominal current draw at Eurovent conditions (see definition of conditions under nominal unit current draw), A

I Max Maximum operating current at 360 V, A

LRA Locked rotor current, A

### 5.5 - Electric power user reserve

There are only power reserves on the units without hydronic modules. The reserve is the value corresponding to the high pressure pump capacity (see information in the hydronic module data table). Units that do not have the hydronic module option (30RB 602 to 802) have no reserves.

#### Control circuit power reserve:

The TC transformer with all possible options connected makes 1A available for 24 V, 50 Hz.

For the same TC transformer the 230 V, 50 Hz circuit with connection ribbon only permits supply to the battery chargers for portable computers, 0.8 A at 230 V maximum.

**IMPORTANT: Only connect doubly-insulated class II apparatus to these ribbons.**

## 6 - APPLICATION DATA

### 6.1 - Unit operating range

#### 30RB 162-262 “B” standard units and units with option 280

| Evaporator                                   |    | Minimum    | Maximum |
|--|----|------------|---------|
| Entering water temperature at start-up       | °C | 8*         | 40      |
| Leaving water temperature during operation   | °C | 5          | 15**    |
| Condenser                                    |    | Minimum    | Maximum |
| <b>Outdoor ambient operating temperature</b> |    |            |         |
| Standard unit                                | °C | 0*** / 10† | 48      |
| Unit with option 28B-C (winter operation)    | °C | -10        | 48      |
| Unit with option 28 (winter operation)       | °C | -20        | 48      |
| <b>Available static pressure</b>             |    |            |         |
| Standard unit (outdoor installation)         | Pa | 0          | 0       |
| Unit with option 12 (indoor installation)    | Pa | 0****      | 200     |

#### 30RB 302-802 units

| Evaporator                                   |    | Minimum | Maximum |
|--|----|---------|---------|
| Entering water temperature at start-up       | °C | 6,8*    | 40      |
| Leaving water temperature during operation   | °C | 3,3     | 15**    |
| Condenser                                    |    | Minimum | Maximum |
| <b>Outdoor ambient operating temperature</b> |    |         |         |
| Standard unit                                | °C | 0***    | 48      |
| Unit with option 28B-C (winter operation)    | °C | -10     | 48      |
| Unit with option 28 (winter operation)       | °C | -20     | 48      |
| <b>Available static pressure</b>             |    |         |         |
| Standard unit (outdoor installation)         | Pa | 0       | 0       |
| Unit with option 12 (indoor installation)    | Pa | 0****   | 200     |

\* For application requiring operation at less than 8 or 6.8°C respectively, contact Carrier for unit selection using the Carrier electronic catalog.


\*\* For an application, requiring operation up to +15°C leaving water temperature, contact Carrier for the selection of the unit.

\*\*\* For operation from 0°C to -10°C the units must be equipped with option 28B-C “Winter operation”. For operation from 0°C to -20°C the units must be equipped with option 28 “Winter operation”. For both options the unit must either be equipped with the evaporator frost protection option (for units without hydronic module option) or the evaporator and hydronic module frost protection option (for units with hydronic module option) or the water loop must be protected against frost by the installer, using an anti-freeze solution.  
Maximum outside temperature: For transport and storage of the 30RB units the minimum and maximum allowable temperatures are -20°C and +48°C. It is recommended that these temperatures are used for transport by container.


\*\*\*\* Unit with fans with available pressure up to 200 Pa.

† 30RB 162 units use option 28B-C for outside temperatures below 10°C.

#### Operating range 30RB 162-262 “B” standard units and units with option 280

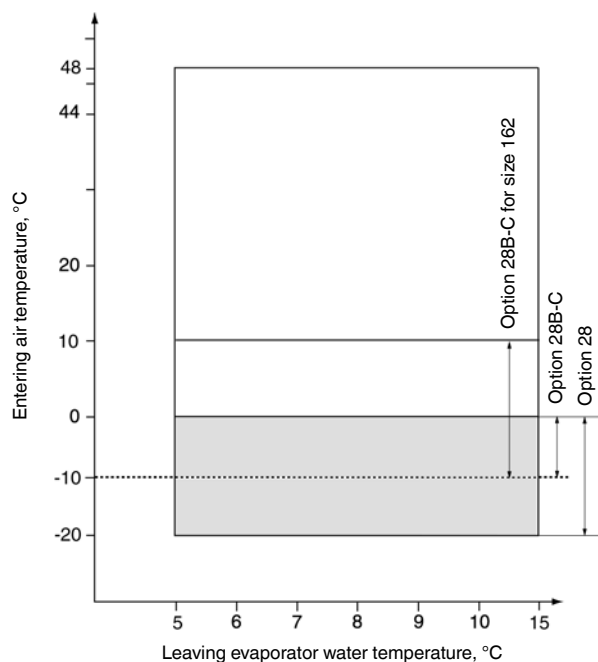

#### Operating range 30RB 302-802 units

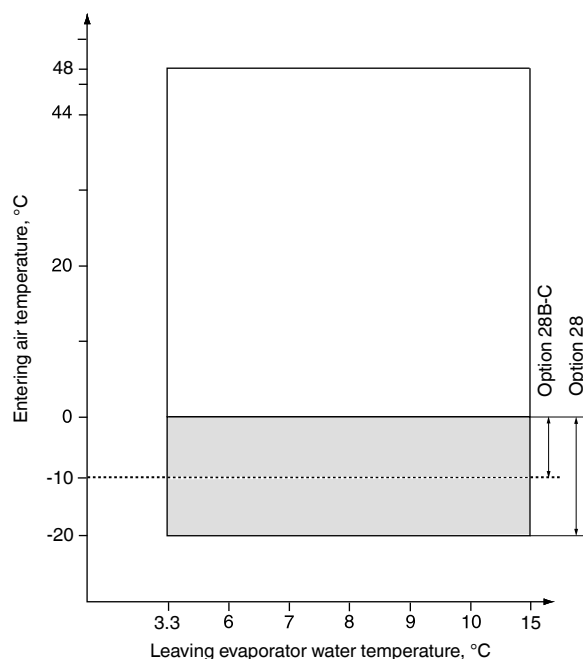

#### Notes

- Evaporator  $\Delta T = 5$  K
- The evaporator is protected against frost down to -20°C.

#### Legend

- Standard unit operating at full load.
- Operating range, units equipped with options 28 and 28B-C “Winter operation”.  
Option 28B-C (with two-speed lead fan for each circuit) allows operation down to -10°C outside temperature.  
Option 28 (with variable-speed lead fan for each circuit) allows operation down to -20°C outside temperature. In addition to options 28 and 28B-C the unit must either be equipped with the evaporator frost protection option (for units without hydronic module option) or the evaporator and hydronic module frost protection option (for units with hydronic module option) or the water loop must be protected by the installer by adding a frost protection solution.


#### ATTENTION: Option 28 “Winter operation”

*If the outside temperature is below -10°C and the unit has been switched off for more than 4 hours, it is necessary to wait two hours after the unit has been switched on again to allow the frequency converter to warm up.*

### 6.2 - Minimum chilled water flow (units without hydronic module)

The minimum chilled water flow is shown in the table on the next page. If the system flow is less than this, the evaporator flow can be recirculated, as shown in the diagram.

#### For minimum chilled water flow rate

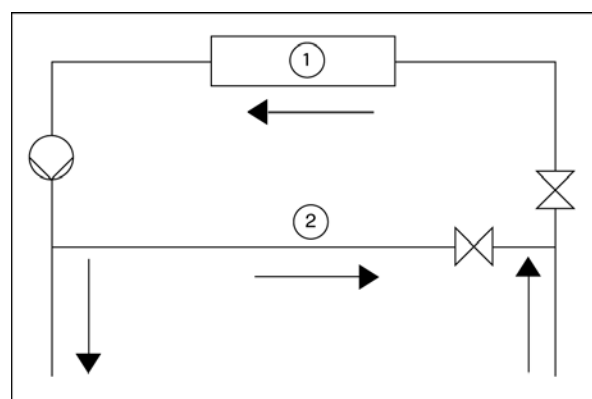


#### Legend

- 1 Evaporator
- 2 Recirculation

### 6.3 - Maximum chilled water flow (units without hydronic module)

The maximum chilled water flow is shown in the table on the next page. If the system flow exceeds the maximum value, it can be bypassed as shown in the diagram.

#### For maximum chilled water flow rate

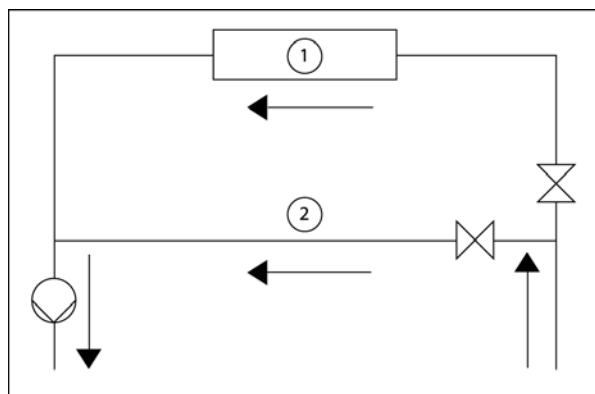

#### Legend

- 1 Evaporator
- 2 Bypass

### 6.4 - Variable flow evaporator

Variable evaporator flow can be used in standard chillers. The flow rate must be higher than the minimum flow given in the table of permissible flow rates and must not vary by more than 10% per minute. If the flow rate changes more rapidly, the system should contain a minimum of 6.5 litres of water per kW instead of 2.5 l/kW.

### 6.5 - Minimum system water volume

Whichever the system, the water loop minimum capacity is given by the formula:

$$\text{Capacity} = \text{Cap (kW)} \times N \text{ Litres}$$


| Application             | N    |
|-------------------------|------|
| Normal air conditioning | 3.25 |
| Process type cooling    | 6.5  |

Where Cap is the nominal system cooling capacity (kW) at the nominal operating conditions of the installation.

This volume is necessary for stable operation.

It can be necessary to add a buffer water tank to the circuit in order to achieve the required volume. The tank must itself be internally baffled in order to ensure proper mixing of the liquid (water or brine). Refer to the examples below.

#### Connection to a buffer tank

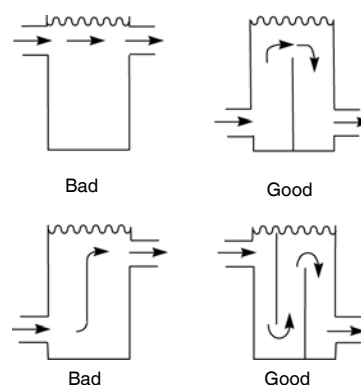

### 6.6 - Maximum system water volume

Units with hydronic module incorporate an expansion tank that limits the water volume. The table below gives the maximum loop volume for pure water or ethylene glycol with various system concentrations, as well as the static pressures. If the maximum volume is insufficient, compared to the minimum system water loop volume, an additional expansion tank must be added to the system.

#### Maximum water loop volume, l

| 30RB                |     | 162-262 |      |      | 302-522 |      |      |
|---------------------|-----|---------|------|------|---------|------|------|
| Static pressure     | bar | 1       | 2    | 2.5  | 1       | 2    | 2.5  |
| Pure water          |     | 2400    | 1600 | 1200 | 3960    | 2640 | 1980 |
| 10% ethylene glycol |     | 1800    | 1200 | 900  | 2940    | 1960 | 1470 |
| 20% ethylene glycol |     | 1320    | 880  | 660  | 2100    | 1400 | 1050 |
| 30% ethylene glycol |     | 1080    | 720  | 540  | 1740    | 1160 | 870  |
| 40% ethylene glycol |     | 900     | 600  | 450  | 1500    | 1000 | 750  |

### 6.7 - Evaporator flow rate

#### 30RB 162-262 “B” standard units

| 30RB | Minimum flow rate. l/s | Maximum flow rate. l/s |
|------|------------------------|------------------------|
| 162  | 2.8                    | 13.9                   |
| 182  | 2.8                    | 13.9                   |
| 202  | 2.8                    | 14.3                   |
| 232  | 3                      | 14.3                   |
| 262  | 3.5                    | 14.3                   |


#### 30RB 162-262 “B” with option 280 and 30RB 302-802

| 30RB | Minimum flow rate. l/s | Maximum flow rate. l/s |
|------|------------------------|------------------------|
| 162  | 2.8                    | 28.1                   |
| 182  | 2.8                    | 28.1                   |
| 202  | 2.8                    | 28.1                   |
| 232  | 3                      | 26.7                   |
| 262  | 3.5                    | 26.7                   |
| 302  | 3.9                    | 26.7                   |
| 342  | 4.4                    | 29.4                   |
| 372  | 4.9                    | 29.4                   |
| 402  | 5.2                    | 29.4                   |
| 432  | 5.8                    | 31.1                   |
| 462  | 6.1                    | 31.1                   |
| 522  | 6.9                    | 31.1                   |
| 602  | 7.9                    | 50.6                   |
| 672  | 8.7                    | 50.6                   |
| 732  | 9.6                    | 50.6                   |
| 802  | 10.3                   | 50.6                   |

\* The maximum flow rate corresponds to a pressure loss of 100 kPa (heat exchanger without hydronic module).


## 6.8 - Pressure drop curves for the evaporator and standard entering/leaving water piping

### 30RB 162-262 “B” standard units

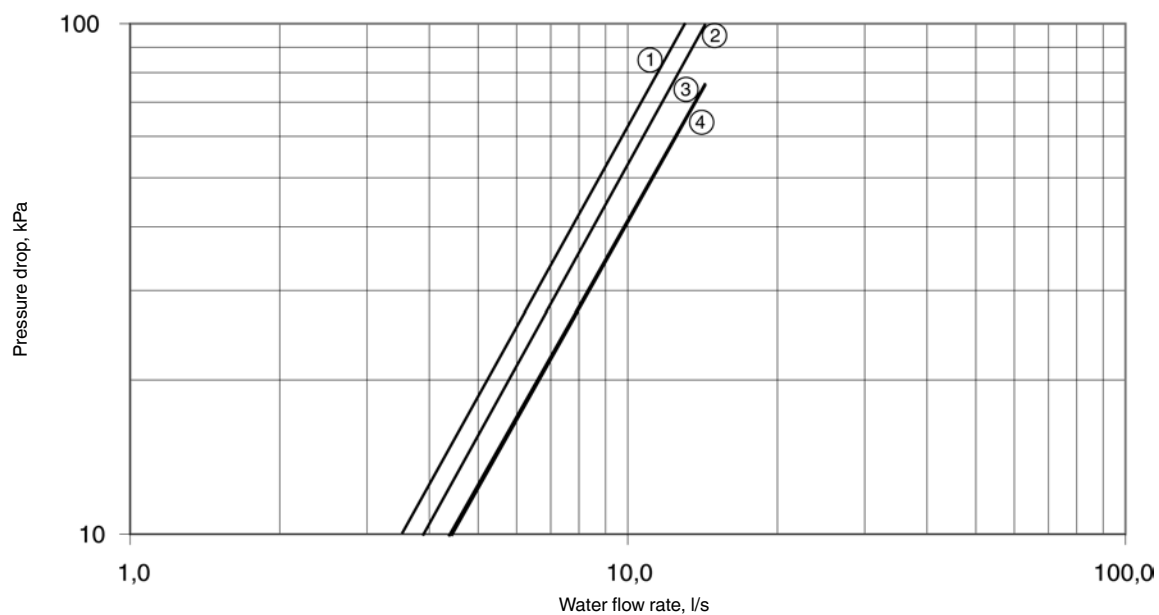

- 1 30RB 162-182B
- 2 30RB 202B
- 3 30RB 262B
- 4 30RB 232B

### 30RB 162-262 “B” units with option 280 and 30RB 302-802 units

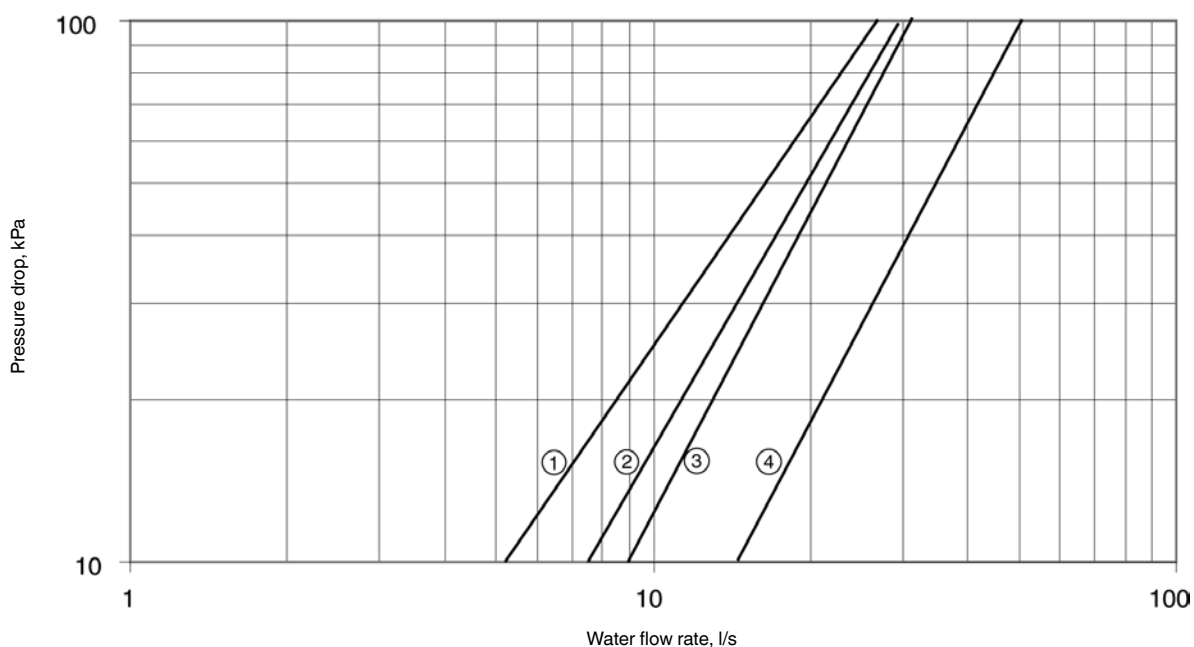

- 1 30RB 162-302
- 2 30RB 342-402
- 3 30RB 432-522
- 4 30RB 602-802

**Note:** If the Carrier instructions (power and water connections and installation) are not observed, the Carrier warranty becomes invalid.

## 7 - ELECTRICAL CONNECTION

Please refer to the certified dimensional drawings, supplied with the unit.

### 7.1 - Power supply

The power supply must conform to the specification on the chiller nameplate. The supply voltage must be within the range specified in the electrical data table. For connections refer to the wiring diagrams and certified dimensional drawings.

**WARNING: Operation of the chiller with an improper supply voltage or excessive phase imbalance constitutes abuse which will invalidate the Carrier warranty. If the phase imbalance exceeds 2% for voltage, or 10% for current, contact your local electricity supply at once and ensure that the chiller is not switched on until corrective measures have been taken.**

### 7.2 - Voltage phase imbalance (%)

$$\frac{100 \times \text{max. deviation from average voltage}}{\text{Average voltage}}$$

#### Example:

On a 400 V - 3 ph - 50 Hz supply, the individual phase voltages were measured to be:

AB = 406 V ; BC = 399 V; AC = 394 V


$$\begin{aligned} \text{Average voltage} &= (406 + 399 + 394)/3 = 1199/3 \\ &= 399.7 \text{ say } 400 \text{ V} \end{aligned}$$

Calculate the maximum deviation from the 400 V average:

$$(AB) = 406 - 400 = 6$$

$$(BC) = 400 - 399 = 1$$

$$(CA) = 400 - 394 = 6$$

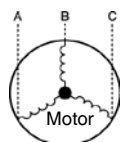

The maximum deviation from the average is 6 V. The greatest percentage deviation is:

$$100 \times 6/400 = 1.5 \%$$

This is less than the permissible 2% and therefore acceptable.

### 7.3 - Power connection/disconnect switch

| 30RB                 | Connection points | Disconnect switch without fuse (opt. 70) | Disconnect switch with fuse (opt. 70D) |
|----------------------|-------------------|--|--|
| <b>Standard unit</b> |                   |  |  |
| 162-262              | 1                 | X (as standard)                          |  |
| 302-522              | 1                 | -  |  |
| 602-802              | 2*                | -  |  |
| <b>Option 70</b>     |                   |  |  |
| 162-262              | 1                 | X (as standard)                          |  |
| 302-522              | 1                 | X  |  |
| 602-802              | 2*                | X  |  |
| <b>Option 70D</b>    |                   |  |  |
| 162-262              | 1                 |  | N/A                                    |
| 302-522              | 1                 |  | X                                      |
| 602-802              | 2*                |  | X                                      |

\* 2 connection points: one for circuits A and B and one for circuit C  
N/A Not available

### 7.4 - Recommended wire sections

Wire sizing is the responsibility of the installer, and depends on the characteristics and regulations applicable to each installation site. The following is only to be used as a guideline, and does not make Carrier in any way liable. After wire sizing has been completed, using the certified dimensional drawing, the installer must ensure easy connection and define any modifications necessary on site.

The connections provided as standard for the field-supplied power entry cables to the general disconnect/isolator switch are designed for the number and type of wires, listed in the table on the next page.

#### Electrical data notes for 30RB units:

- 30RB 162-522 units have a single power connection point immediately upstream of the two main disconnect switches.
- 30RB 602-802 units have two connection points upstream of the main disconnect switches.
- The control box includes:
  - One main disconnect switch
  - Starter and motor protection devices for each compressor, the fans) and the pump
  - Control devices
- Field connections:**  
All connections to the system and the electrical installations must be in full accordance with all applicable local codes.
- The Carrier 30RB units are designed and built to ensure conformance with these codes. The recommendations of European standard EN 60 204-1 (corresponds to IEC 60204-1) (machine safety - electrical machine components - part 1: general regulations) are specifically taken into account, when designing the electrical equipment.
- Electrical reserves:**  
Circuit A has disconnect switches and branch sections, designed to supply the evaporator pump power input.

#### Notes:

- Generally the recommendations of International Electrotechnical Commission document IEC 60364 are accepted as compliance with the requirements of the installation directives. Conformance with EN 60204 is the best means of ensuring compliance with the Machines Directive § 1.5.1.
  - Annex B of EN 60204-1 describes the electrical characteristics used for the operation of the machines.
1. The operating environment for the 30RB units is specified below:
- Environment\* - Environment as classified in EN 60721 (corresponds to IEC 60721):
    - outdoor installation\*
    - ambient temperature range: -20°C to +48°C ± 1 K, class 4K3\*

- altitude: ≤ 2000 m (see note for table 5.3 - Electrical data, hydronic module)
  - presence of hard solids, class 4S2 (no significant dust present)
  - presence of corrosive and polluting substances, class 4C2 (negligible)
  - vibration and shock, class 4M2
  - Competence of personnel, class BA4\* (trained personnel - IEC 60364)
2. Power supply frequency variation: ± 2 Hz.
3. The neutral (N) line must not be connected directly to the unit (if necessary use a transformer).
4. Overcurrent protection of the power supply conductors is not provided with the unit.
5. The factory-installed disconnect switch(es)/circuit breaker(s) is (are) of a type suitable for power interruption in accordance with EN 60947-3 (corresponds to IEC 60947-3).
6. The units are designed for simplified connection on TN(s) networks (IEC 60364). For IT networks provide a local earth and consult competent local organisations to complete the electrical installation.
7. Derived currents: If protection by monitoring of derived currents is necessary to ensure the safety of the installation, the control of the cut-out value must take the presence of leak currents into consideration that result from the use of frequency converters in the unit. A value of at least 150 mA is recommended to control differential protection devices.

**Note:** If particular aspects of an actual installation do not conform to the conditions described above, or if there are other conditions which should be considered, always contact your local Carrier representative.

\* The required protection level for this class is IP43BW (according to reference document IEC 60529). All 30RB units are protected to IP44CW and fulfil this protection condition.

The calculations are based on the maximum machine current (see electrical data tables).

For the accessory system the following standardised installation methods are used, in accordance with IEC 60364, table 52C:

No. 17: suspended aerial lines, and No. 61: buried conduit with a derating coefficient of 20.

The calculation is based on PVC or XLPE insulated cables with copper or aluminium core. The maximum temperature is 48°C. The given wire length limits the voltage drop to < 5%.

**IMPORTANT: Before connection of the main power cables (L1 - L2 - L3) on the terminal block, it is imperative to check the correct order of the 3 phases before proceeding to the connection on then terminal block or the main disconnect/isolator switch.**

**The current values used are given for a unit equipped with a hydronic kit operating at maximum current.**

#### 7.4.1 - Power cable entry


The power cables can enter the 30RB control box from below or from the unit side.

- Unit raised from the ground (e.g. installation on support rails): It is recommended to enter the power cables from below the control box. A removable aluminium plate below the control box allows introduction of the cables.
- Unit placed on the ground (e.g. on a concrete base): It is recommended to enter the power cables from the control box side. An aluminium plate on the control box face allows introduction of the cables. It is important to check that the power cable bend radius is compatible with the connection space available in the control box. Refer to the certified dimensional drawing for the unit.

#### 7.4.2 - Connection extension box

This accessory permits stripping the power cables before they enter the control box, and must be used when the cable bend radius is not compatible with the connection space available in the control box. The accessory connection extension box ensures mechanical protection of the stripped cable, before it enters the control box. It must be used in the following cases:

- Unit placed on the ground and use of power cables with protective metallic armour.
- Unit placed on the ground and use of power cables with a section > 250 mm<sup>2</sup>.

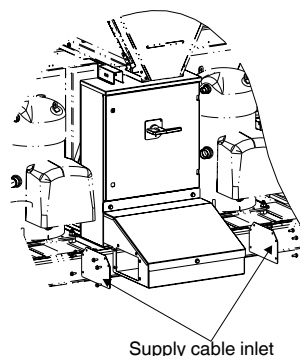

#### 7.5 - Field control wiring

Refer to the 30RB Pro-Dialog Plus Controls IOM and the certified wiring diagram supplied with the unit for the field control wiring of the following features:

- Customer interlock (safety chain)
- Evaporator pump interlock (mandatory)
- Remote on/off switch
- Remote heat/cool switch
- Demand limit external switch 1
- Remote dual set point
- Alarm, alert and operation report
- Evaporator pump control
- Heat reclaim condenser pump control (option)
- Setpoint reset via outside air temperature sensor reset (0-10 V)
- Various interlocks on the Energy Management Module (EMM) board (accessory or option)

**Table of minimum and maximum wire sections (per phase) for connection to 30RB units**

|      | Max. connectable section per phase |           |           | Min. wire section per phase |           |           |               |             | Max. wire section per phase |                |                 |
|------|------------------------------------|-----------|-----------|-----------------------------|-----------|-----------|---------------|-------------|-----------------------------|----------------|-----------------|
| 30RB | Section, mm²                       |           |           | Section, mm²                |           |           | Max length, m | Wire type   | Section, mm²                | Max. length, m | Wire type       |
| 162  | 1 x 240 or 2 x 150                 |           |           | 1 x 50                      |           |           | 180           | XLPE Copper | 2 x 70                      | 225            | XLPE Aluminium  |
| 182  | 1 x 240 or 2 x 150                 |           |           | 1 x 50                      |           |           | 180           | XLPE Copper | 2 x 70                      | 225            | XLPE Aluminium  |
| 202  | 1 x 240 or 2 x 150                 |           |           | 1 x 70                      |           |           | 215           | XLPE Copper | 2 x 95                      | 260            | XLPE Aluminium  |
| 232  | 1 x 240 or 2 x 150                 |           |           | 1 x 70                      |           |           | 205           | XLPE Copper | 2 x 95                      | 260            | XLPE Aluminium  |
| 262  | 1 x 240 or 2 x 150                 |           |           | 1 x 95                      |           |           | 178           | XLPE Copper | 2 x 95                      | 260            | XLPE Aluminium  |
| 302  | 2 x 240                            |           |           | 1 x 120                     |           |           | 197           | XLPE Copper | 2 x 120                     | 280            | XLPE Aluminium  |
| 342  | 2 x 240                            |           |           | 1 x 120                     |           |           | 185           | XLPE Copper | 2 x 150                     | 300            | XLPE Aluminium  |
| 372  | 2 x 240                            |           |           | 1 x 150                     |           |           | 188           | XLPE Copper | 2 x 185                     | 315            | XLPE Aluminium  |
| 402  | 2 x 240                            |           |           | 1 x 185                     |           |           | 190           | XLPE Copper | 2 x 240                     | 330            | XLPE Aluminium  |
| 432  | 3 x 240                            |           |           | 1 x 185                     |           |           | 190           | XLPE Copper | 2 x 240                     | 330            | XLPE Aluminium  |
| 462  | 3 x 240                            |           |           | 1 x 240                     |           |           | 205           | XLPE Copper | 3 x 185                     | 395            | XLPE Aluminium  |
| 522  | 3 x 240                            |           |           | 2 x 95                      |           |           | 190           | XLPE Copper | 3 x 240                     | 415            | XLPE Aluminium  |
|      | Circuit A                          | Circuit B | Circuit C | Circuit A                   | Circuit B | Circuit C |               |             |                             |                |                 |
| 602  | 2 x 240                            | 2 x 240   | 2 x 185   | 1 x 185                     | 1 x 185   | 1 x 70    | 190/155       | XLPE Copper | 2 x 185/2 x 95              | 430/325        | XLPE Cu/XLPE Al |
| 672  | 2 x 240                            | 2 x 240   | 2 x 185   | 1 x 185                     | 1 x 185   | 1 x 95    | 190/178       | XLPE Copper | 2 x 185/2 x 150             | 430/375        | XLPE Cu/XLPE Al |
| 732  | 3 x 240                            | 3 x 240   | 2 x 185   | 2 x 95                      | 2 x 95    | 1 x 70    | 190/155       | XLPE Copper | 3 x 185/2 x 95              | 490/325        | XLPE Cu/XLPE Al |
| 802  | 3 x 240                            | 3 x 240   | 2 x 185   | 2 x 95                      | 2 x 95    | 1 x 95    | 190/178       | XLPE Copper | 3 x 185/2 x 150             | 490/375        | XLPE Cu/XLPE Al |

## 7.6 - Power supply

After the unit has been commissioned, the power supply must only be disconnected for quick maintenance operations (one day maximum). For longer maintenance operations or when the unit is taken out of service and stored (e.g. during the winter or if the unit does not need to generate cooling) the power supply must be maintained to ensure supply to the compressor oil crankcase heaters.

## 8 - WATER CONNECTIONS

For dimensions and position of the water inlet and outlet connections refer to the certified dimensional drawings supplied with the unit. The water pipes must not transmit any radial or axial force to the heat exchangers nor any vibration.

The water supply must be analysed and appropriate filtering, treatment, control devices, isolation and bleed valves and circuits built in, to prevent corrosion (example: tube surface protection damage in case of impurities in the fluid), fouling and deterioration of the pump fittings.

Before any start-up verify that the heat exchange fluid is compatible with the materials and the water circuit coating. Where additives or other fluids than those recommended by Carrier are used, ensure that these are not considered as a gas, and that they are class 2, as defined in directive 97/23/EC.

### Carrier recommendations on heat exchange fluids:

- No  $\text{NH}_4^+$  ammonium ions in the water, they are very detrimental for copper. This is one of the most important factors for the operating life of copper piping. A content of several tenths of mg/l will badly corrode the copper over time. If required, use sacrificial anodes.
- $\text{Cl}^-$  Chloride ions are also detrimental for copper with a risk of perforations by corrosion by puncture. Keep at a level below 10 mg/l.
- $\text{SO}_4^{2-}$  sulphate ions can cause perforating corrosion, if their content is above 30 mg/l.
- No fluoride ions (<0.1 mg/l).
- No  $\text{Fe}^{2+}$  and  $\text{Fe}^{3+}$  ions with non negligible levels of dissolved oxygen must be present. Dissolved iron < 5 mg/l with dissolved oxygen < 5 mg/l.
- Dissolved silicon: silicon is an acid element of water and can also lead to corrosion risks. Content < 1 mg/l.
- Water hardness: >0.5 mmol/l. Values between 1.0 and 2.5 mmol/l are recommended. This will facilitate scale deposit that can limit corrosion of copper. Values that are too high can cause piping blockage over time. A total alkalimetric titre (TAC) below 100 mg/l is desirable.
- Dissolved oxygen: Avoid any sudden change in water oxygenation conditions. It is as detrimental to deoxygenate the water by mixing it with inert gas as it is to over-oxygenate it by mixing it with pure oxygen. The disturbance of oxygenation conditions encourages destabilisation of copper hydroxides and enlargement of particles.
- Specific resistance – electric conductivity: the higher the specific resistance, the slower the corrosion tendency. Values above 30  $\Omega \cdot \text{m}$  are desirable. A neutral environment favours maximum specific resistance values. For electric conductivity values in the order of 20-60 mS/m can be recommended.
- pH: Ideal case pH neutral at 20-25°C ( $7 < \text{pH} < 8$ )

**ATTENTION:** Filling, completing and draining the water circuit charge must be done by qualified personnel, using the air purges and materials that are suitable for the products.

**Charging and removing heat exchange fluids should be done with devices that must be included on the water circuit by the installer. Never use the unit heat exchangers to add heat exchange fluid.**

## 8.1 - Operating precautions and recommendations

Before the system start-up verify that the water circuits are connected to the appropriate heat exchangers. The water circuit should be designed to have the least number of elbows and horizontal pipe runs at different levels. Below the main points to be checked for the connection:

- Observe the water inlet and outlet connections shown on the unit.
- Install manual or automatic air purge valves at all high points in the circuit.
- Use a pressure reducer to maintain pressure in the circuit(s) and install a safety valve as well as an expansion tank. Units with the hydronic module include a safety valve and an expansion tank.
- Install thermometers in both the entering and leaving water connections.
- Install drain connections at all low points to allow the whole circuit to be drained.
- Install stop valves close to the entering and leaving water connections.
- Use flexible connections to reduce the transmission of vibrations.
- Insulate the pipework, after testing for leaks, to prevent heat transmission and condensation.
- Cover the insulation with a vapour barrier. If the water piping outside the unit passes through an area where the ambient temperature is likely to fall below 0°C, it must be protected against frost (defrost solution or electric heaters).

**NOTE:** A screen filter must be installed in units without hydronic module. This must be installed in the water inlet piping upstream of the pressure gauge and close to the unit heat exchanger. It must be located in a position that is easily accessible for removal and cleaning. The mesh size of the filter must be 1.2 mm.

**If the filter is missing, the plate heat exchanger or the shell-and-tube evaporator can quickly become fouled during the first start-up, as it will perform the filter function, and correct unit operation will be affected (reduced water flow rate due to the increased pressure drop).**


Units with hydronic module include this type of filter.

- Do not introduce any significant static or dynamic pressure into the heat exchange circuit (with regard to the design operating pressures).
- Any products that may be added during the water connection stage to provide thermal insulation of the containers must be chemically neutral towards the materials and coatings on which they are placed. All original materials supplied by Carrier comply with this requirement.


## 8.2 - Hydronic connections

The optional hydronic modules are not compatible with open loops.

### 8.2.1 - Unit equipped with hydronic module options 116B, 116C, 116F, 116G

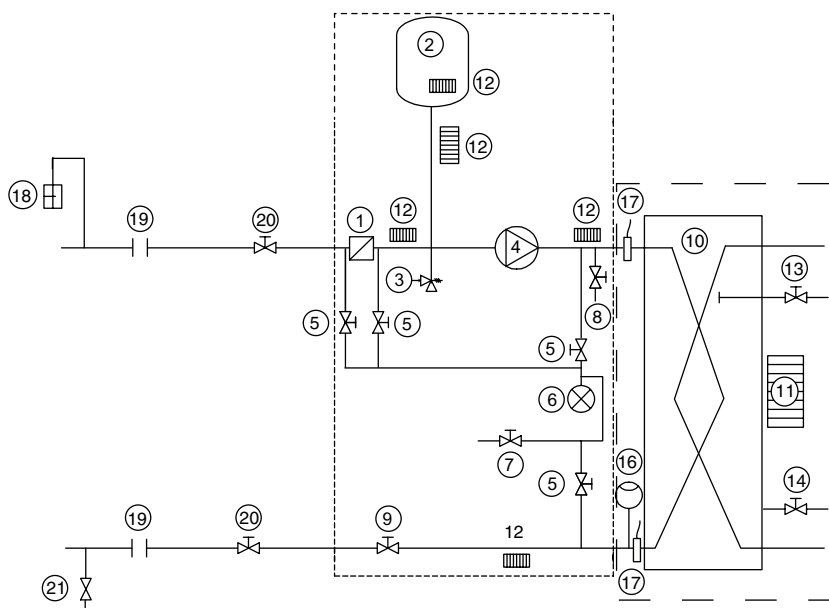

### 8.2.2 - Unit equipped with hydronic module options 116M, 116N, 116P, 116Q

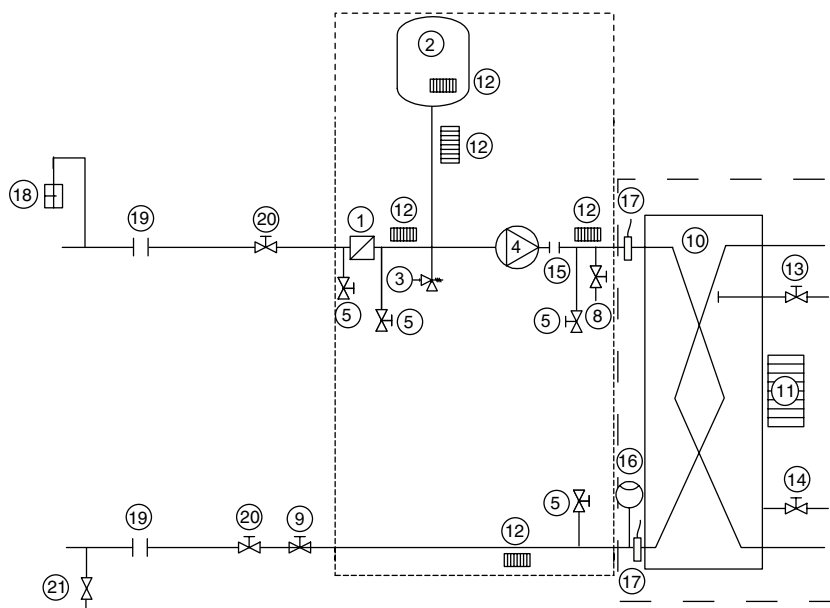

#### Legend

##### Components of the unit and hydronic module

- 1 Victaulic screen filter
- 2 Expansion tank
- 3 Safety valve
- 4 Available pressure pump
- 5 Pressure tap - see installation manual
- 6 Pressure gauge to measure the component pressure drop (if options 116B, 116C, 116F, 116 G are used) - see installation manual
- 7 Pressure gauge system drain valve (if options 116B, 116C, 116F, 116 G are used)
- 8 Drain valve
- 9 Flow control valve
- 10 Heat exchanger
- 11 Evaporator defrost heater
- 12 Hydronic module defrost heater (option)
- 13 Air vent (evaporator)
- 14 Water drain (evaporator)
- 15 Expansion compensator (flexible connections)
- 16 Flow switch
- 17 Water temperature

##### Installation components


- 18 Air vent
- 19 Flexible connection
- 20 Shut-off valve
- 21 Charge valve
- 22 Anti-vibration mounting
- 23 Pump support
- 24 Evaporator inlet
- 25 Evaporator outlet
- 26 Customer water inlet connection
- 27 Customer water outlet connection
- Hydronic module (unit with hydronic module)
- Limit of items supplied, chiller environment
- B Only for sizes 302-522

##### Notes:


- The system is protected against frost (anti-freeze solution or electric heater).
- With option 42A the hydronic module is protected against frost by electric heaters (item 12).
- The unit evaporator is protected against frost by a factory-installed electric heater ('evaporator frost protection' option)



### 8.2.3 - Typical installation, unit equipped with hydronic module options 116B, 116C, 116F, 116G

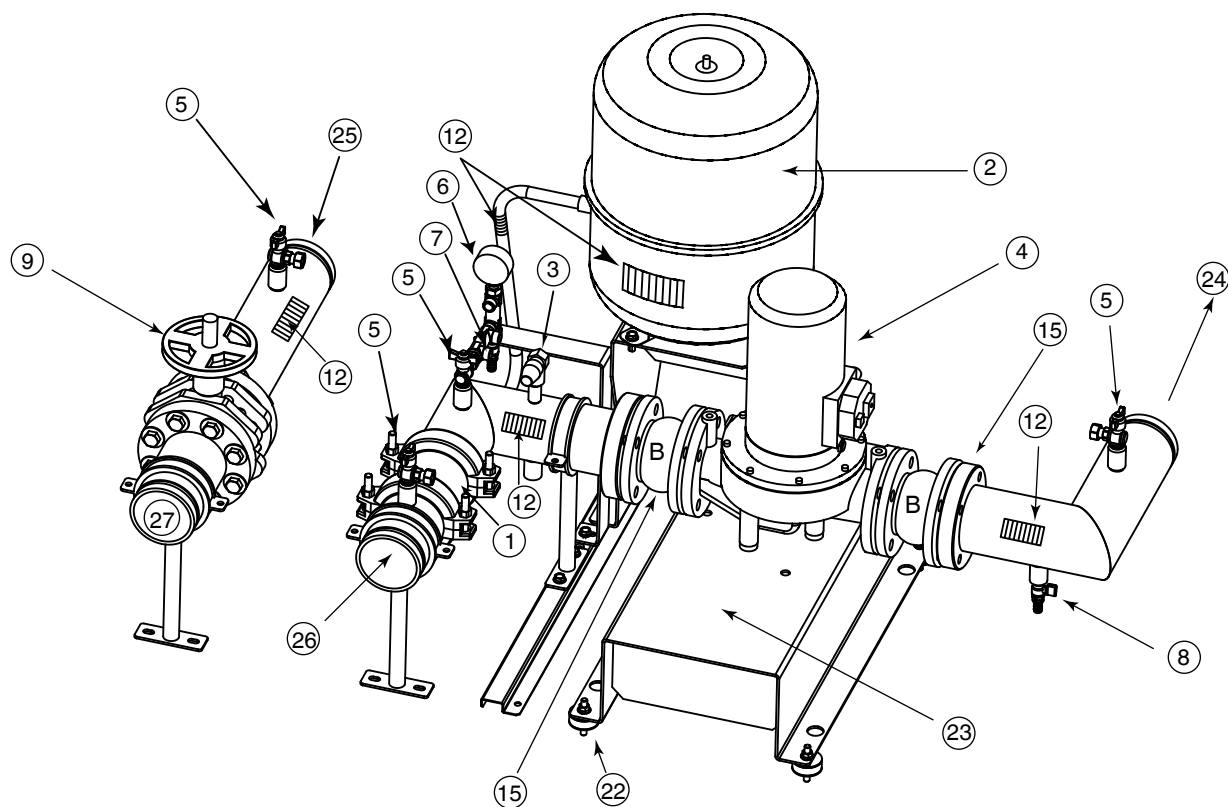


### 8.2.4 - Typical installation, unit equipped with hydronic module options 116M, 116N, 116P, 116Q

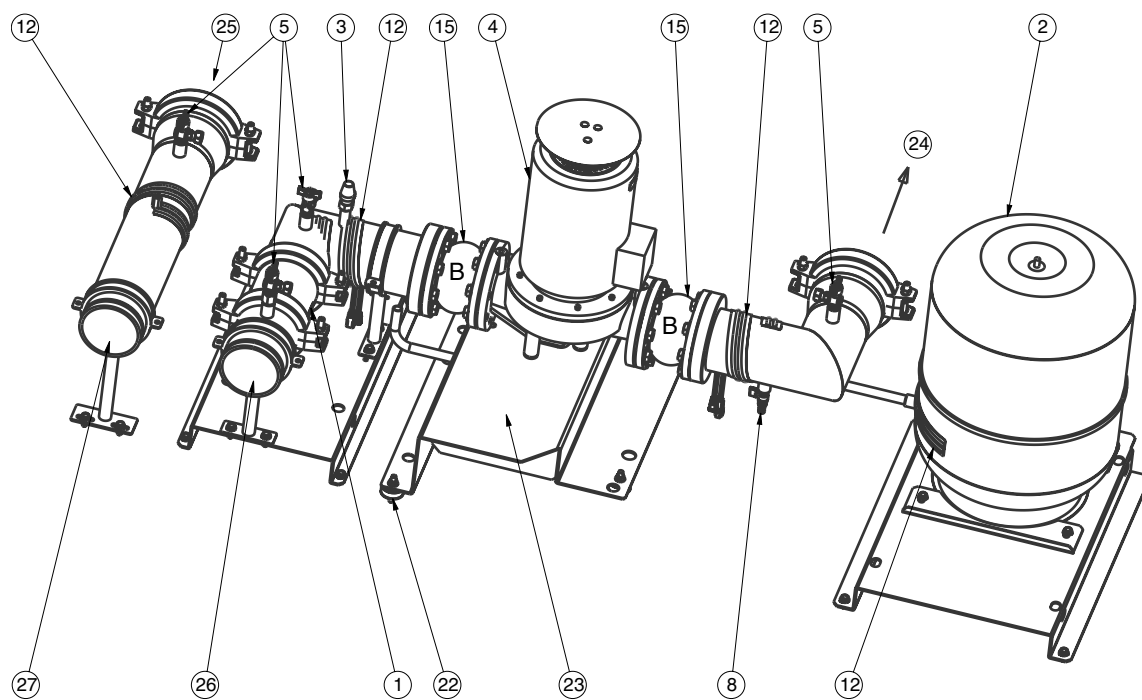

See legend on previous page, chapter 8.2.2.

### 8.2.5 - Unit without hydronic module option

#### Typical water circuit diagram - without hydronic module

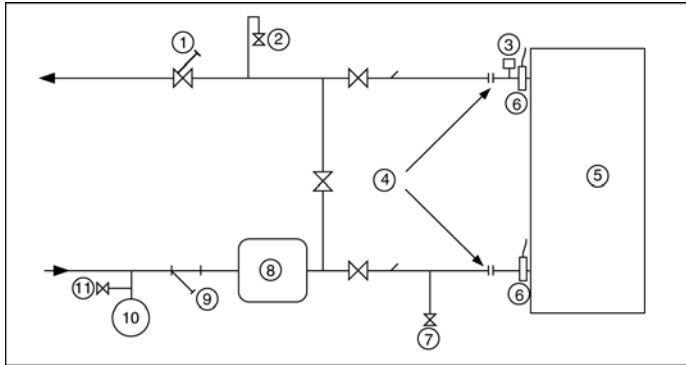

- Legend**
- 1 Control valve
  - 2 Air vent
  - 3 Flow switch for the evaporator (supplied)
  - 4 Flexible connection
  - 5 Heat exchanger
  - 6 Temperature sensor (supplied)
  - 7 Drain
  - 8 Buffer tank (if needed)
  - 9 Filter (mesh size: 1.2 mm = 20 mesh)
  - 10 Expansion tank
  - 11 Fill valve

### 8.3 - Flow control

All units are equipped with a factory-set flow switch. The unit must be interlocked with the chilled-water pump, if the unit is not equipped with the hydronic option module.

Terminals 34 and 35 are provided for field installation of the chilled water pump interlock (auxiliary contact for pump operation to be wired on site).

### 8.4 - Frost protection

The standard unit does not include any particular frost protection when it has shut down. It is therefore essential to check that there is no risk of the water in the hydronic circuit freezing during winter temperature conditions. If this may be the case it is essential to add an appropriate anti-freeze solution to protect the hydronic circuit down to the minimum temperature minus 10 K.

Another solution consists of draining the hydronic circuits exposed to temperatures below 0°C (must be used for units with plate heat exchangers). If the unit is not used for an extended period, protect it by circulating a protective solution. Please consult a specialist.

A third solution is to order the ‘evaporator frost protection’ option (factory-installed - an electric heater on the evaporator).


If the hydronic module option is used, the evaporator and hydronic module frost protection option (additional electric heaters on the hydronic module and the evaporator) must also be ordered to ensure protection of the hydronic module down to -20°C.

If option 41 has been ordered for the 30RB 162-262 “B” standard units (only in this case) and if the accessory water inlet/outlet extension pipe has been ordered, a heater must be installed for each extension to ensure that the water pipes are protected down to -20°C outside temperature.

The heat exchanger temperature sensors are part of its frost protection: if piping trace heaters are used, ensure that the external heaters do not affect the measurement of these sensors.

**NOTE: With 30RB 162-262 “B” units with option 280 and 30RB 302-802 units, the hydronic module can be protected down to -10°C without the evaporator and hydronic module frost protection option provided that:**

- **the evaporator frost protection option is ordered**
- **the pump starts up periodically to allow water circulation in the hydronic circuit. If the system is isolated by a valve, it is imperative to install a bypass as indicated below.**

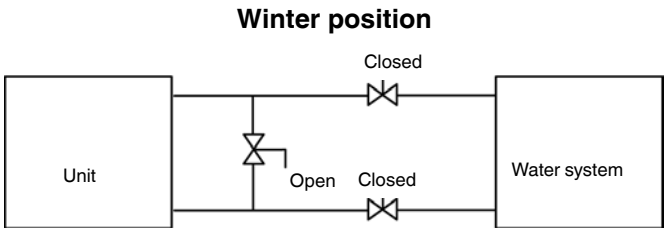

| List of options for periods when the units are in standby mode |  |  |  |  |
|--|--|--|--|--|
| Ambient unit temperature range                                 | 30RB 162-262 standard units  |  | 30RB 162-262 units with option 280 and 30RB 302-802 standard units                                       |  |
|  | Without option 116   | With option 116  | Without option 116   | With option 116  |
| > 0°C to 46°C  | -  | -  | -  | -  |
| -10°C to 0°C   | Option 41<br>or<br>Appropriate frost protection solution (e.g. glycol) | Option 42A*<br>or<br>Appropriate frost protection solution (e.g. glycol) | Option 41<br>or<br>Appropriate frost protection solution (e.g. glycol)<br>or<br>Drain the water circuits | Option 42A*<br>or<br>Appropriate frost protection solution (e.g. glycol)<br>or<br>Drain the water circuits<br>or<br>Option 41 and hydronic kit pump cycling* |
| -20°C to 0°C   |  |  |  | Option 42A*<br>or<br>Appropriate frost protection solution (e.g. glycol)<br>or<br>Drain the water circuits   |

\* Allow pump circulation. If a valve is included, install a bypass (see “Winter position” diagram).

**ATTENTION:** If the recommendations above are not followed, any resulting frost damage is not covered by the guarantee.

The frost protection and electric heater solutions can be combined. If protection by electric heater is used, do not switch off the power supply to the unit.

**IMPORTANT:** The main unit disconnect switch, the auxiliary heater protection switch as well as the control circuit switch must always remain closed (to locate the components, please refer to the wiring diagram).

**IMPORTANT:** Depending on the climatic conditions in your area you must do the following when you shut the unit down in winter:

- Add ethylene glycol with an adequate concentration to protect the installation up to a temperature of 10 K below the lowest temperature likely to occur at the installation site.
- If the unit is not used for an extended period, it is recommended to drain it, and as a safety precaution add ethylene glycol to the heat exchanger, using the water entering purge valve connection.
- At the start of the next season, refill the unit with water and add an inhibitor.
- For the installation of auxiliary equipment, the installer must comply with basic regulations, especially for minimum and maximum flow rates, which must be between the values listed in the operating limit table (application data).
- If any heat transfer circuit is emptied for longer than a month, the complete circuit must be placed under nitrogen charge to avoid any risk of corrosion by differential aeration. If the heat transfer fluid does not comply with Carrier recommendations, nitrogen must be charged immediately.

## 8.5 - Operation of two units in master/slave mode

For this type of operation the 'Twinning' option must be ordered.

**The units supplied are then equipped with an additional sensor connected to the electronic board and located in the control box.**

This sensor must be used when master/slave assembly control at the water outlet is used (it is not required for entering water control).


The customer must connect the two units via a communication bus (0.75 mm<sup>2</sup>, twisted and shielded). Consult the 30RB Pro-Dialog Plus control manual for the connection addresses.

Master/slave operation is only possible, when the units are installed in parallel. It is not possible, if the units are installed in series.

All parameters, required for the master/slave function must be configured using the Service Configuration menu. All remote controls of the master/slave assembly (start/stop, set point, load shedding etc.) are controlled by the unit configured as master and must only be applied to the master unit.

Each unit controls its own water pump. If there is only one common pump, in cases with variable flow, isolation valves must be installed on each unit. They will be activated at the opening and closing by the control of each unit (in this case the valves are controlled using the dedicated water pump outputs). See the 30RB Pro-Dialog Plus Control IOM for a more detailed explanation.

### 30RB with configuration: leaving water control

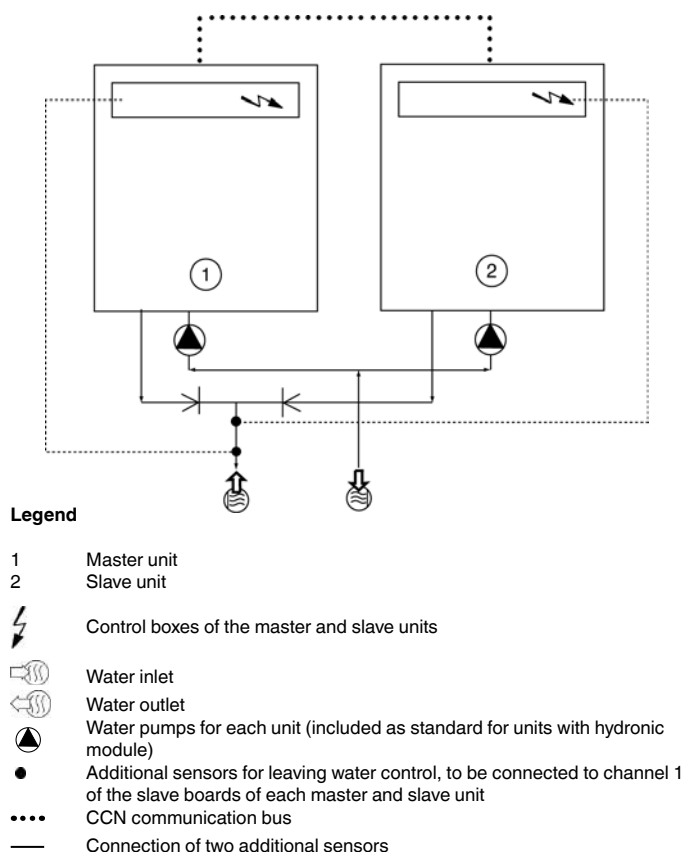

## 9 - NOMINAL SYSTEM WATER FLOW CONTROL

The water circulation pumps of the 30RB units have been sized to allow the hydronic modules to cover all possible configurations based on the specific installation conditions, i.e. for various temperature differences between the entering and the leaving water ( $\Delta T$ ) at full load, which can vary between 3 and 10 K.

This required difference between the entering and leaving water temperature determines the nominal system flow rate. It is necessary to know the nominal system flow rate to allow its control via a manual valve either provided in the water leaving piping of the module (item 9 in the typical hydronic circuit diagram) or to be installed as shown in the same diagram (chapter 8.2).

With the pressure loss generated by the control valve in the hydronic system, the valve can impose the system pressure/flow curve on the pump pressure/flow curve, to obtain the desired operating point. The pressure drop reading in the heat exchanger and its internal piping is used to control and adjust the nominal system flow rate.

Use this specification for the unit selection to know the system operating conditions and to deduce the nominal air flow as well as the pressure drop of the heat exchanger and its internal piping at the specified conditions. If this information is not available at the system start-up, contact the technical service department responsible for the installation to get it.

These characteristics can be obtained from the technical literature using the unit performance tables for a  $\Delta T$  of 5 K at the evaporator or with the Electronic Catalogue selection program for all  $\Delta T$  conditions other than 5 K in the range of 3 to 10 K.

### 9.1 - Water flow control procedure

As the total system pressure drop is not known exactly at the start-up, the water flow rate must be adjusted with the control valve to obtain the specific flow rate for this application.

#### **Proceed as follows:**

Open the valve fully.

Start-up the pump using the forced start command (refer to the controls manual) and let the pump run for two consecutive hours to clean the hydronic circuit of the system (presence of solid contaminants).

Read the filter pressure drop by taking the difference of the readings of the pressure gauge connected to the filter inlet and outlet, using valves, if options 116B, C, F, G are used, if not install a pressure gauge after filter inlet and outlet (see typical hydronic circuit diagrams), and comparing this value after two hours of operation.

If the pressure drop has increased, this indicates that the screen filter must be removed and cleaned, as the hydronic circuit contains solid particles. In this case close the shutoff valves at the water inlet and outlet and remove the screen filter after emptying the hydronic section of the unit.

Renew, if necessary, to ensure that the filter is not contaminated. Purge the air from the circuit using the purge valves in the hydronic circuit and the system (see typical hydronic circuit diagram).

When the circuit is cleaned, read the pressures at the pressure gauge (entering water pressure - leaving water pressure), expressed in bar and convert this value to kPa (multiply by 100) to find out the pressure drop of the heat exchanger and its internal piping.

Compare the value obtained with the theoretical selection value.

It is essential to carry out systematic filter cleaning at the initial start-up, as well as after any modification in the hydronic circuit.

***ATTENTION: It is essential to keep the pressure gauge purge valve open after measuring the pressure (risk of freezing during winter).***

If the pressure drop measured is higher than the value specified the flow rate in the evaporator (and thus in the system) is too high. The pump supplies an excessive flow rate based on the global pressure drop of the application. In this case close the control valve one turn for options 116B, C, F, G and read the new pressure difference.

Proceed by successively closing the control valve until you obtain the specific pressure drop that corresponds to the nominal flow rate at the required unit operating point.


If the system has an excessive pressure drop in relation to the available static pressure provided by the pump, the resulting water flow rate will be reduced and the difference between entering and leaving water temperature of the hydronic module will be increased.

To reduce the pressure drops of the hydronic system, it is necessary:

- to reduce the individual pressure drops as much as possible (bends, level changes, accessories, etc.)
- to use a correctly sized piping diameter.
- to avoid hydronic system extensions, wherever possible.


## 9.2 - Pump pressure/flow rate curves

### Single low-pressure pumps

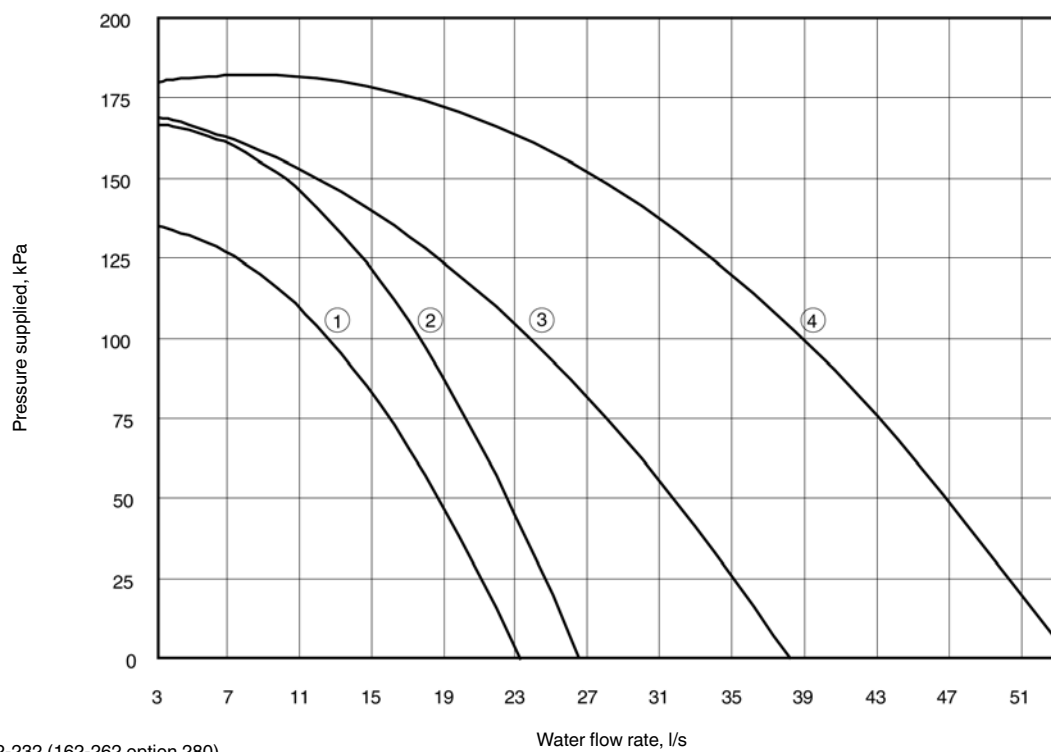

- 1 30 RB 162-232 (162-262 option 280)
- 2 30 RB 262-342
- 3 30 RB 372-402-432
- 4 30 RB 462-522


### Double low-pressure pumps

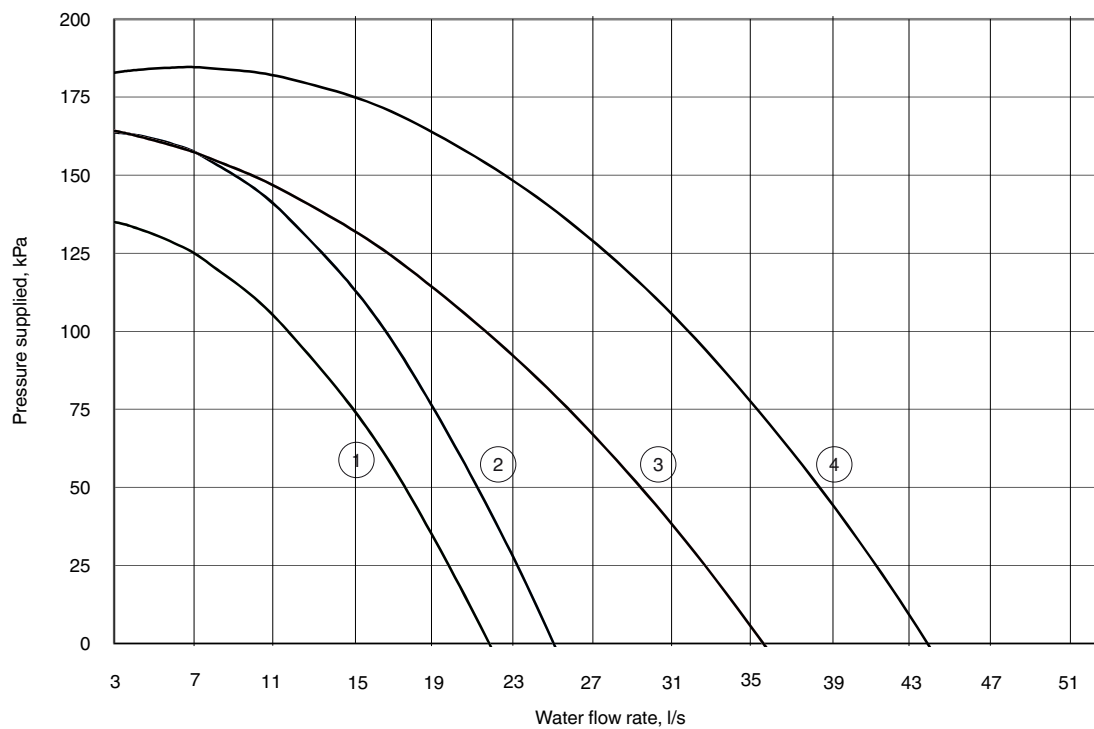

- 1 30RB 162-232 (162-262 option 280)
- 2 30RB 262-342
- 3 30RB 372-432
- 4 30RB 462-522


9.2 - Pump pressure/flow rate curves (continued)

Single high-pressure pumps

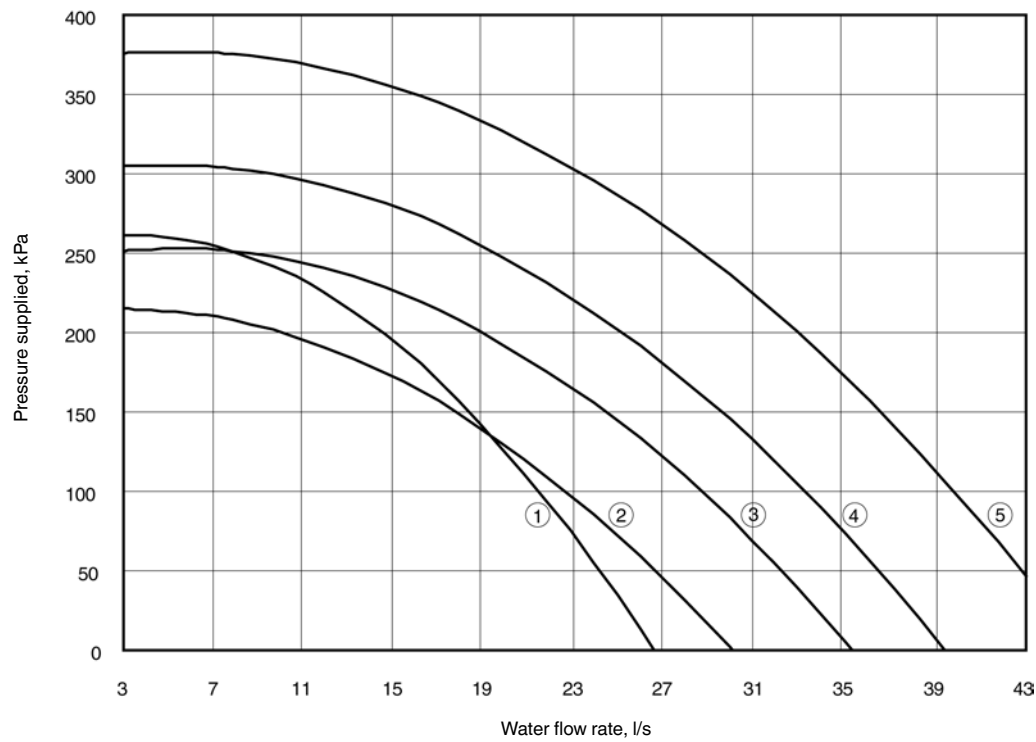

- 1 30RB 232-262
- 2 30RB 162-202
- 3 30RB 302-342
- 4 30RB 372-432
- 5 30RB 462-522

Double high-pressure pumps

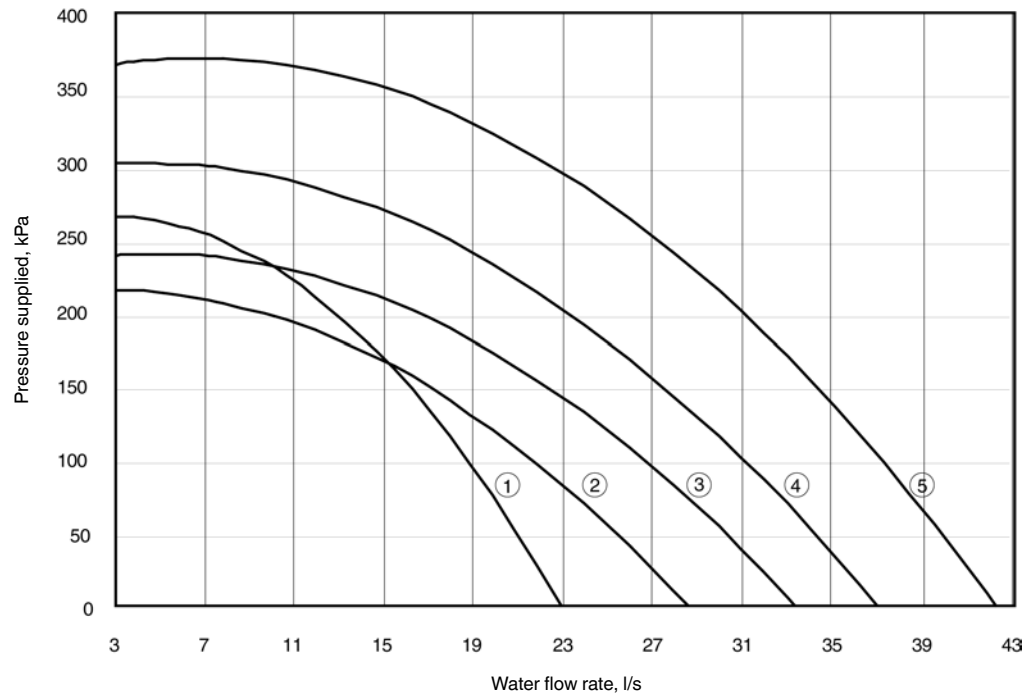


- 1 30RB 232-262
- 2 30RB 162-202
- 3 30RB 302-342
- 4 30RB 372-432
- 5 30RB 462-522

## 9.3 - Available static system pressure


### 9.3.1 - 30RB 162-262 “B” standard units

#### Single low-pressure pumps

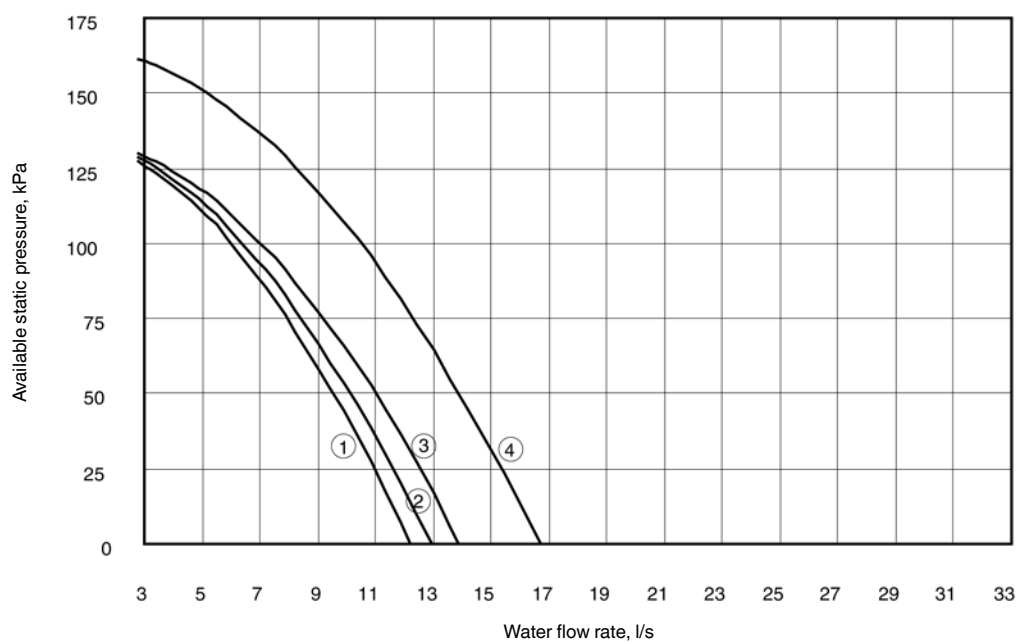

- 1 30RB 162-182B
- 2 30RB 202B
- 3 30RB 232B
- 4 30RB 262B


#### Double low-pressure pumps

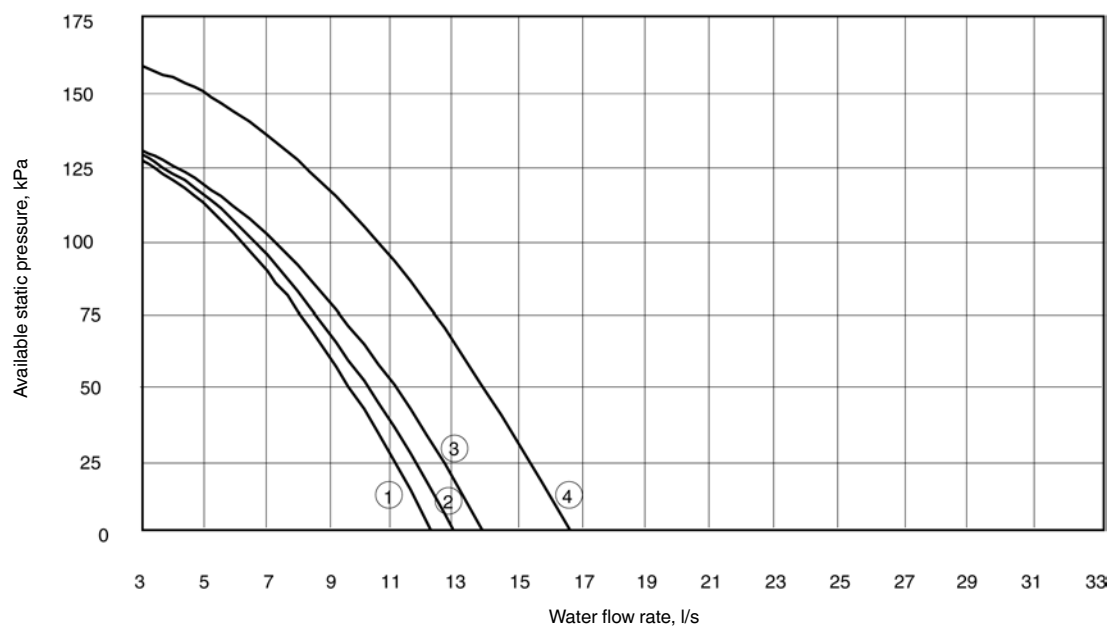


- 1 30RB 162-182B
- 2 30RB 202B
- 3 30RB 232B
- 4 30RB 262B

9.3.1 - 30RB 162-262 “B” standard units (continued)

Single high-pressure pumps

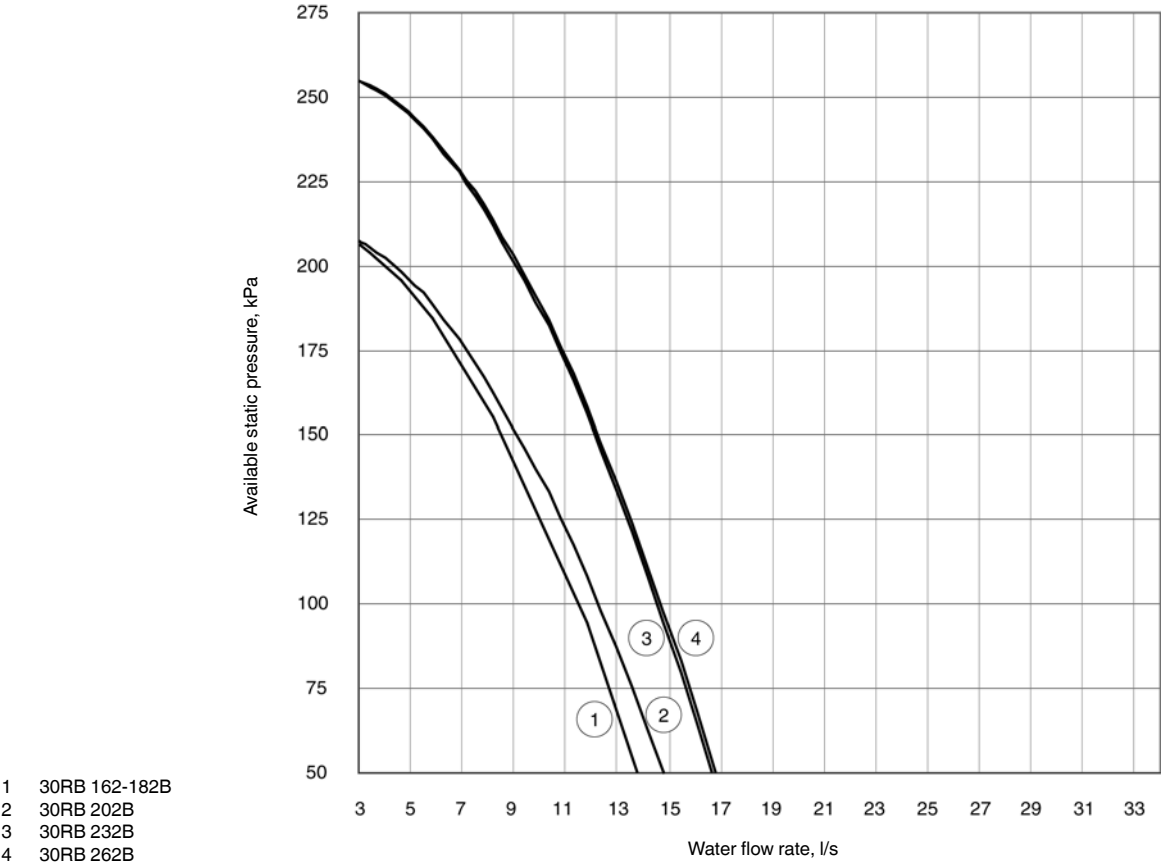

Double high-pressure pumps

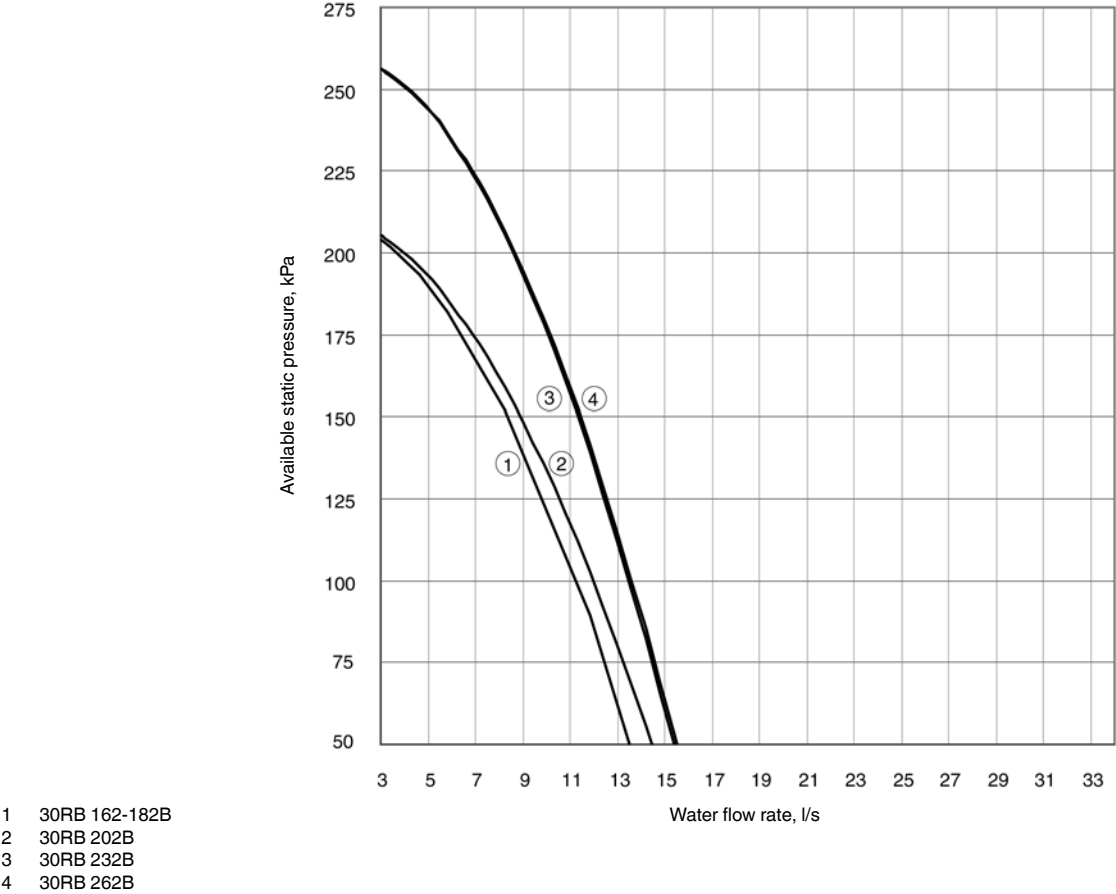




### 9.3 - Available static system pressure (continued)


#### 9.3.2 - 30RB 162-262 “B” units with option 280 and 30RB 302-802 units

##### Single low-pressure pumps

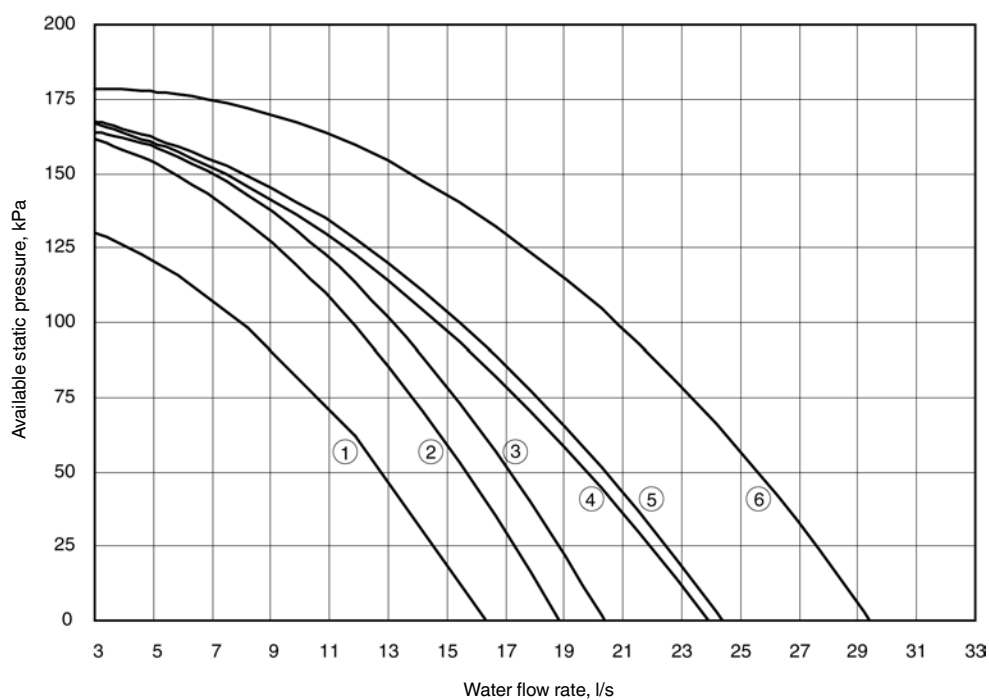

- 1 30RB162-262
- 2 30RB 302
- 3 30RB 342
- 4 30RB 372-402
- 5 30RB 432
- 6 30RB 462-522


##### Double low-pressure pumps

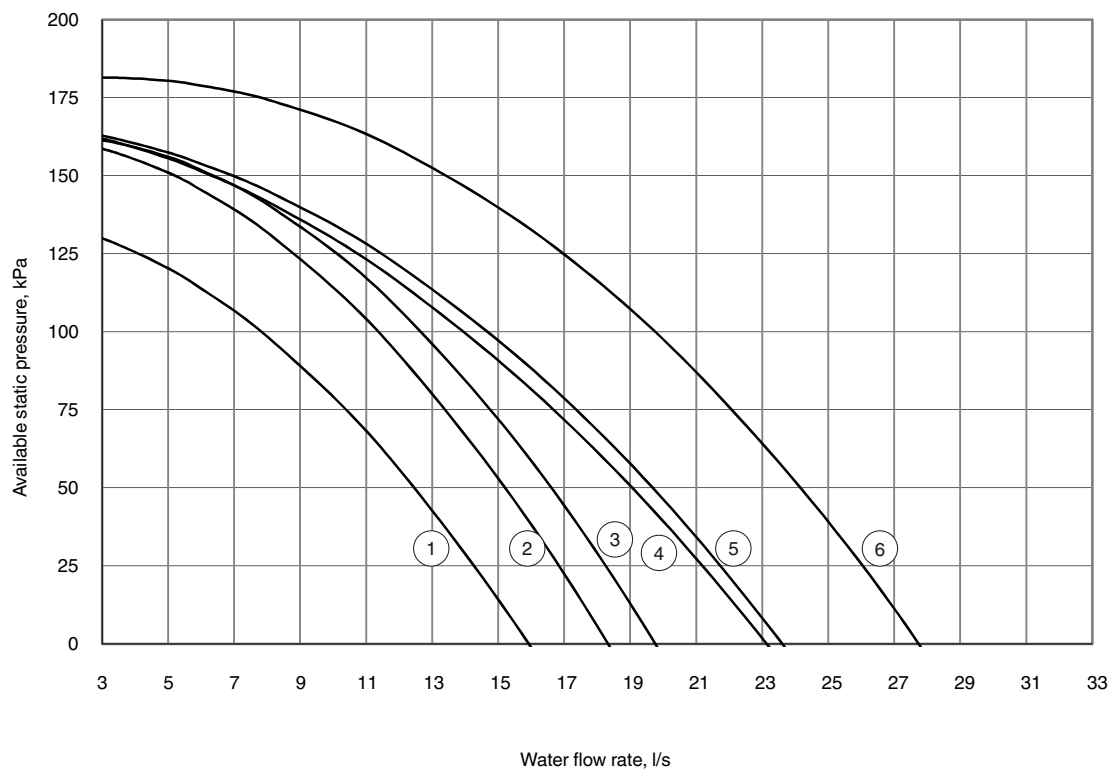

- 1 30RB162-262
- 2 30RB 302
- 3 30RB 342
- 4 30RB 372-402
- 5 30RB 432
- 6 30RB 462-522


9.3.2 - 30RB 162-262 “B” units with option 280 and 30RB 302-802 units (continued)

Single high-pressure pumps

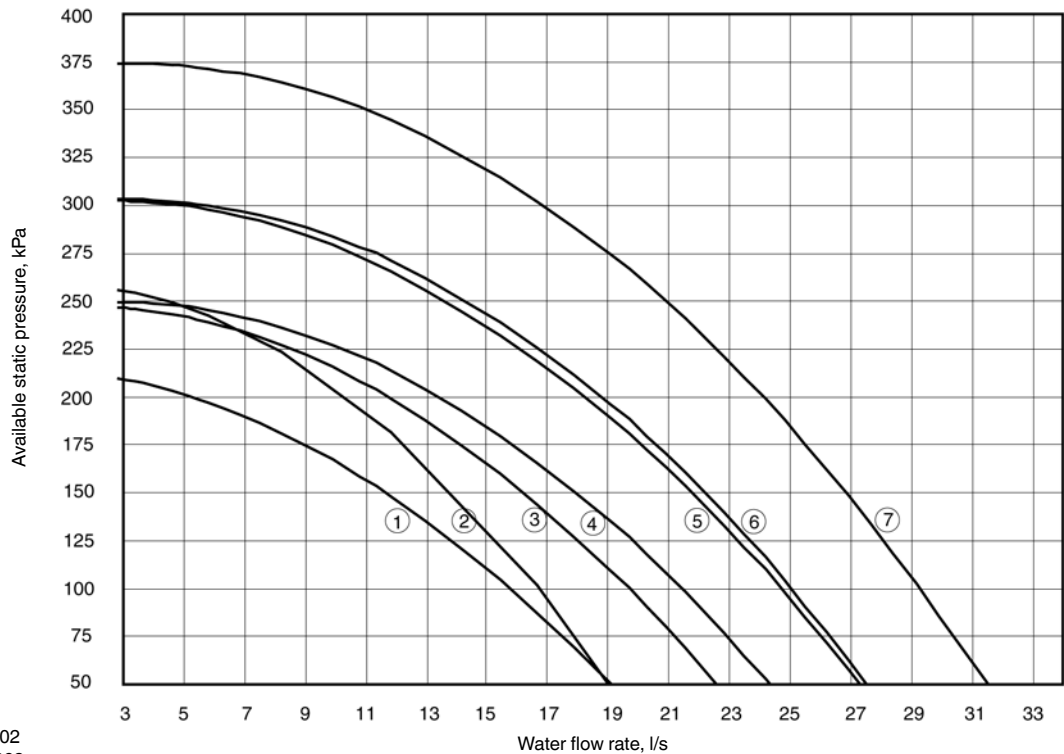

- 1 30RB 162-202
- 2 30RB 232\_262
- 3 30RB 302
- 4 30RB 342
- 5 30RB 372-402
- 6 30RB 432
- 7 30RB 462-522

Double high-pressure pumps

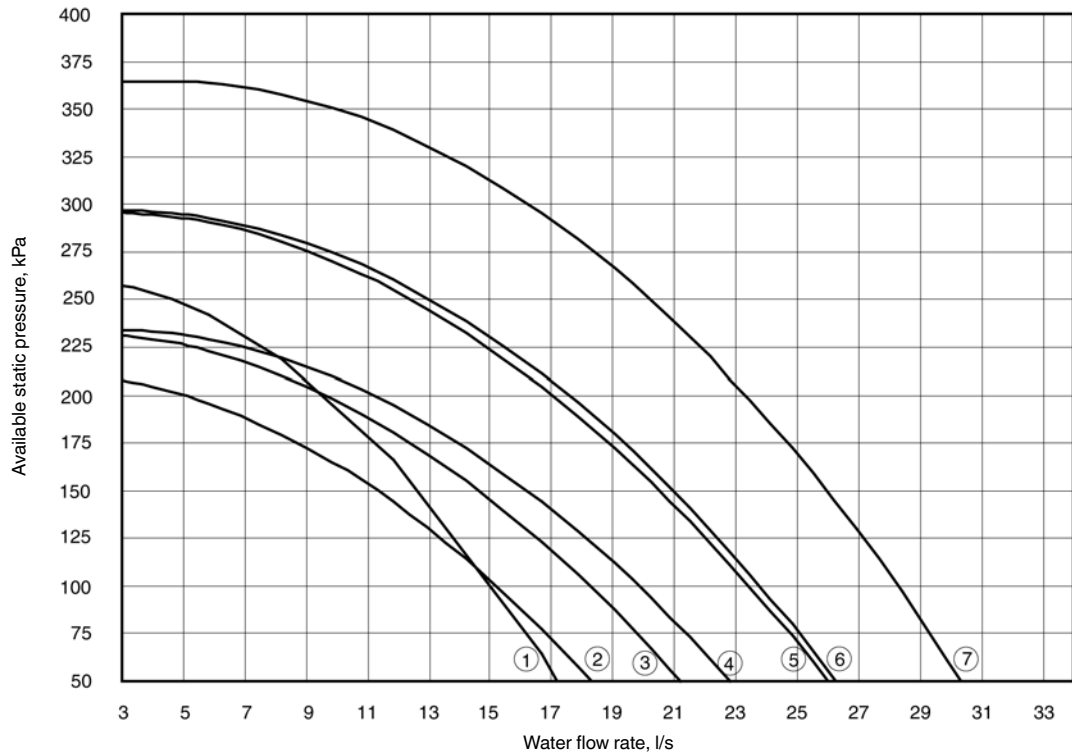

- 1 30RB 162-202
- 2 30RB 232\_262
- 3 30RB 302
- 4 30RB 342
- 5 30RB 372-402
- 6 30RB 432
- 7 30RB 462-522

**Note:** For 30RB 162-262 units: Options 118A, 49, 50, 12, 6 and 241 are only available with option 280.

## 10 - MAJOR SYSTEM COMPONENTS

### 10.1 - Compressors

30RB units use hermetic scroll compressors. Each compressor is equipped with a crankcase oil heater, as standard, complete with a safety device that prevents compressor start-up if there is a fault at the heater.

As standard, each compressor is equipped with a discharge valve for the whole range and with a suction valve for units 30RB 162-262.

Each compressor sub-function is equipped with:

- Anti-vibration mountings between the unit chassis and the chassis of the compressor sub-function.
- Suction piping equipped with openings (not visible) to ensure an even oil level between all compressors.
- A pressure safety switch at the discharge line of each circuit.

### 10.2 - Lubricant

The compressors installed in these units have an oil charge of 6.7 l to ensure their correct operation.

The oil level check must be done with the unit switched off, when then suction and discharge pressures are equalised. The level must be full (higher than or equal to 3/4 of the sight-glass) after two hours shut-down. If this is not the case, there is an oil leak in the circuit. Search and repair the leak, then recharge oil, so that it reaches a high sight glass level, when the unit is recharged with refrigerant. The refrigerant dissolved in the oil raises the level - do not add any more oil.

**ATTENTION:** *Too much oil in the circuit can cause a unit defect.*

**NOTE:** *Use only oils which have been approved for the compressors. Never use oils which have been exposed to air.*

**CAUTION:** *R-22 oils are absolutely not compatible with R-410A oils and vice versa.*

### 10.3 - Condensers

The 30RB coils are micro-channel condensers made entirely of aluminium. For some options (see chapter 11.7 - Other options and accessories) optional coils with internally grooved copper tubes with aluminium fins are also available.

### 10.4 - Fans

The fans are axial Flying Bird fans equipped with rotating shroud and made of composite recyclable material. Each motor is fixed with transverse supports. The motors are three-phase, with permanently lubricated bearings and insulation class F.

### 10.5 - Electronic expansion valve (EXV)

The EXV is equipped with a stepper motor (2785 to 3690 steps, depending on the model) that is controlled via the EXV board. It is also equipped with a sight-glass that permits verification of the mechanism movement and the presence of the liquid gasket.

### 10.6 - Moisture indicator

Located on the EXV, permits control of the unit charge and indicates moisture in the circuit. The presence of bubbles in the sight-glass indicates an insufficient charge or non-condensables in the system. The presence of moisture changes the colour of the indicator paper in the sight-glass.

### 10.7 - Filter drier

The role of the filter drier is to keep the circuit clean and moisture-free. The moisture indicator shows, when it is necessary to change the element. A difference in temperature between the filter inlet and outlet shows that the element is dirty.

### 10.8 - Evaporator

#### 10.8.1 - 30RB 162-262 “B” standard units

The evaporator is a plate heat exchanger with refrigerant circuits. The water connections of the heat exchanger are Victaulic connections.

The evaporator has a thermal insulation of 19 mm thick polyurethane foam. As an option it can be protected against frost (option 41: evaporator frost protection).

The products that may be added for thermal insulation of the containers during the water piping connection procedure must be chemically neutral in relation to the materials and coatings to which they are applied. This is also the case for the products originally supplied by Carrier.

**NOTES:** *Monitoring during operation:*

- *Follow the regulations on monitoring pressurised equipment.*
- *It is normally required that the user or operator sets up and maintains a monitoring and maintenance file.*
- *Follow the control programmes of EN 378-2, annexe D.*
- *If they exist follow local professional recommendations.*
- *Regularly check for possible presence of impurities (e.g. silicon grains) in the heat exchange fluids. These impurities maybe the cause of the wear or corrosion by puncture.*
- *The reports of periodical checks by the user or operator must be included in the supervision and maintenance file.*

### 10.8.2 - 30RB 162-262 “B” with option 280 and 30RB 302-802

The evaporator is a shell-and-tube type with two or three refrigerant circuits. It has been tested and stamped in accordance with applicable pressure codes for a maximum operating pressure of 2910 kPa refrigerant-side and 1000 kPa water-side. The seamless copper tubes are finned on the refrigerant side and expanded into the tube sheets. The water connection of the heat exchanger is a Victaulic connection.

The evaporator shell has a thermal insulation of 19 mm thick polyurethane foam, and is equipped with a water drain and purge. An option with an aluminium jacket is also available.

As an option the evaporator is available with frost protection (option 41: evaporator frost protection).

The products that may be added for thermal insulation of the containers during the water piping connection procedure must be chemically neutral in relation to the materials and coatings to which they are applied. This is also the case for the products originally supplied by Carrier.

#### **NOTES: Monitoring during operation, re-qualification, re-testing and re-testing dispensation:**

- *Follow the regulations on monitoring pressurised equipment.*
- *It is normally required that the user or operator sets up and maintains a monitoring and maintenance file.*
- *Follow the control programmes of EN 378-2, annexes A, B, C and D.*
- *If they exist follow local professional recommendations.*
- *Regularly inspect the condition of the coating (paint) to detect blistering resulting from corrosion. To do this, check a non-insulated section of the container or the rust formation at the insulation joints.*
- *Regularly check for possible presence of impurities (e.g. silicon grains) in the heat exchange fluids. These impurities maybe the cause of the wear or corrosion by puncture.*
- *Filter the heat exchange fluid check and carry out internal inspections as described in EN 378-2, annex C.*
- *In case of re-testing take possible maximum pressure differences, as indicated in (2) above into consideration.*
- *The reports of periodical checks by the user or operator must be included in the supervision and maintenance file.*

#### **Repair**

*Any repair or modification, including the replacement of moving parts:*

- *must follow local regulations and be made by qualified operators and in accordance with qualified procedures, including changing the heat exchanger tubes*
- *must be made in accordance with the instructions of the original manufacturer. Repair and modification that necessitate permanent assembly (soldering, welding, expanding etc.) must be made using the correct procedures and by qualified operators.*
- *An indication of any modification or repair must be shown in the monitoring and maintenance file.*

#### **Recycling**

*The unit is wholly or partly recyclable. After use it contains refrigerant vapours and oil residue. It is coated by paint.*

#### **Operating life**

*This unit is designed for:*

- *prolonged storage of 15 years under nitrogen charge with a temperature difference of 20 K per day.*
- *452000 cycles (start-ups) with a maximum difference of 6 K between two neighbouring points in the container, based on 6 start-ups per hour over 15 years at a usage rate of 57%.*

#### **Excess corrosion thickness**

*Gas side: 0 mm*

*Heat exchange fluid side: 1 mm for tubular plates in lightly alloyed steels, 0 mm for stainless steel plates or plates with copper-nickel or stainless steel protection.*


### 10.9 - Refrigerant

30RB units operate with refrigerant R-410A.

### 10.10 - High-pressure safety switch

30RB units are equipped with high-pressure safety switches with automatic reset. These pressure switches are located at the discharge of each circuit.

## 10.11 - Fan arrangement

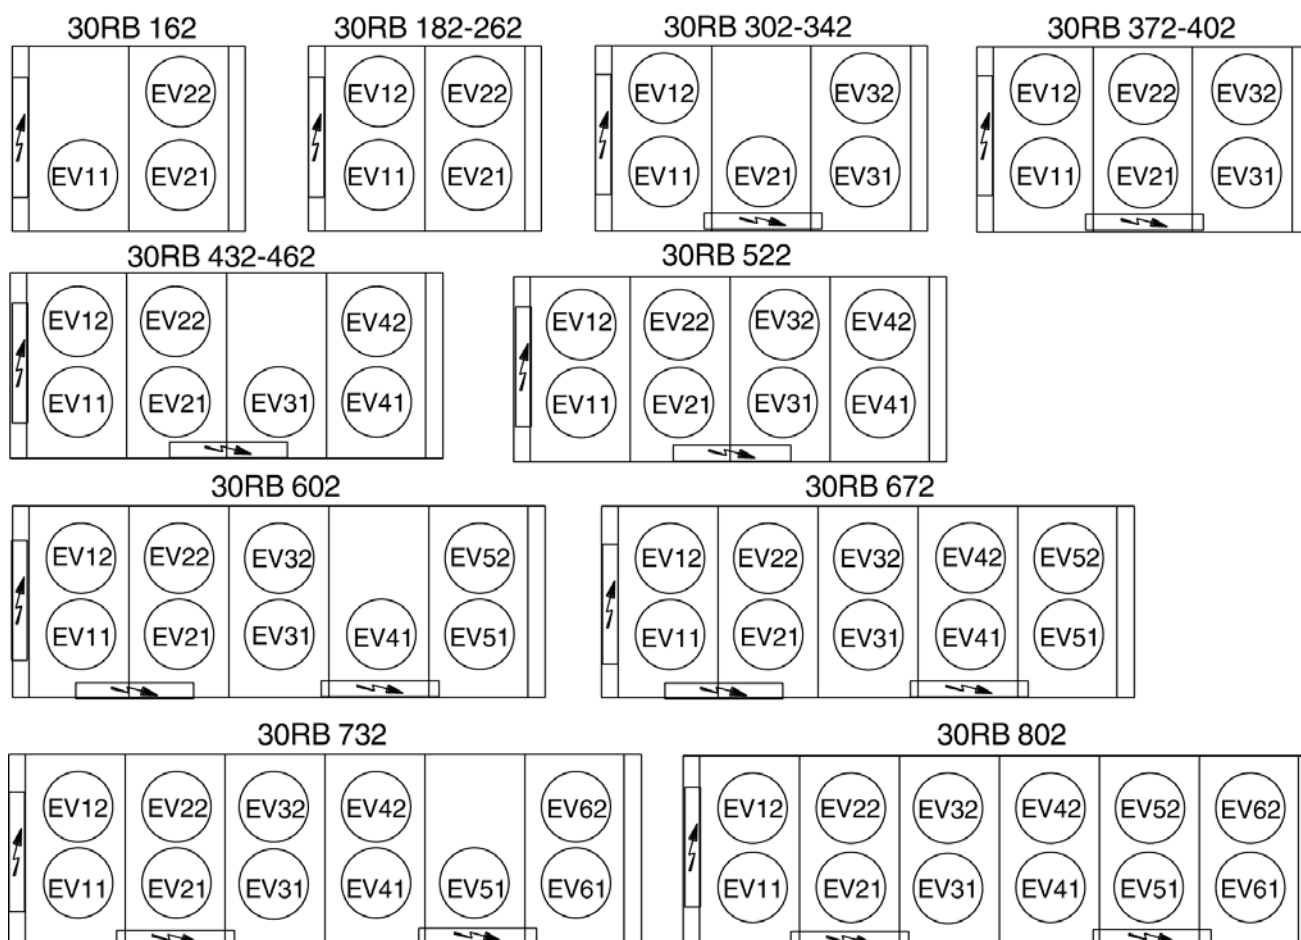

## 10.12 - Fan stages

| Standard unit<br>30RB | Circuit | Stage 1 | Stage 2     | Stage 3            | Stage 4                   | Option 28<br>with variator | Option 28B with<br>two-speed fan |
|-----------------------|---------|---------|-------------|--------------------|---------------------------|----------------------------|----------------------------------|
| 162                   | A       | EV11    | EV11        |                    |                           | EV11                       | EV11                             |
|                       | B       | EV12    | EV21 + EV22 |                    |                           | EV21                       | EV21                             |
| 182-262               | A       | EV11    | EV11 + EV12 |                    |                           | EV11                       | EV11                             |
|                       | B       | EV21    | EV21 + EV22 |                    |                           | EV21                       | EV21                             |
| 302-342               | A       | EV11    | EV11 + EV21 | EV11 + EV21 + EV12 |                           | EV11                       | EV11                             |
|                       | B       | EV31    | EV31 + EV32 |                    |                           | EV31                       | EV31                             |
| 372-402               | A       | EV11    | EV11 + EV12 | EV11 + EV12 + EV21 |                           | EV11                       | EV11                             |
|                       | B       | EV31    | EV31 + EV32 | EV31 + EV32 + EV22 |                           | EV31                       | EV31                             |
| 432-462               | A       | EV11    | EV11 + EV21 | EV11 + EV21 + EV12 | EV11 + EV21 + EV12 + EV22 | EV11                       | EV11                             |
|                       | B       | EV41    | EV41 + EV31 | EV41 + EV31 + EV42 |                           | EV41                       | EV41                             |
| 522                   | A       | EV11    | EV11 + EV21 | EV11 + EV21 + EV12 | EV11 + EV21 + EV12 + EV22 | EV11                       | EV11                             |
|                       | B       | EV31    | EV31 + EV41 | EV31 + EV41 + EV32 | EV31 + EV41 + EV32 + EV42 | EV31                       | EV31                             |
| 602                   | A       | EV11    | EV11 + EV12 | EV11 + EV12 + EV21 |                           | EV11                       | EV11                             |
|                       | B       | EV31    | EV31 + EV32 | EV31 + EV32 + EV22 |                           | EV31                       | EV31                             |
|                       | C       | EV51    | EV51 + EV41 | EV51 + EV41 + EV52 |                           | EV51                       | EV51                             |
| 672                   | A       | EV11    | EV11 + EV12 | EV11 + EV12 + EV21 |                           | EV11                       | EV11                             |
|                       | B       | EV31    | EV31 + EV32 | EV31 + EV32 + EV22 |                           | EV31                       | EV31                             |
|                       | C       | EV41    | EV41 + EV51 | EV41 + EV51 + EV42 | EV41 + EV51 + EV42 + EV52 | EV41                       | EV41                             |
| 732                   | A       | EV11    | EV11 + EV21 | EV11 + EV21 + EV12 | EV11 + EV21 + EV12 + EV22 | EV11                       | EV11                             |
|                       | B       | EV31    | EV31 + EV41 | EV31 + EV41 + EV32 | EV31 + EV41 + EV32 + EV42 | EV31                       | EV31                             |
|                       | C       | EV61    | EV61 + EV51 | EV61 + EV51 + EV62 |                           | EV61                       | EV61                             |
| 802                   | A       | EV11    | EV11 + EV21 | EV11 + EV21 + EV12 | EV11 + EV21 + EV12 + EV22 | EV11                       | EV11                             |
|                       | B       | EV31    | EV31 + EV41 | EV31 + EV41 + EV32 | EV31 + EV41 + EV32 + EV42 | EV31                       | EV31                             |
|                       | C       | EV51    | EV51 + EV61 | EV51 + EV61 + EV52 | EV51 + EV61 + EV52 + EV62 | EV51                       | EV51                             |

## 11 - OPTIONS AND ACCESSORIES

### 11.1 - Free-cooling system (option 118A)


| 30RB option 118A                                       |    | 232  | 262  | 302  | 342  | 372  | 402  | 432  | 462  | 522  |
|--|----|------|------|------|------|------|------|------|------|------|
| <b>Operating weight*</b>                               |    |      |      |      |      |      |      |      |      |      |
| Unit with option 15                                    | kg | 2398 | 2580 | 3229 | 3429 | 3518 | 3658 | 4241 | 4381 | 4591 |
| Unit with option 15 + dual-pump hydronic module option | kg | 2638 | 2818 | 3539 | 3739 | 3868 | 3998 | 4591 | 4781 | 5011 |
| Standard unit  | kg | 2208 | 2390 | 2999 | 3199 | 3268 | 3398 | 3951 | 4091 | 4281 |
| <b>Refrigerant</b>                                     |    |      |      |      |      |      |      |      |      |      |
| Circuit A  | kg | 29   | 29   | 42.5 | 44   | 45.5 | 46   | 55   | 57   | 57   |
| Circuit B  | kg | 29   | 29   | 31   | 31   | 45.5 | 46   | 47   | 47   | 57   |

\* Weight shown is a guideline only.

#### 11.1.1 - Operating limits

| <b>Cooling mode</b>                        |    |                |                |
|--|----|----------------|----------------|
| <b>Evaporator</b>                          |    | <b>Minimum</b> | <b>Maximum</b> |
| Entering water temperature at start-up     | °C | 6.8            | 40             |
| Leaving water temperature during operation | °C | 5              | 15             |
| <b>Condenser (air)</b>                     |    | <b>Minimum</b> | <b>Maximum</b> |
| Outdoor ambient temperature                | °C | 0              | 48             |
| Available static pressure                  | Pa | 0              | 0              |
| Ambient temperature (option 28)            | °C | -20            | 48             |
| <b>Free-cooling mode</b>                   |    |                |                |
| <b>Evaporator</b>                          |    | <b>Minimum</b> | <b>Maximum</b> |
| Entering water temperature at start-up     | °C | 6.8            | 40             |
| Leaving water temperature during operation | °C | 5              | 26             |
| <b>Condenser (air)</b>                     |    | <b>Minimum</b> | <b>Maximum</b> |
| Outdoor ambient operating temperature      | °C | -25            | 20             |
| Available static pressure                  | Pa | 0              | 0              |

#### 11.1.2 - Operation

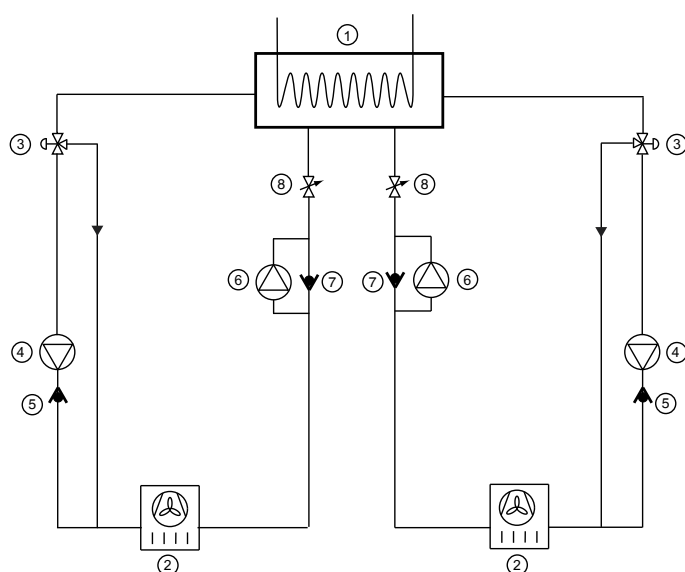

#### Legend

- |                          |                           |
|--------------------------|---------------------------|
| 1. Evaporator            | 5. Check valve            |
| 2. Air condenser (coils) | 6. Refrigerant pump       |
| 3. Three-way valve       | 7. Check valve            |
| 4. Compressor            | 8. Expansion device (EXV) |

The change-over between the cooling and free-cooling modes is automatically controlled (it is possible to block the change-over to free-cooling by reconfiguring the machine - see Controls IOM). The configurable parameters permitting change-over are the outside air temperature and the leaving water temperature set-point. As soon as the temperature difference  $LWT_{stp} - OAT$  is above 8 K the current capacity in cooling mode is calculated and compared with the theoretical free-cooling capacity. This comparison authorizes/stops the change-over to free-cooling.

After change-over to free-cooling all compressors are stopped (the compressor functions are bypassed). As soon as the valves open, the free-cooling pumps are started. This change-over logic takes around 10 minutes. Taking this timing into consideration only one change-over cooling - free-cooling is authorized per hour.

If the capacity supplied in the free-cooling mode is insufficient (set-point not reached), the unit automatically changes over to cooling mode.

To optimize operation in free-cooling mode we strongly recommend to use the set-point offset function. This favours the change-over to free-cooling and increases the capacity in free-cooling mode.

### 11.2 - Total heat reclaim (option 50)





#### 11.2.1 - Physical data for 30RB units with total heat reclaim condenser option

| 30RB option 50                              |     | 262*  | 262** | 302  | 342  | 372  | 402  | 432   | 462   | 522   |
|---|-----|---|-------|------|------|------|------|-------|-------|-------|
| <b>Operating weight***</b>                  |     |   |       |      |      |      |      |       |       |       |
| Unit with heat reclaim option               | kg  | 2340  | 2610  | 3200 | 3420 | 3480 | 3610 | 4290  | 4430  | 4620  |
| Unit with heat reclaim option and option 15 | kg  | -   | 2800  | 3440 | 3660 | 3740 | 3870 | 4590  | 4730  | 4930  |
| <b>Condenser</b>                            |     | Shell-and-tube condenser with finned copper tubes |       |      |      |      |      |       |       |       |
| Water volume                                | l   | 22  | 22    | 22   | 22   | 22   | 22   | 46    | 46    | 46    |
| Max. water-side operating pressure          | kPa | 1000  | 1000  | 1000 | 1000 | 1000 | 1000 | 1000  | 1000  | 1000  |
| <b>Water connections</b>                    |     | Victaulic   |       |      |      |      |      |       |       |       |
| Connection                                  | in. | 3   | 3     | 3    | 3    | 3    | 3    | 4     | 4     | 4     |
| Outside diameter                            | mm  | 88.9  | 88.9  | 88.9 | 88.9 | 88.9 | 88.9 | 114.3 | 114.3 | 114.3 |

\* Standard coil    \*\* Copper/aluminium coil (option 254)    \*\*\* Weight shown is a guideline only.

## 11.2.2 - Dimensions, clearances, weight distribution

### 30RB 262 - Total heat reclaim condenser option

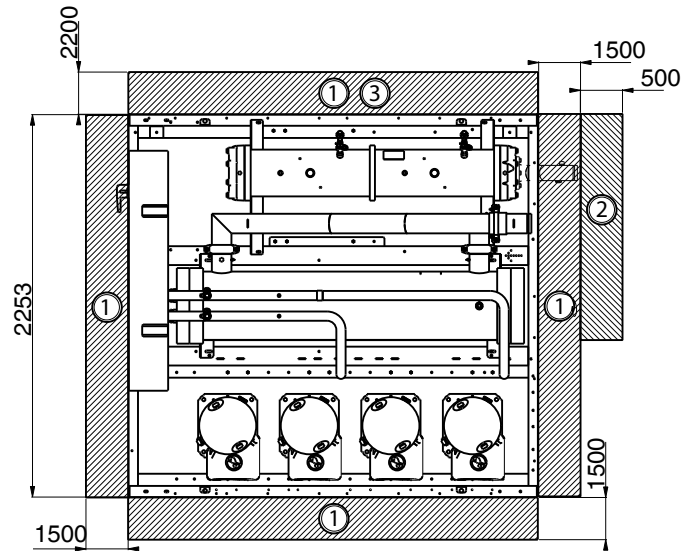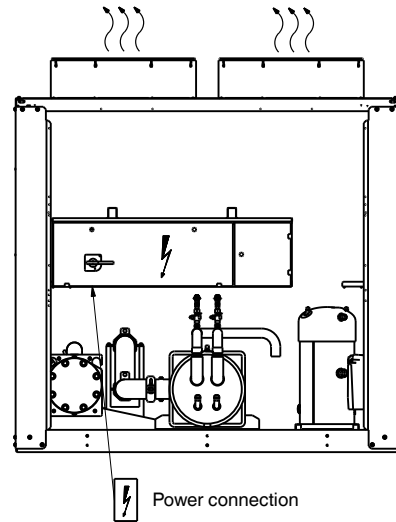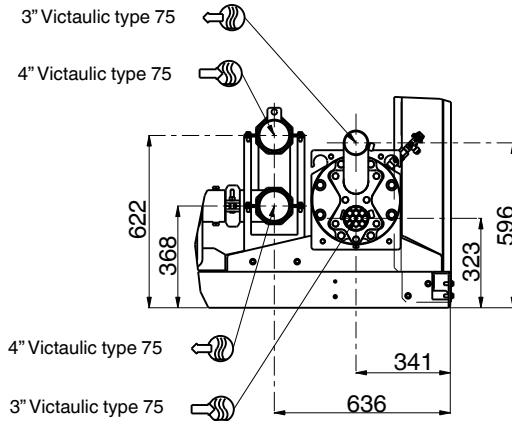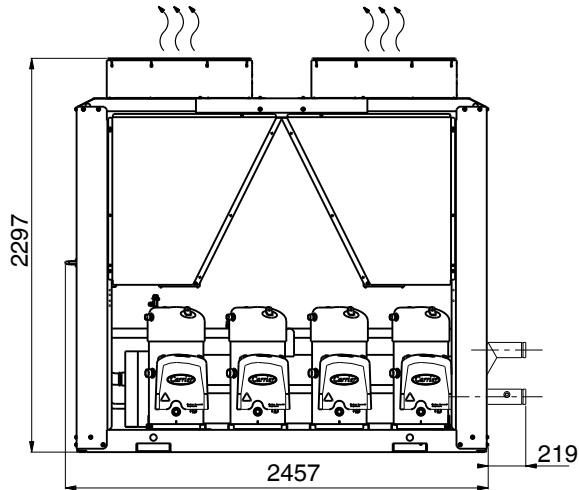

#### Legend:

All dimensions are in mm.

- ① Clearances required for maintenance and air flow
- ② Clearances recommended for evaporator tube removal
- ③ Clearances recommended for heat exchanger removal

Water inlet

Water outlet

Air outlet, do not obstruct

Control box



**NOTE: Non-contractual drawings.**

**When designing an installation, refer to the certified dimensional drawings, available on request.**

**For the positioning of the fixing points, weight distribution and centre of gravity coordinates.**

**ATTENTION: The Victaulic flange sleeves of the condenser are not installed, but supplied with the unit. The temperature sensors and the condenser flow switch are in the control box and wired. After connecting the Victaulic flange sleeves, the temperature sensors must be installed, as well as the water flow switch which must be located in the condenser outlet.**

## 30RB 302-402 - Total heat reclaim condenser option

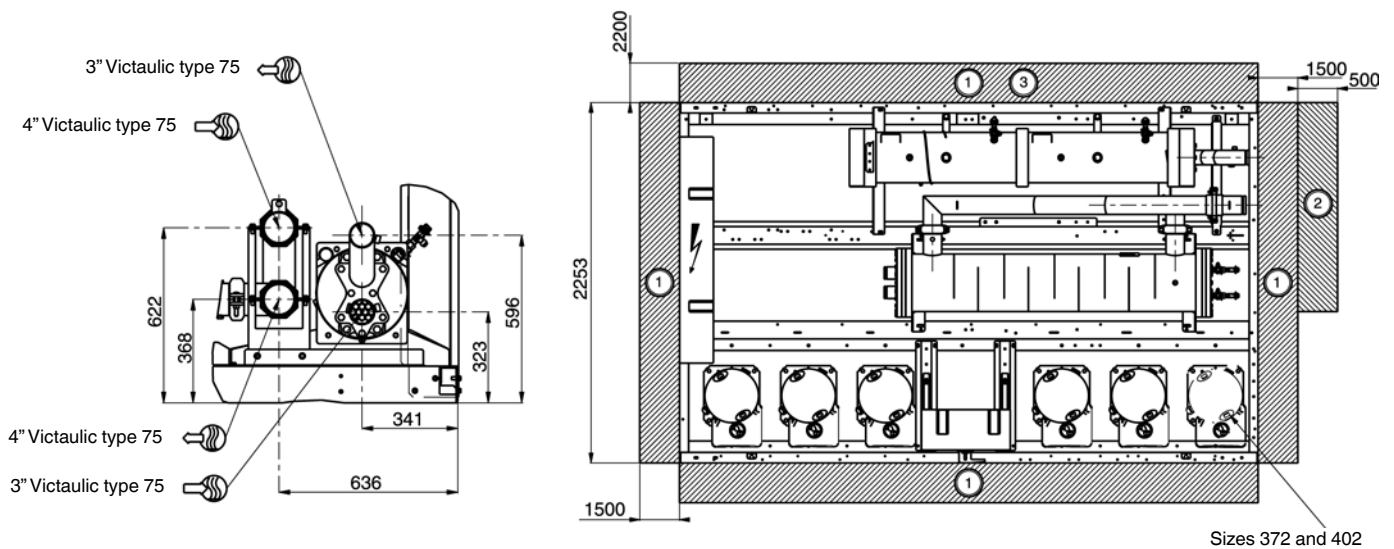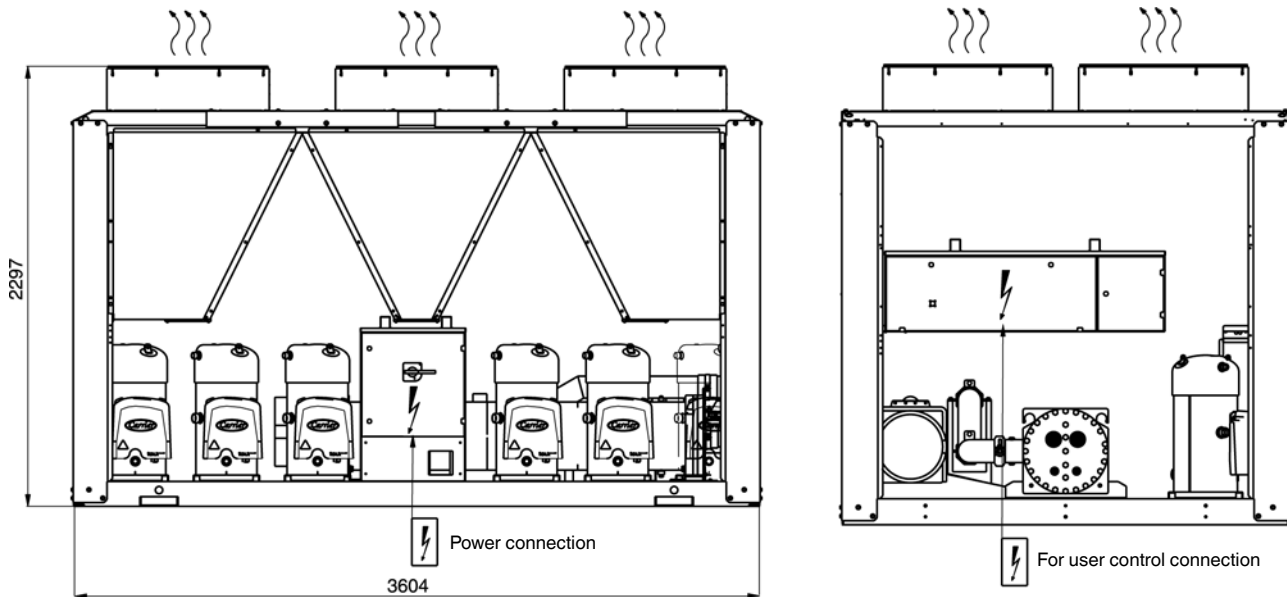

### Legend:

All dimensions are in mm.

- ① Clearances required for maintenance and air flow
- ② Clearances recommended for evaporator tube removal
- ③ Clearances recommended for heat exchanger removal
- Water inlet
- Water outlet
- Air outlet, do not obstruct
- Control box

**NOTE:** Non-contractual drawings.




*When designing an installation, refer to the certified dimensional drawings, available on request.*

*For the positioning of the fixing points, weight distribution and centre of gravity coordinates.*

**ATTENTION:** The Victaulic flange sleeves of the condenser are factory-installed.



## 30RB 432-522 - Total heat reclaim condenser option

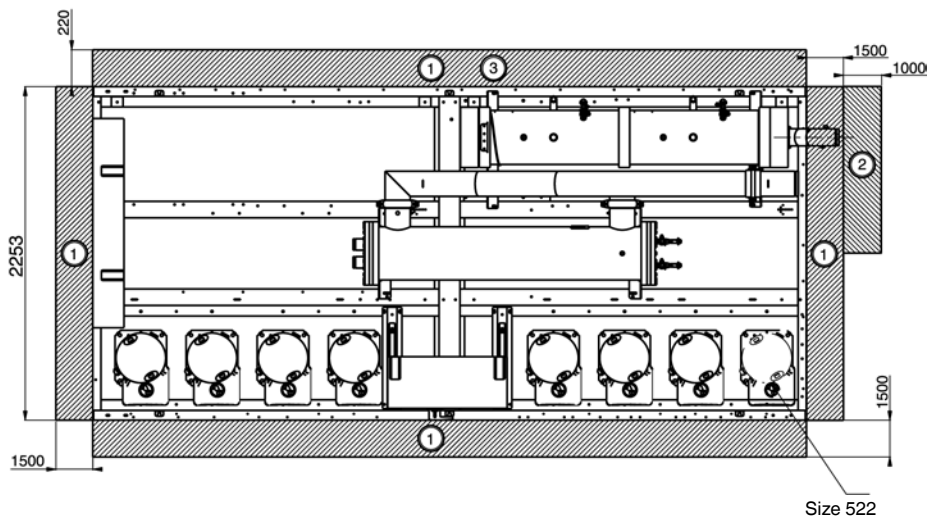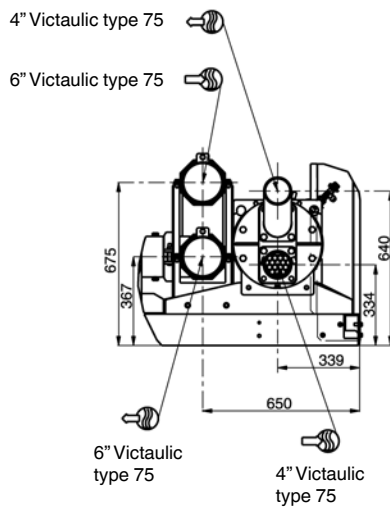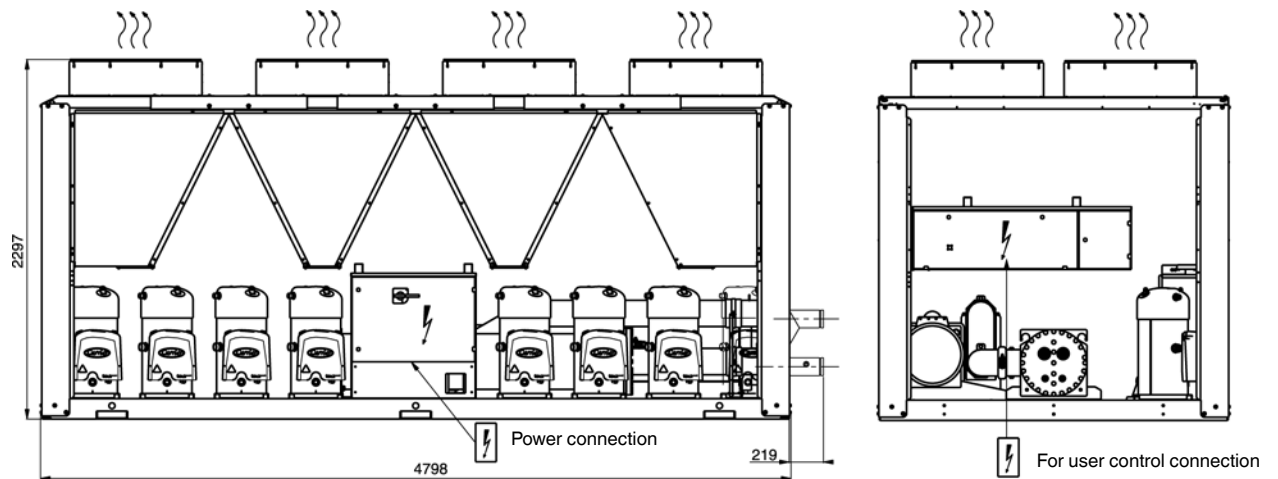

### Legend:

All dimensions are in mm.

- ① Clearances required for maintenance and air flow
- ② Clearances recommended for evaporator tube removal
- ③ Clearances recommended for heat exchanger removal

Water inlet

Water outlet

Air outlet, do not obstruct

Control box


**ATTENTION:** The Victaulic flange sleeves of the condenser are not installed, but supplied with the unit. The temperature sensors and the condenser flow switch are in the control box and wired. After connecting the Victaulic flange sleeves, the temperature sensors must be installed, as well as the water flow switch which must be located in the condenser outlet.

**NOTE:** Non-contractual drawings.

When designing an installation, refer to the certified dimensional drawings, available on request.

For the positioning of the fixing points, weight distribution and centre of gravity coordinates.

### 11.2.3 - Condenser water connection

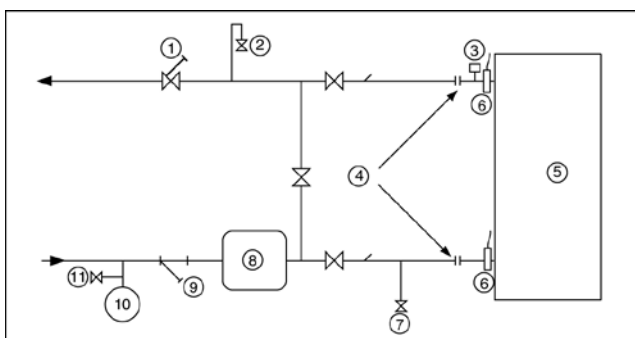

### Legend


- 1 Control valve
- 2 Air vent
- 3 Flow switch for the condenser (supplied)
- 4 Flexible connection
- 5 Condenser
- 6 Temperature sensor (supplied)
- 7 Drain
- 8 Buffer tank (if needed)
- 9 Filter (mesh size: 1.2 mm = 20 mesh)
- 10 Expansion tank
- 11 Fill valve

### 11.2.4 - Operating limits

| Heat reclaim condenser                     |    | Minimum | Maximum |
|--|----|---------|---------|
| Entering water temperature at start-up     | °C | 15      | 55      |
| Leaving water temperature during operation | °C | 20      | 55      |
| Condenser (air)                            |    | Minimum | Maximum |
| Outdoor ambient operating temperature      | °C | 0*      | 46      |
| Available static pressure                  | Pa | 0       | 0       |

\* The minimum outside temperature for heat reclaim mode is 0°C in cooling mode and -20°C with the 'winter operation' option.

**The water entering temperature at start-up must not fall below 15°C. For installations with a lower temperature an accessory 3-way valve must be installed.**

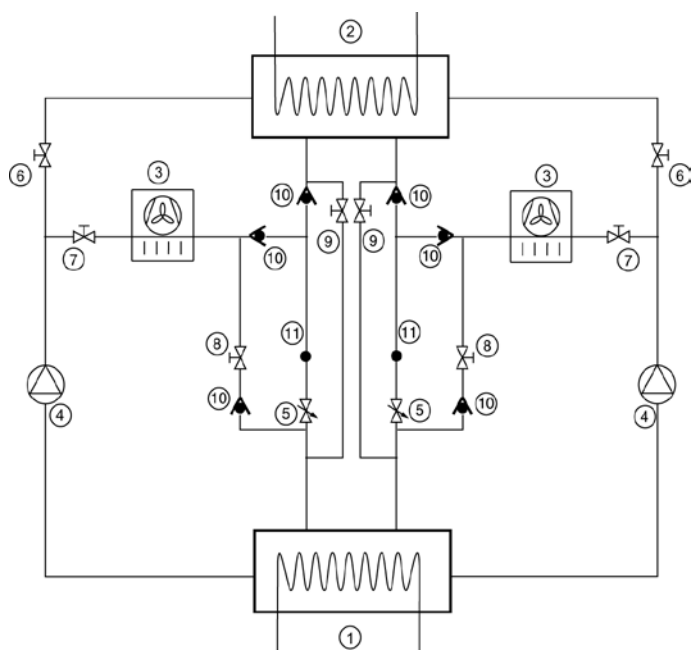

#### Legend

- 1 Evaporator
- 2 Heat reclaim condenser
- 3 Air condenser (coils)
- 4 Compressor
- 5 Expansion device (EXV)
- 6 Solenoid valve: heat reclaim mode
- 7 Solenoid valve: cooling mode
- 8 Solenoid valve: charge recovery in heat reclaim mode
- 9 Solenoid valve: charge recovery in cooling mode
- 10 Check valve
- 11 Pressure and temperature measurement to calculate the liquid subcooling to optimise the charge recovery

### 11.2.5 - Flow control

A flow switch on the condenser is factory-installed. The condenser loop is protected against a flow rate that is too low. Output 16 of the additional board of this option allows control of the condenser pump operation that will start up after the unit has started.


If the flow rate is too low:

- changeover to the heat reclaim mode is not permitted,
- immediate changeover to cooling mode when the flow rate is too low and the unit operates in heat reclaim mode.

### 11.2.6 - Heat reclaim operation

The heat reclaim condenser option is only available on units with two circuits. It was designed with a shell-and-tube two-circuit heat exchanger with the coils in parallel.

The two circuits are independently controlled. This means that one circuit can be in cooling mode and the other in heat reclaim mode. This permits two stable control stages (100% if the circuits are in heat reclaim mode, and approximately 50% based on the size of the circuit in operation). The intermediate stages are obtained by cycling between the air condenser mode and the heat reclaim mode.

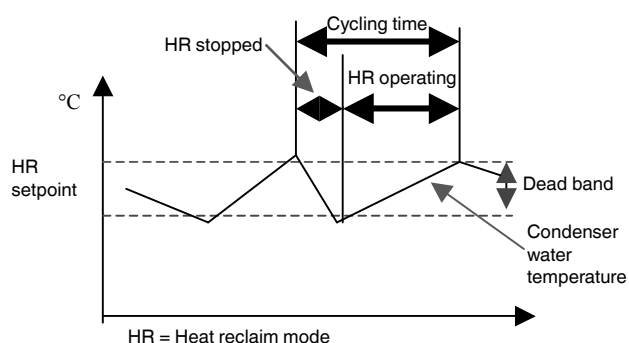

This cycling will lead to a water temperature change in the condenser loop of the heat reclaim condenser. Based on the stability required, the water loop must be more or less significant.

| Stability | Volume   |
|-----------|----------|
| 2°C       | 40 l/kW* |
| 3°C       | 30 l/kW* |
| 4°C       | 20 l/kW* |
| 5°C       | 15 l/kW* |

\* kW: cooling mode capacity  
The number of cycles is limited to 4 per hour

Please refer to the 30RB controls manual for more information on the control logic of the condenser loop.

### 11.2.7 - Frost protection

The water condenser is protected by electric heaters. The algorithm is based on the outside temperature. However, the condenser connection pipes are not protected. It is recommended to add pipe protection at the time of installation (glycol, heat insulation, heaters etc.). If the pumps are ordered by unit, the water condenser is also protected by a pump control algorithm that ensures water flow at water temperatures that are too low. If the pumps are not ordered by unit, it is recommended to ensure water flow at outside temperatures that are too low.

## 11.3 - Partial heat reclaim using desuperheaters (option 49)

This option permits the production of free hot water using heat reclaim by desuperheating the compressor discharge gases. The option is available for the whole 30RB range.

A plate heat exchanger is installed in series with the air condenser coils on the compressor discharge line of each circuit.

The control configuration for the desuperheater option is factory assembled (see chapter 11.3.6 - Control configuration).

### 11.3.1 - Physical data, 30RB units with partial heat reclaim using desuperheaters (option 49)

| 30RB option 49                         |     | 162                          | 182  | 202  | 232  | 262  | 302  | 342  | 372  | 402  | 432  | 462  | 522  | 602  | 672  | 732  | 802  |
|--|-----|------------------------------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| <b>Operating weight*</b>               |     |                              |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| Standard unit**                        | kg  | 1882                         | 1974 | 2074 | 2092 | 2260 | 2853 | 3049 | 3092 | 3218 | 3755 | 3895 | 4063 | 5285 | 5484 | 6145 | 6315 |
| Unit with options***                   | kg  | 2052                         | 2154 | 2244 | 2282 | 2450 | 3083 | 3279 | 3342 | 3478 | 4045 | 4185 | 4373 | 5645 | 5833 | 6555 | 6745 |
| Unit with options****                  | kg  | 2302                         | 2404 | 2484 | 2522 | 2690 | 3393 | 3589 | 3692 | 3818 | 4395 | 4585 | 4795 | -    | -    | -    | -    |
| <b>Desuperheater in circuits A/B/C</b> |     | Plate heat exchangers        |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| Water volume circuit A                 | l   | 1.75                         | 1.75 | 1.75 | 3.75 | 3.75 | 5.5  | 5.5  | 5.5  | 5.5  | 7.5  | 7.5  | 7.5  | 5.5  | 5.5  | 7.5  | 7.5  |
| Water volume circuit B                 | l   | 3.5                          | 3.5  | 3.5  | 3.75 | 3.75 | 3.75 | 3.75 | 5.5  | 5.5  | 5.5  | 5.5  | 7.5  | 5.5  | 5.5  | 7.5  | 7.5  |
| Water volume circuit C                 | l   | -                            | -    | -    | -    | -    | -    | -    | -    | -    | -    | -    | -    | 5.5  | 7.5  | 5.5  | 7.5  |
| Max. water-side operating pressure     | kPa | 1000                         | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 | 1000 |
| <b>Water connections</b>               |     | Cylindrical, male gas thread |      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |
| Connection                             | in  | 2                            | 2    | 2    | 2    | 2    | 2    | 2    | 2    | 2    | 2    | 2    | 2    | 2    | 2    | 2    | 2    |
| Outside diameter                       | mm  | 60.3                         | 60.3 | 60.3 | 60.3 | 60.3 | 60.3 | 60.3 | 60.3 | 60.3 | 60.3 | 60.3 | 60.3 | 60.3 | 60.3 | 60.3 | 60.3 |

\* Weights shown are a guideline only


\*\* Standard unit (with MCHX coils) and desuperheater option

\*\*\* Unit with option 15 + desuperheater


\*\*\*\* Unit with option 15 + desuperheater + hydronic module with high-pressure dual pump

### 11.3.2 - Dimensional drawings for units equipped with the desuperheater option


30RB 162-262

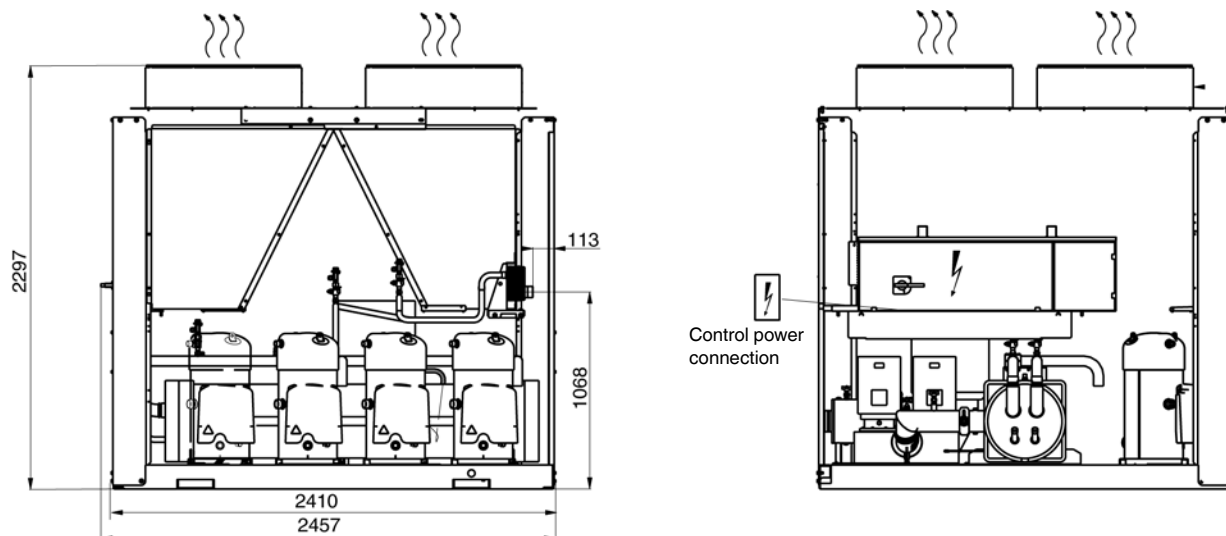

Unit with hydronic module

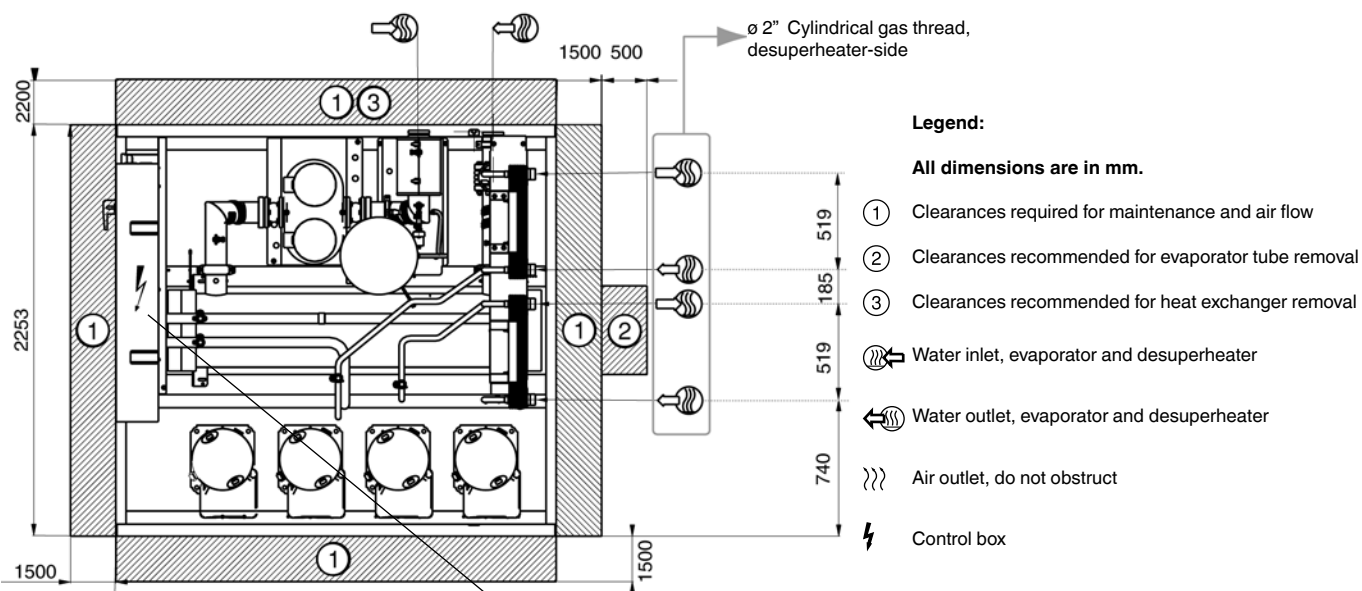


Unit without hydronic module

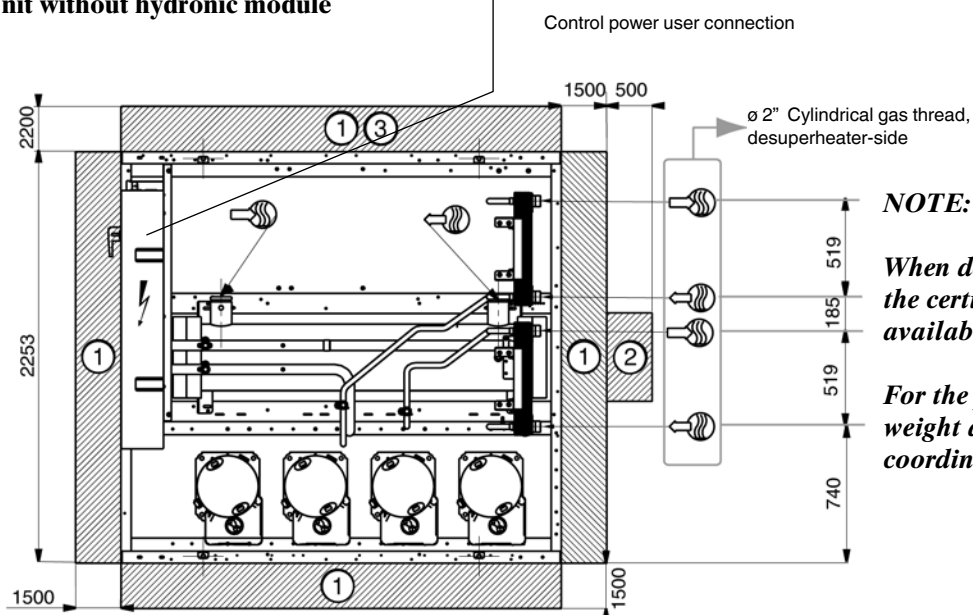


**NOTE: Non-contractual drawings.**

**When designing an installation, refer to the certified dimensional drawings, available on request.**


**For the positioning of the fixing points, weight distribution and centre of gravity coordinates.**

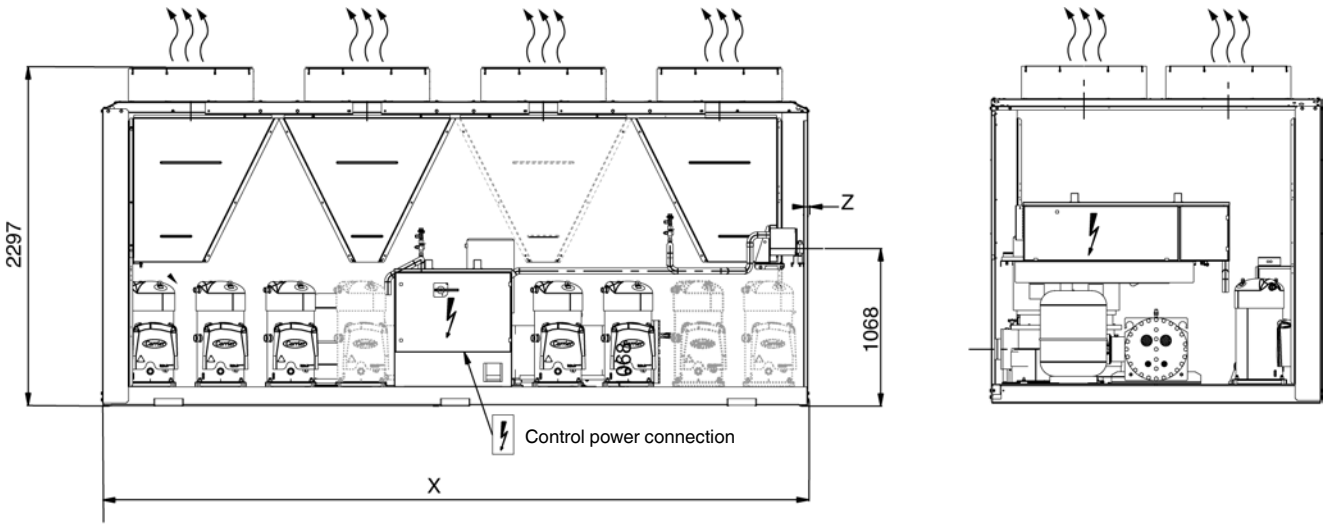

Unit with hydronic module

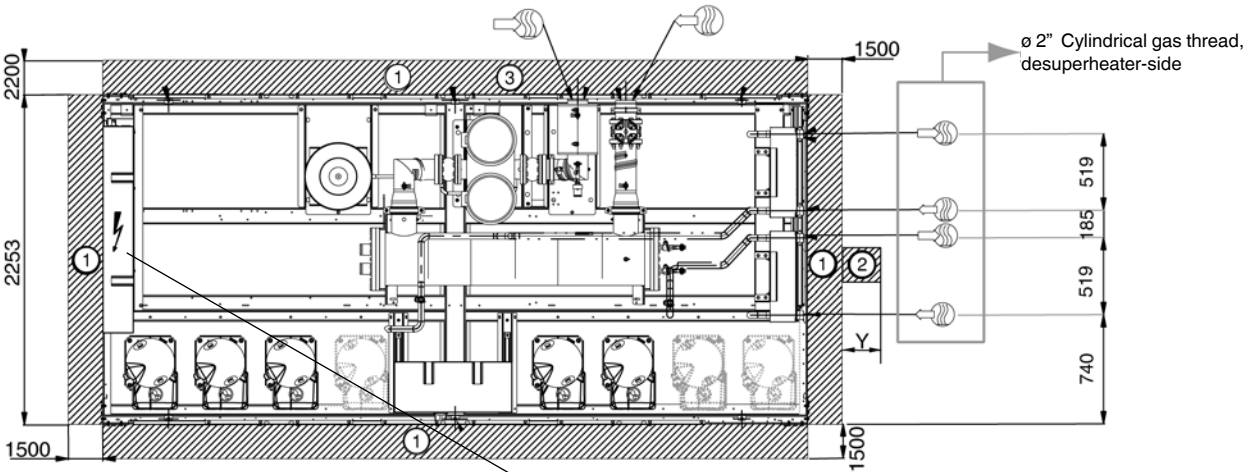

Unit without hydronic module

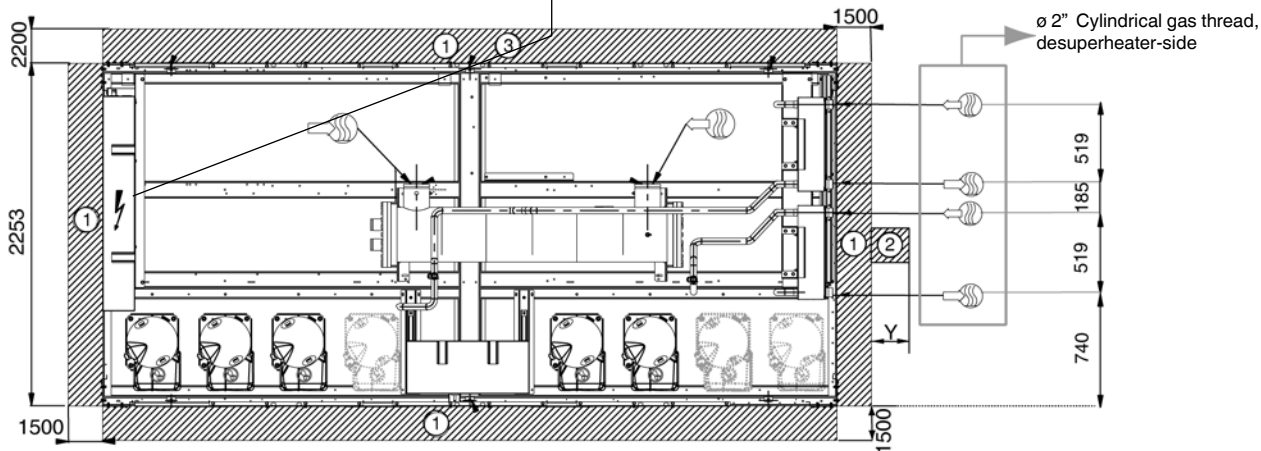


Legend:

All dimensions are in mm

Please refer to the legend and note on the next page.

| 30RB    | X    | Y   | Z  |
|---------|------|-----|----|
| 302-402 | 3604 | 200 | 76 |
| 432-522 | 4798 | 0   | 30 |

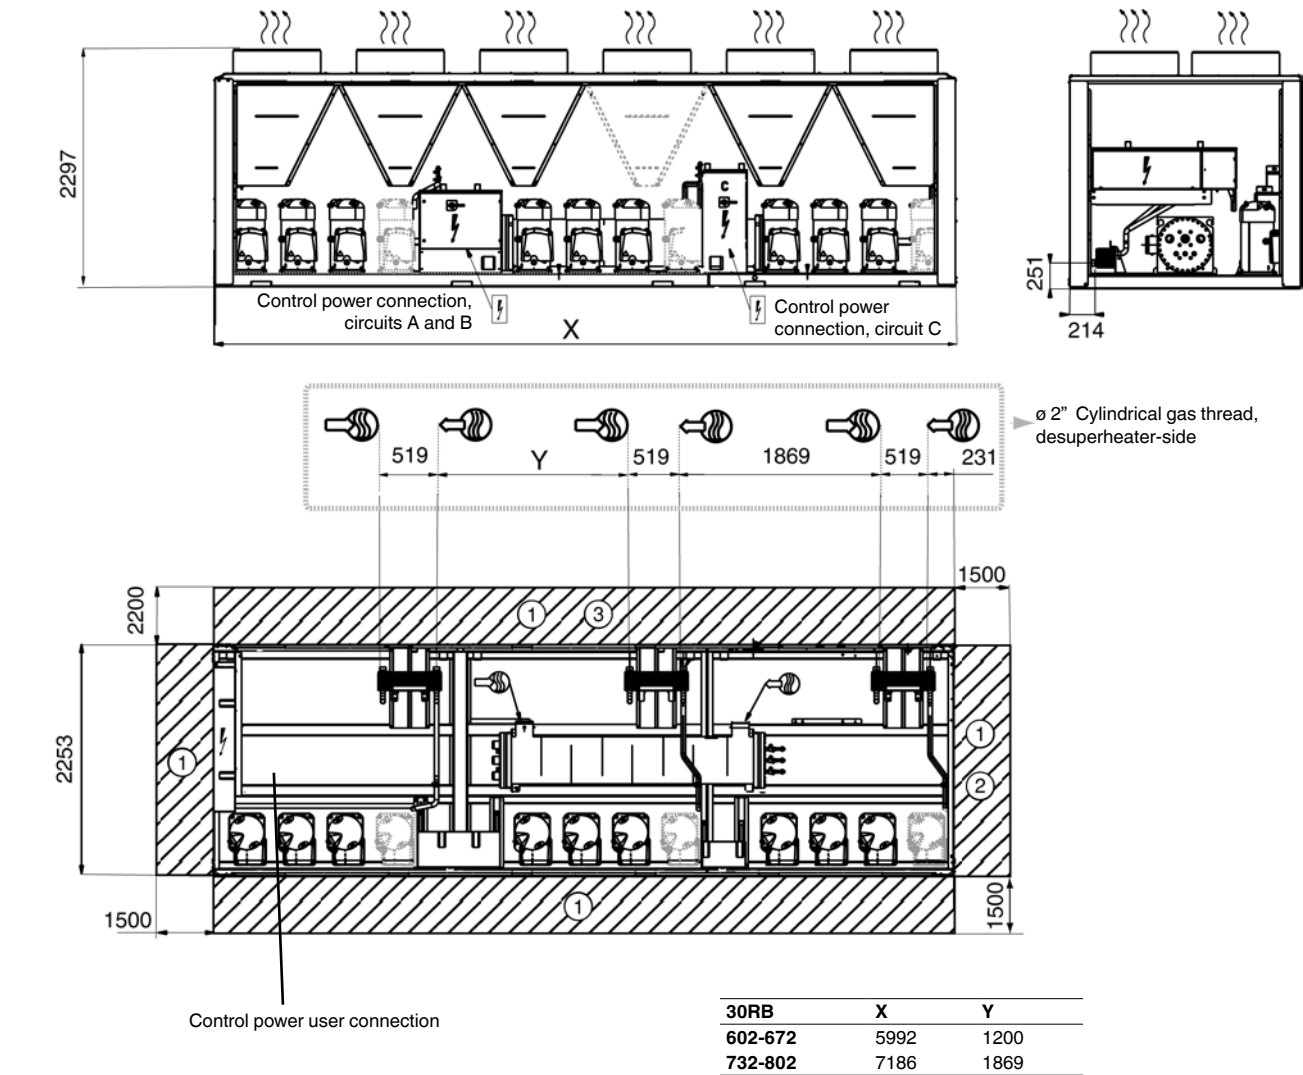

- Legend:**
- All dimensions are in mm.**
- ① Clearances required for maintenance and air flow
  - ② Clearances recommended for evaporator tube removal
  - ③ Clearances recommended for heat exchanger removal
  - Water inlet, evaporator and desuperheater
  - Water outlet, evaporator and desuperheater
  - Air outlet, do not obstruct
  - Control box
  - Additional compressor(s), depending on the unit size

**NOTE: Non-contractual drawings.**

**When designing an installation, refer to the certified dimensional drawings, available on request.**

**For the positioning of the fixing points, weight distribution and centre of gravity coordinates.**


### 11.3.3 - Installation and operation of the heat reclaim with desuperheater option

The 30RB units with the desuperheater option (No. 49) are supplied with one heat exchanger per refrigerant circuit.

*During the unit installation the heat reclaim plate heat exchangers must be insulated and frost protected, if required.*

Please refer to the typical installation diagram below for the main components and functions of the 30RB units with the desuperheater option.

**Typical installation diagram of units with the desuperheater option**

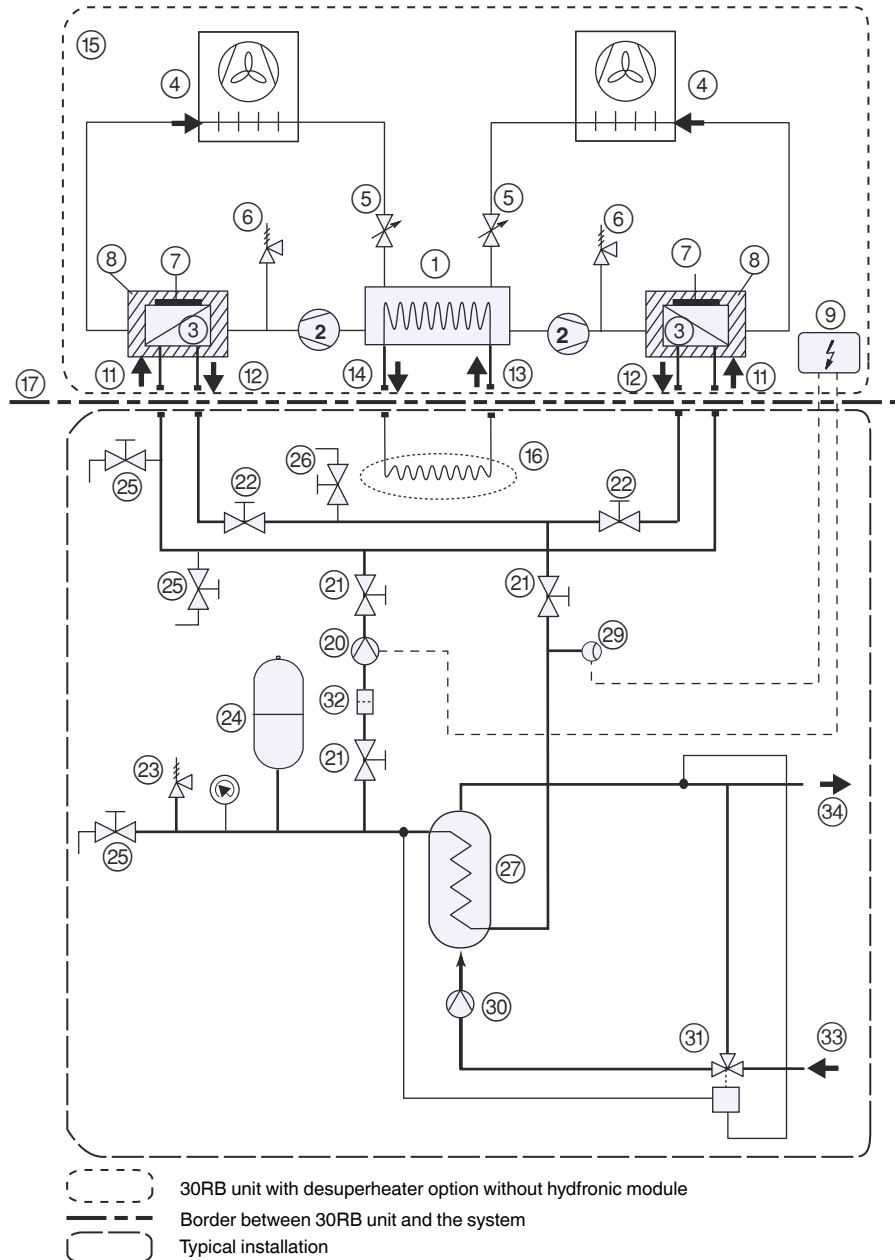

#### Legend

##### 30RB unit components

- 1 Evaporator
- 2 Compressor
- 3 Desuperheater (plate heat exchanger)
- 4 Air condenser (coils)
- 5 Expansion valve (EXV)
- 6 Damage limitation accessory in case of a fire (safety valve)
- 7 Electric heater to protect the desuperheater against frost (not supplied)
- 8 Desuperheater insulation (not supplied)
- 9 Unit control box
- 10 NA
- 11 Desuperheater water inlet
- 12 Desuperheater water outlet
- 13 Evaporator water inlet
- 14 Evaporator water outlet
- 15 Unit with desuperheater option without hydronic module
- 16 System heat load
- 17 Border between the 30RB unit and the typical installation

##### Installation components (installation example)

- 20 Pump (hydronic circuit of the desuperheater loop)
- 21 Shut-off valve
- 22 Desuperheater water flow balancing and control valve
- 23 Damage limitation accessory in case of a fire (safety valve)
- 24 Expansion tank
- 25 Charge or drain valve
- 26 Air purge
- 27 Heat exchange coil or plate heat exchanger
- 28 Pressure gauge
- 29 Flow switch
- 30 Pump (sanitary hot water circuit)
- 31 Three-way valve + controller
- 32 Filter to protect the pump and the desuperheaters
- 33 District water supply
- 34 Sanitary hot water outlet


### 11.3.4 - Installation

The water supply of each desuperheater is arranged in parallel. The water connections on the desuperheater water inlets and outlets must not cause any mechanical local constraint at the heat exchangers. If necessary, install flexible connection sleeves.

Install water flow control and balancing valves at the heat exchanger outlet. Water flow control and balancing can be done by reading the pressure drop in the heat exchangers. This must be identical on all of them with the total water flow rate given by the "Electronic catalogue" selection program.

Refer to the pressure drop curves below to control the balancing valves before starting up the installation. The water flow control of each desuperheater can be refined when the unit operates at full load by trying to obtain leaving water temperatures that are absolutely identical for each circuit.

#### Desuperheater (plate heat exchanger pressure drop curves)

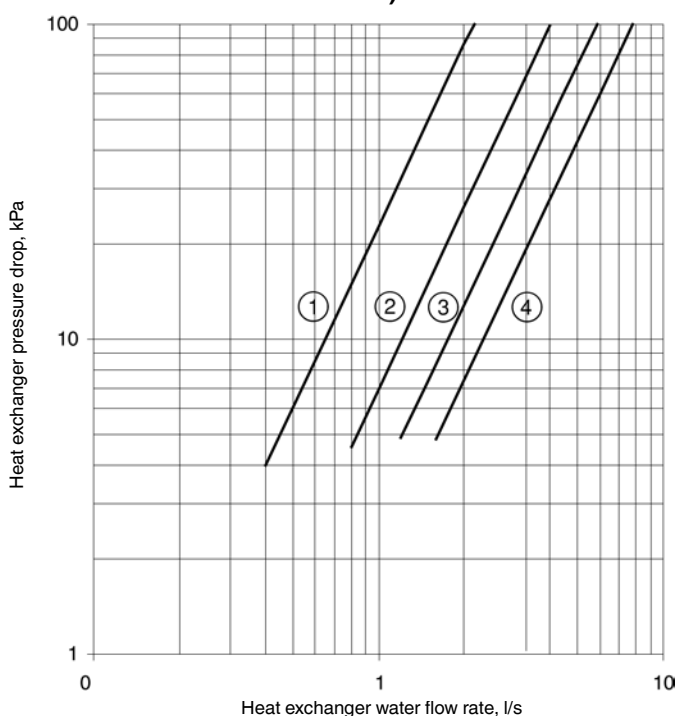

Operation of the pump (see typical diagram - item 20 of chapter 11.3.3) of the desuperheater water circuit can be linked to the start-up of the first unit compressor. This requires the installation of an additional electronic board in the control box: option 156, Energy Management Module.

Output No. 25 of the additional board of this option allows control of the pump operation - the pump will start up when the unit starts. A flow switch (item 29) can be installed to generate an alarm if there is a problem with the pump.

The volume of the desuperheater circuit water loop must be as low as possible so that the temperature can increase rapidly when the unit is started up. The minimum entering water temperature at the desuperheater is 25°C. This may require the use of a three-way valve (item 31), with a controller and the sensor controlling the minimum required entering water temperature.

The desuperheater water loop must include a safety valve and an expansion tank. When selecting these, consider the water loop volume and the maximum temperature (120°C) when pump operation is stopped (item 20).

### 11.3.5 - Operating range

| Desuperheater                              |    | Minimum | Maximum |
|--|----|---------|---------|
| Entering water temperature at start-up     | °C | 25*     | 75      |
| Leaving water temperature during operation | °C | 30      | 80      |
| Air condenser                              |    | Minimum | Maximum |
| Outside operating temperature              | °C | 0**     | 46      |

\* The entering water temperature at start-up must not be lower than 25°C. For installations with a lower temperature a three-way valve is necessary.

\*\* The minimum outside temperature is 0°C; -20°C with the winter operation option.

### 11.3.6 - Control configuration with the desuperheater option


This configuration allows the user to enter a setpoint that is relative to the minimum condensing temperature (default = 30°C) to increase the heating capacity reclaimed at the desuperheaters, if required. The percentage of the reclaimed heating capacity compared with the total capacity rejected by the condenser increases in proportion to the saturated condensing temperature.

For the setpoint control of the minimum saturated condensing temperature refer to the Pro-Dialog control manual.

Other parameters directly affecting the effective capacity reclaimed at the desuperheater are principally:

- The unit load rates, that decide whether the unit operates at full load (100%) or part load (depending on the number of compressors per unit circuit).
- The water entering temperature in the desuperheater as well as the condenser entering air temperature. See the curve below.

#### Coefficient of the heating capacity reclaimed at the desuperheater based on the entering water temperature at the desuperheater and the condenser entering air temperature

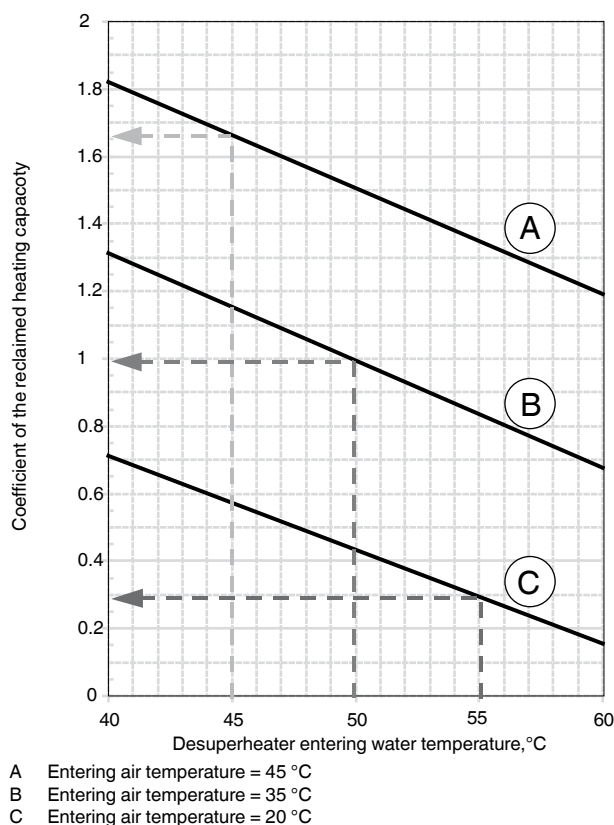



Nominal conditions corresponding to coefficient = 1  
 Evaporator entering/leaving temperature = 12/7°C  
 Desuperheater entering/leaving temperature = 50/60°C  
 Condenser entering air temperature = 35°C (curve B)

#### 11.4 - Units with fans with available pressure for indoor installation (option 12)

This option applies to 30RB units installed inside the building in a plant room. For this type of installation the hot air leaving the air-cooled condensers is discharged by the fans to the outside of the building, using a duct system.

The installation of a duct system at the air condenser discharge line causes a pressure drop due to the resistance caused by the air flow.

Therefore more powerful fan motors than those used for the standard units are installed in this option. For each installation of a unit installed inside a plant room the duct pressure drops differ, depending on the duct length, duct section and direction changes.

30RB units equipped with fans with available pressure are designed to operate with air discharge ducts with maximum pressure drops of 200 Pa.

To compensate for these pressure drops 30RB units with option 12 are equipped with variable-speed fans with a maximum speed of 19 r/s, instead of 15.8 r/s and fixed-speed fans as for the standard units.

Use of variable speed up to 19 r/s can overcome the duct pressure drops while maintaining an optimised air flow per circuit. All fans in the same circuit, operating at the same time, have the same speed.

The maximum fan power input for fans with a speed of 19 r/s is increased compared to that of standard fans with a speed of 15.8 r/s (the coefficient is the same as the cube of the speed ratio i.e. x 1.72).

The full-load or part-load speed is controlled by a patented algorithm that permanently optimises the condensing temperature to ensure the best unit energy efficiency (EER) whatever the operating conditions and pressure drops of the system ductwork.


If necessary for a specific installation, the maximum fan speed of 30RB units can be fixed between 13 and 19 r/s, using the Service Configuration menu. Consult the 30RB Pro-Dialog control manual for this modification.

The unit cooling capacity and energy efficiency ratio (EER) varies depending on the duct pressure drops:


- between 0 and 100 Pa the unit cooling capacity is only slightly affected,
- between 100 and 200 Pa the unit cooling capacity falls considerably depending on the operating conditions (outdoor air temperature and water conditions).

Please refer to the curves below to evaluate the impact of the estimated duct system pressure drop for the installation and the impact of different full load operating conditions on the 30RB unit cooling capacity and EER.

#### Cooling capacity variations for operating conditions that differ from Eurovent conditions

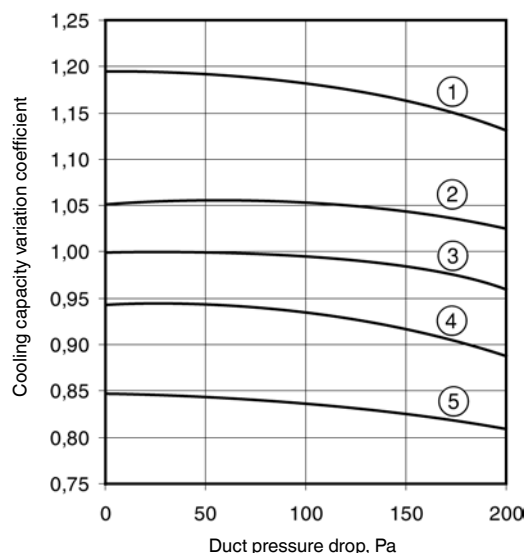

#### EER variations for operating conditions that differ from Eurovent conditions

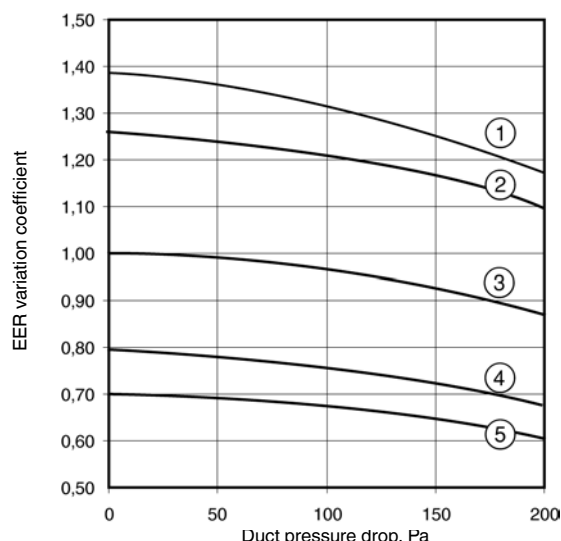

| Operating conditions |                         |                                |                               |         |
|----------------------|-------------------------|--------------------------------|-------------------------------|---------|
| Curve No.            | Outside temperature, °C | Entering water temperature, °C | Leaving water temperature, °C | Load, % |
| 1                    | 25                      | 15                             | 10                            | 100     |
| 2                    | 25                      | 10                             | 5                             | 100     |
| 3 Eurovent           | 35                      | 12                             | 7                             | 100     |
| 4                    | 45                      | 15                             | 10                            | 100     |
| 5                    | 45                      | 10                             | 5                             | 100     |

### 11.4.1 - Installation


 
 

 
 

 
 
 

 

 

 
 
 
 

 
 
 
 

 

 
 
 

 

 
 
 

 
 
 
 
 

 
 
 
 
 
All fans in the same refrigerant circuit are controlled by a single speed variator and therefore all run at the same speed.


Each refrigerant circuit (A, B and C) must have a separate ducting system to prevent any air recycling between the condensers of the different refrigerant circuits.


In 30RB units with option 12 each fan is equipped with a factory-installed connection interface, allowing the connection to the ducting system for the specific circuit (A, B and C) for each fan. Please refer to the unit dimensional drawings for the exact dimensions of the connection interface.


#### Number of fans (EV--) per refrigerant circuit (A, B and C) for different unit sizes
 
##### Position of V-shape air heat exchanger for each unit size

|                 | V1  | V2  | V3  | V4  | V5  | V6   |
|-----------------|---|---|---|---|---|--|
| 30RB            |   |   |   |   |   |  |
| 162             |    |    |    |   |   |  |
| 182-202-232-262 |    |    |    |   |   |  |
| 302-342         |    |    |    |    |   |  |
| 372-402         |   |   |   |   |   |  |
| 432-462         |  |  |  |  |  |  |
| 522             |  |  |  |  |  |  |
| 602             |  |  |  |  |  |  |
| 672             |  |  |  |  |  |  |
| 732             |  |  |  |  |  |  |
| 802             |  |  |  |  |  |  |

Refrigerant circuit  Circuit A

 Circuit B

 Circuit C

#### 11.4.2 - Nominal and maximum air flows per circuit (A, B and C) for 30RB sizes


| 30RB    | Circuit A<br>Nominal/maximum air flow, l/s | Circuit B<br>Nominal/maximum air flow, l/s | Circuit C<br>Nominal/maximum air flow, l/s |
|---------|--|--|--|
| 162     | 4515/5555                                  | 9030/11110                                 | -  |
| 182-262 | 9030/11110                                 | 9030/11110                                 | -  |
| 302-342 | 13540/16670                                | 9030/11110                                 | -  |
| 372-402 | 13540/16670                                | 13540/16670                                | -  |
| 432-462 | 18060/22220                                | 13540/16670                                | -  |
| 522     | 18060/22220                                | 18060/22220                                | -  |
| 602     | 13540/16670                                | 13540/16670                                | 13540/16670                                |
| 672     | 13540/16670                                | 13540/16670                                | 18060/22220                                |
| 732     | 18060/22220                                | 18060/22220                                | 13540/16670                                |
| 802     | 18060/22220                                | 18060/22220                                | 18060/22220                                |

#### 11.4.3 - Factory-installed duct connection interface on the support deck of each fan


For the exact dimensions of the connection interface please refer to the unit dimensional drawings.

#### V-shaped air heat exchangers


View from above

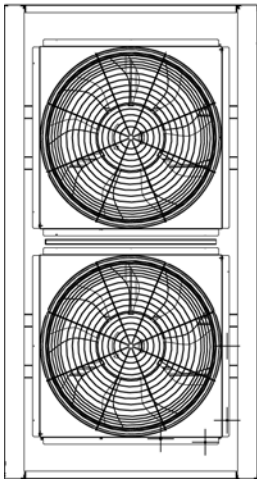

Side view

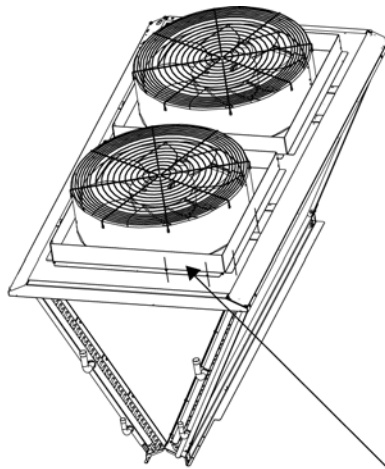

Detail of the duct connection interface frame

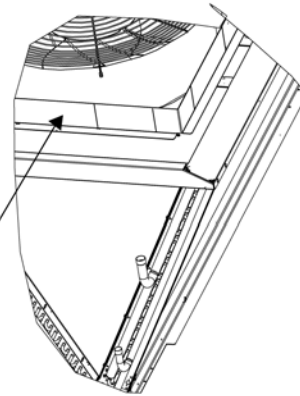


Size of the duct connection frame  
860 x 860 x 100 mm

Duct installation examples


Case 1

For units 30RB 162 with two V-shaped air condensers.

Solution 1

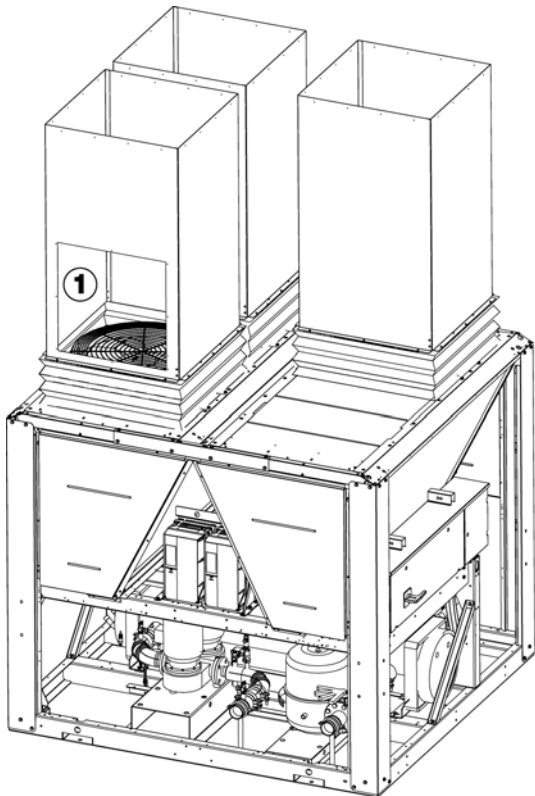

Solution 2

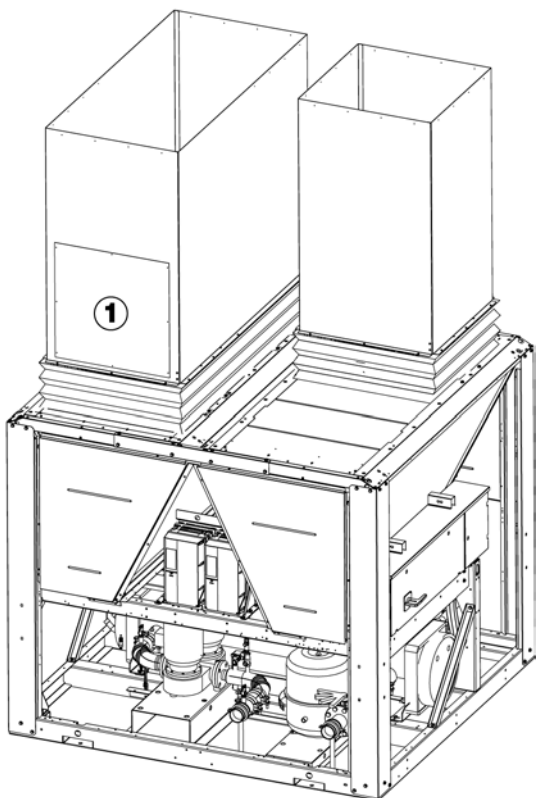

⦿ Fan motor access hatches (provide a 700 x 700 mm hatch) for each single and dual duct

Solution 1

One separate duct per fan

Circuit A

EV11

Circuit B

EV21-EV22

Solution 2

Circuit A

One separate duct for the EV11 fan

Circuit B

One separate duct for the EV21 + EV22 fan pair


Each fan discharge to the outside has its own duct.

## Duct installation examples (continued)


### Case 2

For units 30RB 182-262 with two V-shaped air condensers.

#### Solution 1

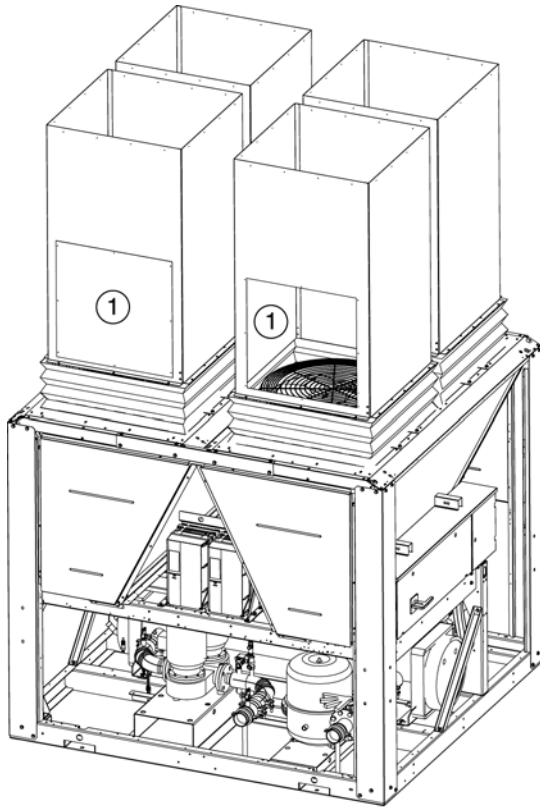

#### Solution 2

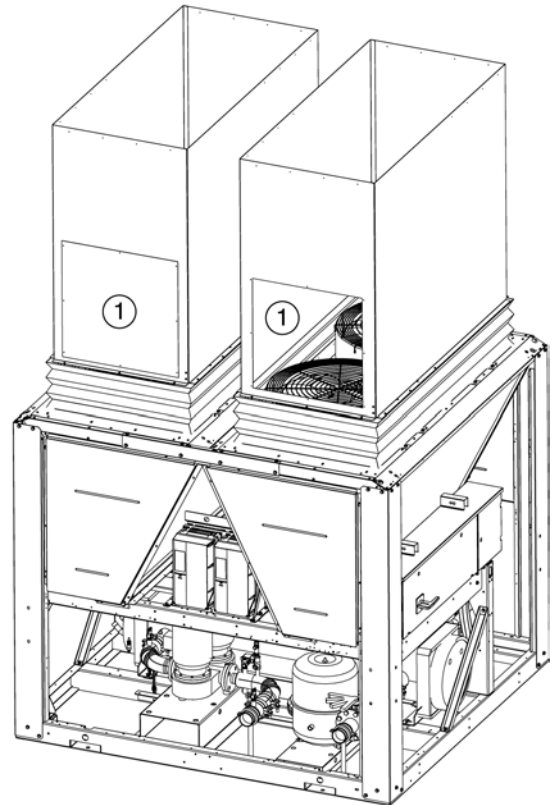

① Fan motor access hatches (provide a 700 x 700 mm hatch) for each single and dual duct

#### Solution 1

One separate duct per fan

##### Circuit A

EV11-EV12

##### Circuit B

EV21-EV22

Each fan discharge to the outside has its own duct.

#### Solution 2

##### Circuit A

One separate duct for the EV11 + EV12 fan pair

##### Circuit B

One separate duct for the EV21 + EV22 fan pair


Each fan pair discharge to the outside has its own duct.

## Duct installation examples (continued)


### Case 3

For 30RB 302 and 342 units with three V-shaped air condensers, where the middle V-shaped condenser 2 and fan EV 21 only belong to circuit A (see chapter “Number of fans per refrigerant circuit for different unit sizes”).

#### Solution 1

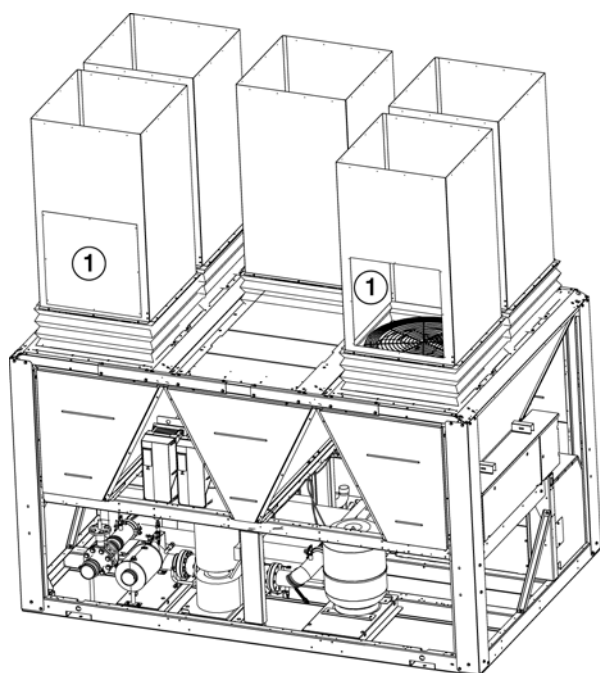

#### Solution 2

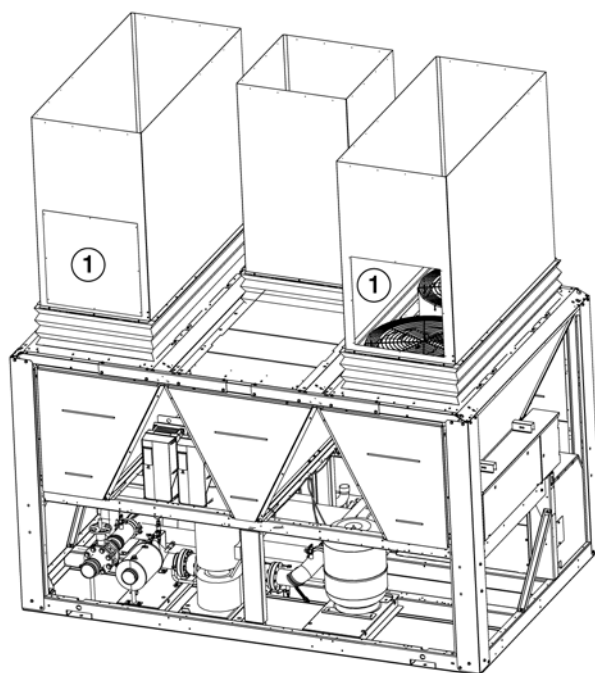

① Fan motor access hatches (provide a 700 x 700 mm hatch) for each single and dual duct

#### Solution 1

One separate duct per fan

##### Circuit A

EV11-EV12-EV21

##### Circuit B

EV31-EV32

Each fan discharge to the outside has its own duct.

##### Circuit A

Discharge twinning possible: EV11 + EV12 + EV21

##### Circuit B

Discharge twinning possible: EV31 + EV32

#### Solution 2

##### Circuit A

One separate duct for the EV11 + EV12 fan pair

One separate duct for fan EV21

Discharge twinning possible: (EV11 + EV12) + EV21

##### Circuit B

One separate duct for the EV31 + EV32 fan pair

**ATTENTION:** Fan EV21 must never be twinned with fans EV31 and EV32, as this may cause air short-circuiting between circuits A and B.


## Duct installation examples (continued)

### Case 4


For units 30RB 372 and 402 with three V-shaped air condensers, where the middle V-shaped condenser 2 belongs to both circuits A and B (see chapter “Number of fans per refrigerant circuit for different unit sizes”).

Similar recommendations apply to units 30RB 602 and 672 that also have overlapping air condenser circuits for V-shaped condenser 2.

**Solution 1**

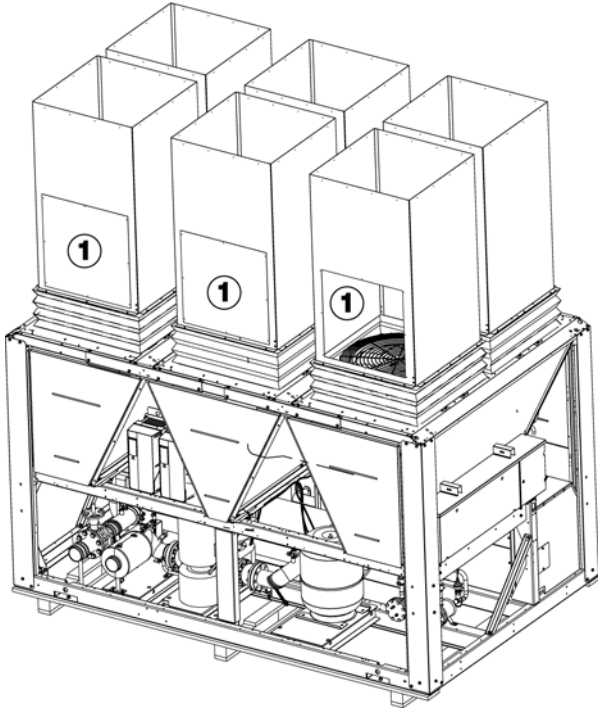

**Solution 2**

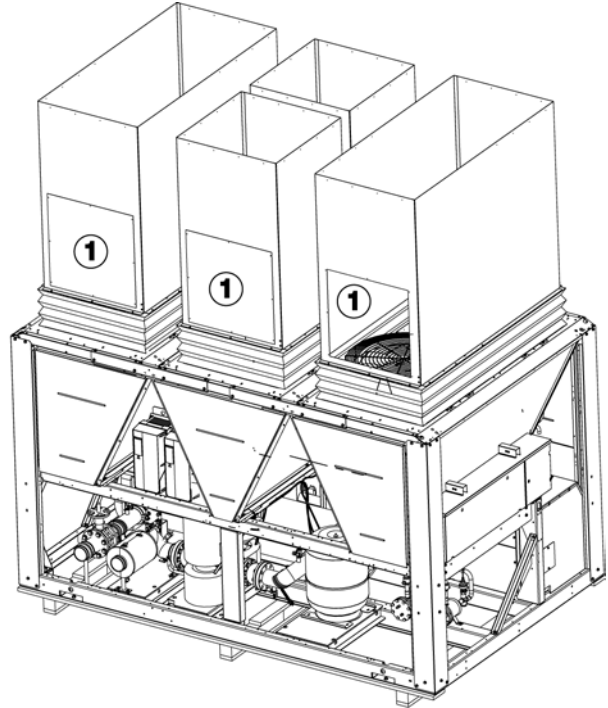

⊙ Fan motor access hatches (provide a 700 x 700 mm hatch) for each single and dual duct

### Solution 1

One separate duct per fan

#### Circuit A

EV11-EV12-EV21

#### Circuit B

EV22-EV31-EV32

Each fan discharge to the outside has its own duct.

#### Circuit A

Discharge twinning possible: EV11 + EV12 + EV21

#### Circuit B

Discharge twinning possible: EV22 + EV31 + EV32

### Solution 2

#### Circuit A

One separate duct for the EV11 + EV12 fan pair

One separate duct for fan EV21

Discharge twinning possible: (EV11 + EV12) + EV21

#### Circuit B

One separate duct for the EV31 + EV32 fan pair

One separate duct for fan EV22

Discharge twinning possible: (EV31 + EV32) + EV22

**ATTENTION: Fans EV21 and EV22 must never be twinned, as this may cause air short-circuiting between circuits A and B.**

Similarly, the four configuration examples shown above also cover the application on the other 30RB units.

**IMPORTANT:** *The unit duct connection must not create any mechanical constraint on the fan support deck.*

**The fan housings and the fan protection grilles must always remain in their position inside the ducts.**

**Use bellows or flexible sleeves for the duct connection.**

**At the outlet of each duct provide an access hatch with a minimum size of 700 x 700 mm to allow motor replacement and disassembly of the fan wheel.**

### Fan motor electrical protection

In case of a locked rotor or an overload, the motors of each circuit are electrically protected by the circuit drive. Each drive follows a variable current characteristic, based on the frequency from 10 to 60 Hz and the number of fans controlled.


If a fan is not operating correctly, the drive automatically detects the problem and sends an alert to the Pro-Dialog display. Please refer to the Pro-Dialog control manual for the list of specific alarms for this option.

## 11.5 - Brine option

This option allows production of brine down to -10°C. The unit is equipped with reinforced evaporator insulation as well as suction pipe insulation. The operating range is a function of the suction pressure, which in turn is a function of:

- the brine type,
- the brine concentration,
- the flow rate,
- the brine temperature,
- the condensing pressure (ambient temperature).

Example: For operation with propylene glycol at 40% and a brine temperature of -10°C (entering temperature -5°C), the maximum ambient operating temperature will be around 38°C.

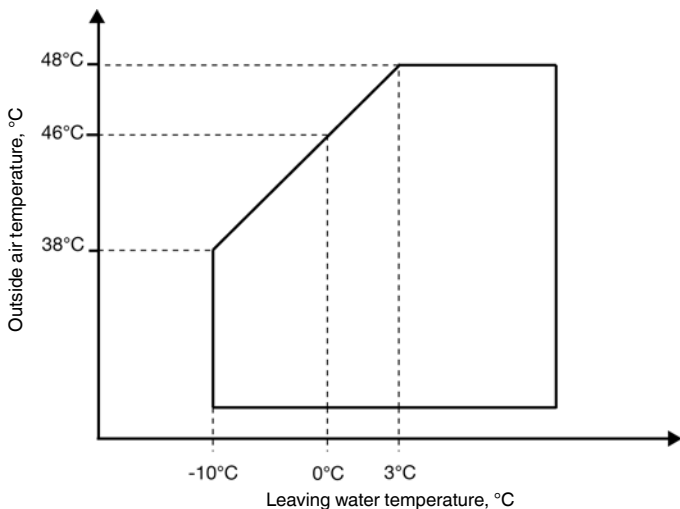

With propylene glycol at 40%

To find out the operating limits for each unit, based on the brine type and the brine concentration, please refer to the selection software.

### 11.5.1 - Frost protection

The evaporator low pressure and frost protection depends on the amount of antifreeze added to the water circuit (evaporator approach as well as frost protection are based on this amount).

It is therefore essential to control the amount of antifreeze in the water loop at the first start-up (circulate for 30 minutes to ensure good homogeneity of the mixture before taking the sample). Refer to the manufacturer's data to define the frost protection, based on the concentration rate measured.

The frost protection value (temperature) must be used in the unit software parameters (see Carrier Service Guide). This value will allow the definition of the following limits:

1. Evaporator frost protection
2. Low pressure protection

It is recommended that the commissioning of a brine system is done by Carrier.

For information: The protection values given by our supplier, based on the antifreeze solutions used in the Carrier Montluel laboratory, are as follows: (these values can change for different suppliers).

| % by weight<br>Ethylene glycol | Freeze point, °C<br>Ethylene glycol | % by weight<br>Propylene glycol | Freeze point, °C<br>Propylene glycol |
|--------------------------------|-------------------------------------|---------------------------------|--------------------------------------|
| 10                             | -3.8                                | 10                              | -2.6                                 |
| 15                             | -6.1                                | 15                              | -4.3                                 |
| 20                             | -8.8                                | 20                              | -6.6                                 |
| 25                             | -11.8                               | 25                              | -9.6                                 |
| 30                             | -15.2                               | 30                              | -13                                  |
| 35                             | -19.1                               | 35                              | -16.7                                |
| 40                             | -23.6                               | 40                              | -20.7                                |
| 45                             | -29                                 | 45                              | -25.3                                |

Based on the table above, if the ethylene glycol concentration by weight in the water loop is 35% the value of -19.1°C must be used in the software.

It is essential to carry out an annual check (minimum) of the amount of glycol, and adjust the frost protection value in the software based on the rate measured. This procedure must be systematic, if water or antifreeze solution is added.



### 11.5.2 - Units equipped with hydronic kit

If the antifreeze concentration exceeds 30%, it is recommended to reduce the brine flow rate to prevent overloading and over-heating of the motor.

**IMPORTANT: Never use a glycol concentration of less than 20%, as the brine will become aggressive and there will be an increased risk of corrosion of the cast iron parts of the hydronic kit.**

The flow rate limits are given in the table below:

For an application between 32 and 40% and operation at an outside air temperature between 40 and 48°C use linear interpolation.

| 30RB with hydronic kit              | 162      | 182      | 202      | 232      | 262      | 302      | 342      | 372      | 402      | 432      | 462      | 522      |
|-------------------------------------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|
| <b>High/low-pressure pump</b>       |          |          |          |          |          |          |          |          |          |          |          |          |
| Max. flow rate with clear water l/s |          |          |          |          |          |          |          |          |          |          |          |          |
| Ambient temperature = 48°C          | 14.7     | 14.7     | 14.7     | 14.7     | 14.7     | 18.9     | 18.9     | 24.4     | 24.4     | 24.4     | 29.4     | 29.4     |
| <b>Low-pressure pump</b>            | (L/J) RL | (L/J) RL | (L/J) RL | (L/J) RL | (L/J) RL | (L/J) RL | (L/J) RL | (L/J) RL | (L/J) RL | (L/J) RL | (L/J) RN | (L/J) RN |
|                                     | 206      | 206      | 206      | 206      | 206      | 206      | 206      | 208      | 208      | 208      | 208      | 208      |
|                                     | 11/2.2   | 11/2.2   | 11/2.2   | 11/2.2   | 11/2.2   | 11/3     | 11/3     | 12/4     | 12/4     | 12/4     | 13/5.5   | 13/5.5   |
| Max. flow rate, 40% antifreeze l/s  |          |          |          |          |          |          |          |          |          |          |          |          |
| Ambient temperature = 40°C          | 12.8     | 12.8     | 12.8     | 12.8     | 12.8     | 17.8     | 17.8     | 18.9     | 18.9     | 18.9     | 21.7     | 21.7     |
| Ambient temperature = 48°C          | 11.9     | 11.9     | 11.9     | 11.9     | 11.9     | 15.3     | 15.3     | 16.9     | 16.9     | 16.9     | 20.0     | 20.0     |
| <b>High-pressure pump</b>           | (L/J) RL | (L/J) RL | (L/J) RL | (L/J) RN | (L/J) RN | (L/J) RN | (L/J) RN | (L/J) RN | (L/J) RN | (L/J) RN | (S/D) IL | (S/D) IL |
|                                     | 206      | 206      | 206      | 205      | 205      | 206      | 206      | 206      | 206      | 206      | 206      | 206      |
|                                     | 14/4     | 14/4     | 14/4     | 14/4     | 14/4     | 15/5.5   | 15/5.5   | 18/7.5   | 18/7.5   | 18/7.5   | 19/11    | 19/11    |
| Max. flow rate, 40% antifreeze l/s  |          |          |          |          |          |          |          |          |          |          |          |          |
| Ambient temperature = 40°C          | 13       | 13       | 13       | 11.7     | 11.7     | 17.2     | 17.2     | 21.7     | 21.7     | 21.7     | 26.1     | 26.1     |
| Ambient temperature = 48°C          | 12.5     | 12.5     | 12.5     | 11.1     | 11.1     | 16.1     | 16.1     | 20.0     | 20.0     | 20.0     | 24.2     | 24.2     |

### 11.6 - Unit storage above 48°C (option 241)

During transport in a closed container the refrigerant charge must be transferred to the condenser. This prevents that the pressure in the evaporator reaches the valve calibration pressure during transport (if this happened, the charge would be evacuated to the atmosphere and the unit would be empty when it arrives on site). For this reason the charge is transferred to and stored in the condenser, and the liquid and discharge line valves are closed.

The following precautions must be taken during installation:

- Ensure that there is sufficient water flow in the evaporator.
- Energise the unit.
- Open the liquid line valves.
- Open the EXV to return the charge to the evaporator; pressure equalisation must be verified by a quick test procedure.
- Open the discharge line valve.

## 11.7 - Other options and accessories

| Options  | No.  | Description  | Advantages  | Use          |
|--|------|--|---|--------------|
| Condenser with anti-corrosion post-treatment   | 2B   | Coils with copper tubes and aluminium fins with Blygold Polual treatment   | Improved corrosion resistance, recommended for marine, industrial and rural environments  | 30RB 162-802 |
| Corrosion protection, traditional coils  | 3A   | Pre-treated aluminium fins (polyurethane + epoxy)  | Improved corrosion resistance, recommended for marine, moderate or urban environments   | 30RB 162-802 |
| Unit for low leaving water temperature   | 6    | Leaving water temperature of +3°C to -10°C.  | All low-temperature applications: ice storage, cold stores, process cooling etc.  | 30RB 162-402 |
| Unit for indoor installation with discharge ducts                                    | 12   | Fans with available pressure   | Ducted condenser air discharge, optimised condensing temperature control, based on the operating conditions and system characteristics  | 30RB 162-802 |
| Low noise level  | 15   | Sound absorbing compressor enclosure   | Noise emission reduction  | 30RB 162-802 |
| Very low noise level   | 15LS | Sound absorbing compressor enclosure and low-speed fans  | Noise emission reduction  | 30RB 162-802 |
| Grilles  | 23   | Metallic grilles on all four unit faces (this option includes the supply of enclosure panels)  | Improved aesthetics   | 30RB 162-802 |
| Enclosure panels (for units with copper/aluminium coils only)                        | 23A  | Side panels on each end of the coils   | Improved aesthetics   | 30RB 162-802 |
| Electronic starter   | 25   | Electronic starter on each compressor  | Reduced start-up current  | 30RB 162-522 |
| Winter operation down to -20°C   | 28   | Fan speed control via frequency converter  | Stable unit operation when the air temperature is between 0°C and -20°C   | 30RB 162-802 |
| Winter operation down to -10°C   | 28B  | Twin-speed lead fan for each circuit   | Stable unit operation when the air temperature is between 0°C and -10°C   | 30RB 162-802 |
| Winter operation down to -10°C and very low noise level (options 28B + 15LS)         | 28C  | Sound absorbing compressor enclosure and low-speed fans + twin-speed lead fan for each circuit   | Noise emission reduction and stable unit operation when the air temperature is between 0°C and -10°C  | 30RB 162-802 |
| Evaporator and water piping frost protection   | 41   | Electric heater on the evaporator and the water inlet/outlet piping  | Evaporator frost protection for air temperatures between 0°C and -20°C  | 30RB 162-802 |
| Evaporator, water piping and hydronic module frost protection                        | 42A  | Electric heaters on the evaporator, the water inlet/outlet piping and hydronic module  | Evaporator and hydronic module frost protection for air temperatures between 0°C and -20°C  | 30RB 162-522 |
| Partial heat reclaim   | 49   | Partial heat reclaim by desuperheating of the compressor discharge gas   | Free high-temperature hot-water production simultaneously with chilled-water production   | 30RB 162-802 |
| Total heat reclaim   | 50   | See heat reclaim option. Note: Unit equipped with coils with copper tubes and aluminium fins   | Free hot water production simultaneously with chilled water production  | 30RB 262-522 |
| Twinning   | 58   | Unit equipped with an additional field-installed leaving water temperature sensor, allowing master/slave operation of two chillers connected in parallel | Optimised operation of two chillers connected in parallel with operating time equalisation  | 30RB 162-802 |
| Main disconnect switch without fuse (standard for sizes 182-262)                     | 70   | Factory-installed main electric disconnect switch in the control box   | Ease-of-installation and compliance with local electrical regulations   | 30RB 302-802 |
| Main disconnect switch with fuse   | 70D  | Factory-installed main electric disconnect switch with fuse in the control box   | Same advantage as main disconnect switch and reinforced anti-short circuit protection   | 30RB 302-802 |
| Evaporator with aluminium jacket   | 88   | Evaporator thermal insulation protection by aluminium sheets   | Improved resistance to climatic aggression  | 30RB 162-802 |
| Evaporator and hydronic module with aluminium jacket                                 | 88A  | Evaporator and water piping thermal insulation protection by aluminium sheets  | Improved resistance to climatic aggression  | 30RB 302-522 |
| Suction valve  | 92   | Shut-off valve on the compressor suction piping (discharge valve as standard)  | Simplified maintenance  | 30RB 302-802 |
| Compressor suction and discharge valves  | 92A  | Shut-off valves on the common compressor suction and discharge piping  | Simplified maintenance  | 30RB 162-262 |
| High-pressure single-pump hydronic module  | 116B | See hydronic module option   | Easy and fast installation  | 30RB 162-522 |
| High-pressure dual-pump hydronic module  | 116C | See hydronic module option   | Easy and fast installation, operating safety  | 30RB 162-522 |
| Low-pressure single-pump hydronic module   | 116F | See hydronic module option   | Easy and fast installation  | 30RB 162-522 |
| Low-pressure dual-pump hydronic module   | 116G | See hydronic module option   | Easy and fast installation, operating safety  | 30RB 162-522 |
| High-pressure single-pump hydronic module (without control valve and pressure gauge) | 116M | See hydronic module option   | Easy and fast installation  | 30RB 162-522 |
| High-pressure dual-pump hydronic module (without control valve and pressure gauge)   | 116N | See hydronic module option   | Easy and fast installation, operating safety  | 30RB 162-522 |
| Low-pressure single-pump hydronic module (without control valve and pressure gauge)  | 116P | See hydronic module option   | Easy and fast installation  | 30RB 162-522 |
| Low-pressure dual-pump hydronic module (without control valve and pressure gauge)    | 116Q | See hydronic module option   | Easy and fast installation, operating safety  | 30RB 162-522 |
| Direct-expansion free cooling system   | 118A | See free cooling option. Note: Unit equipped with coils with copper tubes and aluminium fins   | Economic chilled-water production at low outside temperature  | 30RB 232-522 |
| JBus gateway   | 148B | Two-directional communications board, complies with JBus protocol  | Easy connection by communication bus to a building management system  | 30RB 162-802 |
| Bacnet gateway   | 148C | Two-directional communications board, complies with Bacnet protocol  | Easy connection by communication bus to a building management system  | 30RB 162-802 |
| LonTalk gateway  | 148D | Two-directional communications board, complies with LonTalk protocol   | Easy connection by communication bus to a building management system  | 30RB 162-802 |
| Energy Management Module EMM   | 156  | See controls manual  | Easy wired connection to a building management system   | 30RB 162-802 |
| Dual safety valves installed with twinning valve                                     | 194  | Three-way valve upstream of the safety valves (not compatible with the plate heat exchanger version)   | Safety valve inspection and replacement facilitated without refrigerant loss  | 30RB 162-802 |
| Conformance with Australian regulations  | 200  | Heat exchanger approved to Australian code   | -   | 30RB 162-802 |
| Unit storage above 48°C  | 241  | Refrigerant charge stored in the condenser. Option not compatible with MCHX coils; Cu/Al coils are required to store the charge.                         | Unit transport by container only possible with this option  | 30RB 162-802 |
| Traditional Cu/Al coils  | 254  | Coils with copper tubes and aluminium fins   | Possibility to add special treatments   | 30RB 162-802 |
| MCHX anti-corrosion protection   | 263  | MCHX protection by the Carrier factory for applications in aggressive environments   | The Super Enviro-Shield option was developed to increase the application range of MCHX coils to severe environmental conditions: this option is compulsory for industrial environments, for sites that are < 8 km from the sea or on islands with a diameter of < 64 km | 30RB 162-262 |
| Shell-and-tube water heat exchanger  | 280  | Direct-expansion shell-and-tube heat exchanger   | More robust heat exchanger. Ensures compatibility with other options than those available with the standard unit (see Electronic Catalogue)   | 30RB 162-262 |

## 11.7 - Other options and accessories

| Accessories                           |   | Description  | Advantages  | Use          |
|---------------------------------------|---|--|---|--------------|
| Connection sleeve                     | - | Piping to be welded with Victaulic connection  | Ease-of-installation  | 30RB 162-802 |
| Energy Management Module EMM          | - | See controls manual  | Easy connection by wired connection to a building management system | 30RB 162-802 |
| Scrolling Marquee Interface           | - | Remotely installed user interface (communication bus)  | Remote chiller control up to 300 m                                  | 30RB 162-802 |
| Power cable connection side extension | - | Side extension on the power control to allow a reduced cable bend radius                             | Use of thicker power cables   | 30RB 302-802 |
| Connection sleeve, standard unit      | - | Water inlet/outlet extension for connection with a Victaulic collar on the water inlet/outlet piping | Facilitates connection  | 30RB 162-262 |

## 12 - STANDARD MAINTENANCE

Air conditioning equipment must be maintained by professional technicians, whilst routine checks can be carried out locally by specialised technicians.

**Simple preventive maintenance will allow you to get the best performance from your HVAC unit:**

- improved cooling performance
- reduced power consumption
- prevention of accidental component failure
- prevention of major time-consuming and costly work
- protection of the environment

There are five maintenance levels for HVAC units, as defined by the AFNOR X60-010 standard.

### 12.1 - Level 1 maintenance (see note opposite)

Simple procedure can be carried out by the user:

- Visual inspection for oil traces (sign of a refrigerant leak),
- Air heat exchanger (condenser) cleaning - see chapter 'Condenser coil - level 1',
- Check for removed protection devices, and badly closed doors/covers,
- Check the unit alarm report when the unit does not work (see report in the 30RB Pro-Dialog Plus control manual).
- Verification of the charge in the liquid line sight glass,
- Verify that the temperature difference between the heat exchanger inlet and outlet is correct.
- General visual inspection for any signs of deterioration.

### 12.2 - Level 2 maintenance (see note opposite)

This level requires specific know-how in the electrical, hydronic and mechanical fields. It is possible that these skills are available locally: existence of a maintenance service, industrial site, specialised subcontractor.

In these cases, the following maintenance operations are recommended.

Carry out all level 1 operations, then:

- At least once a year tighten the power circuit electrical connections (see table with tightening torques opposite).
- Check the expansion tank for signs of excessive corrosion or gas pressure loss and replace it, if necessary.
- Check and retighten all control/command connections, if required (see table with tightening torques opposite).
- Remove the dust and clean the interior of the control boxes, if required.

- Check the presence and the condition of the electrical protection devices.
- Check the correct operation of all heaters.
- Replace the fuses every 3 years or every 15000 hours (age-hardening).
- Check the water connections.
- Purge the water circuit (see chapter 'Water flow control procedure').
- Clean the water filter (see chapter 'Water flow control procedure').
- Fully clean the condensers with a low-pressure jet and a bio-degradable cleaner (counter-current cleaning - see chapter 'Condenser coil - level 2').
- Replace the stuffing box packing of the pump after 10000 hours of operation.
- Check the unit operating parameters and compare them with previous values.
- Keep and maintain a maintenance sheet, attached to each HVAC unit.

***All these operations require strict observation of adequate safety measures: individual protection garments, compliance with all industry regulations, compliance with applicable local regulations and using common sense.***

### 12.3 - Level 3 (or higher) maintenance (see note below)

The maintenance at this level requires specific skills/approval/tools and know-how and only the manufacturer, his representative or authorised agent are permitted to carry out these operations. These maintenance operations concern for example:

- A major component replacement (compressor, evaporator),
- Any intervention on the refrigerant circuit (handling refrigerant),
- Changing of parameters set at the factory (application change),
- Removal or dismantling of the HVAC unit,
- Any intervention due to a missed established maintenance operation,
- Any intervention covered by the warranty.

**Note:** Any deviation or non-observation of these maintenance criteria will render the guarantee conditions for the HVAC unit null and void, and the manufacturer, Carrier France, will no longer be held responsible.

## 12.4 - Tightening torques for the main electrical connections

| Component                                   | Designation in the unit | Value (N · m) |
|---|-------------------------|---------------|
| M12 screw on bus bar, customer connection   |                         | 80            |
| Soldered screw PE, customer connection      |                         | 80            |
| Tunnel terminal screw, fuse holder          | Fu-                     | 3-3.5         |
| Tunnel terminal screw, compressor contactor | KM1-->KM12              | 3-4.5         |
| Brass screw M6, compressor earth            | EC-                     | 5             |
| Screw M6, compressor connection             | EC-                     | 5             |
| Tunnel terminal screw, disconnects          | QM-                     | 0.8-1.2       |
| Screw M6, earth power distribution          |                         | 10            |

## 12.5 - Tightening torques for the main bolts and screws

| Screw type        | Used for                                      | Value (N · m) |
|-------------------|---|---------------|
| Metal screw D=4.8 | Condensing module, housing supports           | 4.2           |
| Screw H M8        | Condensing module, compressor fixing          | 18            |
| Taptite screw M10 | Condensing module, chassis - structure fixing | 30            |
| Taptite screw M6  | Piping support, cowling                       | 7             |
| Screw H M8        | Piping clip                                   | 12            |
| Screw H M6        | Piping clip                                   | 10            |
| Nut H M10         | Compressor chassis                            | 30            |
| Nut M8            | Plate heat exchanger fixing (30RB 162-262)    | 12            |

## 12.6 - Condenser coil

We recommend, that finned coils are inspected regularly to check the degree of fouling. This depends on the environment where the unit is installed, and will be worse in urban and industrial installations and near trees that shed their leaves.

For coil cleaning, two maintenance levels are used, based on the AFNOR X60-010 standard:

### Level 1

Recommendations for maintenance and cleaning of round tube plate fin (RTPF) condenser coils:

- Regular cleaning of the coil surface is essential for correct unit operation. Eliminating contamination and removal of harmful residue will increase the operating life of the coils and the unit.
- The maintenance and cleaning procedures below are part of the regular maintenance and will prolong the life of the coils.

### Removal of fibres that obstruct the surfaces:

Fibres and dirt collected on the coil surface must be removed with a vacuum cleaner. If you do not have a vacuum cleaner, a soft brush with non-metallic bristles can be used instead. In all cases cleaning must be done in the direction of the fins, as the coil surface is easily damaged. The fins bend easily and damage the protective coating of the coil, if cleaning is done at right angles to the fins. Clean against the air flow direction.

**NOTE:** Using a water jet from a spray hose on a polluted surface will result in fibres and dirt becoming trapped in the coil, making cleaning more difficult. All fibres and dirt must be removed from the surface, before using a low-speed rinsing jet.

### Periodical cleaning with clean water:

For coils installed in a coastal or industrial environment periodical cleaning by rinsing with water is beneficial. It is however essential that rinsing is done with a low-speed water jet to avoid damaging the fins. Monthly cleaning as described below is recommended.

### ATTENTION

- Chemical cleaning agents, water containing bleach, acidic or basic cleaning agents must never be used to clean the coil exterior or interior. These cleaning agents may be difficult to rinse off and can accelerate corrosion at the joint between tube and fins, where two different materials come into contact. If dirt on the coil surface persists, use a Totaline coil cleaner as described above.
- High-speed water from a high-pressure cleaner, spray hose or compressed air cleaner must never be used for coil cleaning. The force of the water or air jet will bend the fins and increase the air-side pressure drop. This can result in reduced performance or nuisance shutdowns of the unit.

Recommendations for maintenance and cleaning of MCHX (microchannel) condenser coils:

- Regular cleaning of the coil surface is essential for correct unit operation. Eliminating contamination and removal of harmful residue will increase the operating life of the coils and the unit.
- The maintenance and cleaning procedures below are part of the regular maintenance and will prolong the life of the coils.

**ATTENTION:** Do not use chemical cleaners on MCHX condenser coils. These cleaning agents can accelerate corrosion and damage the coils.

- Remove foreign objects and debris attached to the coil surface or wedged between the chassis and the supports.
- Provide personal protection equipment including safety glasses and/or a face mask, waterproof clothing and safety gloves. It is recommended to wear clothing that covers the whole body.
- Start the high-pressure spray gun and remove any soap or industrial cleaner from it before cleaning the condenser coils. Only drinkable cleaning water is permitted to clean the condenser coils.
- Clean the condenser face by spraying the coil evenly and in a stable manner from bottom to top, directing the water jet at right angles to the coil. Do not exceed 62 bar or an angle of 45° related to the coil. The diffuser must be at least 300 mm away from the coil surface. It is essential to control the pressure and to be careful not to damage the fins.

**ATTENTION:** Excessive water pressure can break the weld points between the fins and the flat micro-channel tubes.

## Level 2

The two cleaning products can be used for any of the following coil finishes: Cu/Cu, Cu/Al, Cu/Al with Polual, Blygold and/or Heresite protection.

Clean the coil, using appropriate products.

We recommend TOTALINE products for coil cleaning:

Part No. P902 DT 05EE: traditional cleaning method

Part No. P902 CL 05EE: cleaning and degreasing.

These products have a neutral pH value, do not contain phosphates, are not harmful to the human body, and can be disposed of through the public drainage system.

Depending on the degree of fouling both products can be used diluted or undiluted.

For normal maintenance routines we recommend using 1 kg of the concentrated product, diluted to 10%, to treat a coil surface of 2 m<sup>2</sup>. This process can either be carried out using a high-pressure spray gun in the low-pressure position. With pressurised cleaning methods care should be taken not to damage the coil fins. The spraying of the coil must be done:

- in the direction of the fins
- in the opposite direction of the air flow direction
- with a large diffuser (25-30°)
- at a minimum distance of 300 mm from the coil.

It is not necessary to rinse the coil, as the products used are pH neutral. To ensure that the coil is perfectly clean, we recommend rinsing with a low water flow rate. The pH value of the water used should be between 7 and 8.

For MCHX condenser coils use only clean water with a pH value between 7 and 8.

***WARNING: Never use pressurised water without a large diffuser. Do not use high-pressure cleaners for Cu/Cu and Cu/Al coils! High pressure cleaners are only permitted for MCHX coils (maximum permitted pressure 62 bar).***

***Concentrated and/or rotating water jets are strictly forbidden. Never use a fluid with a temperature above 45°C to clean the air heat exchangers.***

***Correct and frequent cleaning (approximately every three months) will prevent 2/3 of the corrosion problems.***

***Protect the control box during cleaning operations.***

## 12.7 - Evaporator maintenance

Check that:

- the insulating foam is intact and securely in place.
- the cooler heaters are operating, secure and correctly positioned.
- the water-side connections are clean and show no sign of leakage.

## 12.8 - Characteristics of R-410A

See the table below.

| Saturated temperatures based on the relative pressure (in kPa) |                        |                    |                        |
|--|------------------------|--------------------|------------------------|
| Saturated Temp. °C   | Relative pressure, kPa | Saturated Temp. °C | Relative pressure, kPa |
| -20  | 297                    | 25                 | 1552                   |
| -19  | 312                    | 26                 | 1596                   |
| -18  | 328                    | 27                 | 1641                   |
| -17  | 345                    | 28                 | 1687                   |
| -16  | 361                    | 29                 | 1734                   |
| -15  | 379                    | 30                 | 1781                   |
| -14  | 397                    | 31                 | 1830                   |
| -13  | 415                    | 32                 | 1880                   |
| -12  | 434                    | 33                 | 1930                   |
| -11  | 453                    | 34                 | 1981                   |
| -10  | 473                    | 35                 | 2034                   |
| -9   | 493                    | 36                 | 2087                   |
| -8   | 514                    | 37                 | 2142                   |
| -7   | 535                    | 38                 | 2197                   |
| -6   | 557                    | 39                 | 2253                   |
| -5   | 579                    | 40                 | 2311                   |
| -4   | 602                    | 41                 | 2369                   |
| -3   | 626                    | 42                 | 2429                   |
| -2   | 650                    | 43                 | 2490                   |
| -1   | 674                    | 44                 | 2551                   |
| 0  | 700                    | 45                 | 2614                   |
| 1  | 726                    | 46                 | 2678                   |
| 2  | 752                    | 47                 | 2744                   |
| 3  | 779                    | 48                 | 2810                   |
| 4  | 807                    | 49                 | 2878                   |
| 5  | 835                    | 50                 | 2947                   |
| 6  | 864                    | 51                 | 3017                   |
| 7  | 894                    | 52                 | 3088                   |
| 8  | 924                    | 53                 | 3161                   |
| 9  | 956                    | 54                 | 3234                   |
| 10   | 987                    | 55                 | 3310                   |
| 11   | 1020                   | 56                 | 3386                   |
| 12   | 1053                   | 57                 | 3464                   |
| 13   | 1087                   | 58                 | 3543                   |
| 14   | 1121                   | 59                 | 3624                   |
| 15   | 1156                   | 60                 | 3706                   |
| 16   | 1192                   | 61                 | 3789                   |
| 17   | 1229                   | 62                 | 3874                   |
| 18   | 1267                   | 63                 | 3961                   |
| 19   | 1305                   | 64                 | 4049                   |
| 20   | 1344                   | 65                 | 4138                   |
| 21   | 1384                   | 66                 | 4229                   |
| 22   | 1425                   | 67                 | 4322                   |
| 23   | 1467                   | 68                 | 4416                   |
| 24   | 1509                   | 69                 | 4512                   |
|  |                        | 70                 | 4610                   |

Aquasnap Puron units use high-pressure R-410A refrigerant (the unit operating pressure is above 40 bar, the pressure at 35°C air temperature is 50% higher than for R-22). Special equipment must be used when working on the refrigerant circuit (pressure gauge, charge transfer, etc.).

### 13 - START-UP CHECKLIST FOR 30RB LIQUID CHILLERS (USE FOR JOB FILE)

#### Preliminary information

Job name: .....  
Location: .....  
Installing contractor: .....  
Distributor: .....  
Start-up preformed by: ..... Date: .....

#### Equipment

Model 30RB: ..... S/N .....

#### Compressors

##### Circuit A

1. Model # .....  
S/N .....

2. Model # .....  
S/N .....

3. Model # .....  
S/N .....

4. Model # .....  
S/N .....

##### Circuit B

1. Model # .....  
S/N .....

2. Model # .....  
S/N .....

3. Model # .....  
S/N .....

4. Model # .....  
S/N .....

##### Circuit C

1. Model # .....  
S/N .....

2. Model # .....  
S/N .....

3. Model # .....  
S/N .....

4. Model # .....  
S/N .....

#### Air handling equipment

Manufacturer: .....  
Model # ..... S/N .....

Additional air handling units and accessories: .....  
.....

#### Preliminary equipment check

Is there any shipping damage? ..... If so, where? .....  
.....  
Will this damage prevent unit start-up? .....

- ☐ Unit is level in its installation
- ☐ Power supply agrees with the unit name plate
- ☐ Electrical circuit wiring has been sized and installed properly
- ☐ Unit ground wire has been connected
- ☐ Electrical circuit protection has been sized and installed properly
- ☐ All terminals are tight
- ☐ All cables and thermistors have been inspected for crossed wires
- ☐ All plug assemblies are tight

#### Check air handling systems

- ☐ All air handlers are operating
- ☐ All chilled water valves are open
- ☐ All fluid piping is connected properly
- ☐ All air has been vented from the system
- ☐ Chilled water pump is operating with the correct rotation. CWP amperage: Rated: ..... Actual: .....

**Unit start-up**

- ☐ Chilled water pump starter has been properly interlocked with the chiller
- ☐ Oil level is correct
- ☐ Unit has been leak checked (including fittings)
- ☐ Locate, repair, and report any refrigerant leaks

.....  
.....  
.....

Check voltage imbalance: AB ..... AC..... BC.....

Average voltage = ..... (see installation instructions)

Maximum deviation = ..... (see installation instructions)

Voltage imbalance = ..... (see installation instructions)

- ☐ Voltage imbalance is less than 2%

**warning: Do not start chiller if voltage imbalance is greater than 2%. Contact local power company for assistance.**

- ☐ All incoming power voltage is within rated voltage range

**Check evaporator water loop**

Water loop volume = ..... (litres)

Calculated volume = ..... (litres)

3.25 litres/nominal kW capacity for air conditioning

6.5 litres/nominal kW capacity for process cooling

- ☐ Proper loop volume established
- ☐ Proper loop corrosion inhibitor included.....litres of.....
- ☐ Proper loop freeze protection included (if required) ..... litres of.....
- ☐ Water piping includes electric tape heater up to the evaporator
- ☐ Return water piping is equipped with a screen filter with a mesh size of 1.2 mm

**Check pressure drop across the evaporator**

Entering evaporator = ..... (kPa)

Leaving evaporator = ..... (kPa)

Pressure drop (entering - leaving) = ..... (kPa)

**WARNING: Plot the pressure drop on the evaporator flow/pressure drop curve to determine the flow rate in l/s at the nominal operating conditions for the installation.**

**If necessary use the control valve to impose the flow rate on the nominal value.**

- ☐ Flow rate from the pressure drop curve, l/s = .....
- ☐ Nominal flow rate, l/s = .....
- ☐ The flow rate in l/s is higher than the minimum unit flow rate
- ☐ The flow rate in l/s corresponds to the specification of ..... (l/s)

Carry out the QUICK TEST function (see 30RB/RQ Pro-Dialog Plus Control manual):

Check and log on to the user menu configuration

|                                       |  |
|---------------------------------------|--|
| Load sequence selection .....         |  |
| Capacity ramp loading selection ..... |  |
| Start-up delay .....                  |  |
| Burner section.....                   |  |
| Pump control.....                     |  |
| Set-point reset mode .....            |  |
| Night-time capacity setback .....     |  |

Re-enter the set-points (see Controls section)

To start up the chiller

**WARNING:** Be sure that all service valves are open, and that the pump is on before attempting to start this machine. Once all checks have been made, start the unit in the “LOCAL ON” position.

Unit starts and operates properly

Temperatures and pressures

**WARNING:** Once the machine has been operating for a while and the temperatures and pressures have stabilized, record the following:

|   |  |
|---|--|
| Evaporator entering water .....         |  |
| Evaporator leaving water .....          |  |
| Ambient temperature .....               |  |
| Circuit A suction pressure .....        |  |
| Circuit B suction pressure.....         |  |
| Circuit C suction pressure.....         |  |
| Circuit A discharge pressure .....      |  |
| Circuit B discharge pressure.....       |  |
| Circuit C discharge pressure.....       |  |
| Circuit A suction temperature .....     |  |
| Circuit B suction temperature.....      |  |
| Circuit C suction temperature.....      |  |
| Circuit A discharge temperature .....   |  |
| Circuit B discharge temperature.....    |  |
| Circuit C discharge temperature.....    |  |
| Circuit A liquid line temperature ..... |  |
| Circuit B liquid line temperature.....  |  |
| Circuit C liquid line temperature.....  |  |

NOTES:

|       |  |
|-------|--|
| ..... |  |
| ..... |  |
| ..... |  |



www.eurovent-certification.com  
www.certiflash.com



Order No: 13439-76, 10.2011 - Supersedes order No: 13439-76, 02.2011.  
Manufacturer reserves the right to change any product specifications without notice.

Manufacturer: Carrier SCS, Montluel, France.  
Printed in the European Union.