

RC***MHXGA
RC***MHXEA

Air to Water Heat Pump Mono Outdoor Unit installation manual

**Planet
First** 100%
Recycled Paper

This manual is made with 100% recycled paper.



imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please
register your product at
www.samsung.com/register

ⓒ Ⓢ Ⓣ ⓘ Ⓟ Ⓛ DB98-34411A(2)

SAMSUNG

Contents

Safety precautions	2
Product specifications	4
Application examples	6
Main components	8
Functional diagram	12
Installing the unit	13
Piping work	21
Wiring	27
Testing operations	34
Trouble shooting	36
Error codes	36
Maintenance	38
Cylinder unit	40

Safety precautions

Carefully follow the precautions listed as below because they are essential to guarantee the safety of SAMSUNG product.



WARNING

- Always disconnect a power supply of Air-Water Heat Pump before servicing it or accessing components inside the unit.
- Verify that installation and testing operations shall be performed by qualified personnel.
- To prevent serious damage on the system and injuries to users, precautions and other notices shall be observed.





Warning

- ▶ Carefully read the content of this manual before installing the air to water heat pump and store the manual in a safe place in order to be able to use it as reference after installation.
- ▶ For maximum safety, installers should always carefully read the following warnings.
- ▶ Store the operation and installation manual in a safe location and remember to hand it over to the new owner if the air conditioner is sold or transferred.
- ▶ Store the user and installation manual in a safe location and remember to hand it over to the new owner if the air to water heat pump is sold or transferred.
- ▶ This manual explains how to install Air-Water Heat Pump. The use of other types of units with different control systems may damage the units and invalidate the warranty. The manufacturer shall not be responsible for damages arising from the use of non compliant units.
- ▶ The air conditioner is compliant with the requirements of the Low Voltage Directive (72/23/EEC), the EMC Directive (89/336/EEC) and the Directive on pressurized equipment (97/23/EEC).
- ▶ The manufacturer shall not be responsible for damage originating from unauthorized changes or the improper connection of electric and hydraulic lines. Failure to comply with these instructions or to comply with the requirements set forth in the "Operating limits" table, included in the manual, shall immediately invalidate the warranty.
- ▶ Failure to comply with these instructions or to comply with the requirement on the Operating Range (Heat: -20~25°C/ Cool: 10~46°C) set forth in the Product Specification (p.5) shall immediately invalidate the warranty.
- ▶ Do not use the units if you see some damages on the units and recognize something bad such as loud noisy, smell of burning.
- ▶ In order to prevent electric shocks, fires or injuries, always stop the unit, disable the protection switch and contact SAMSUNG's technical support if the unit produces smoke, if the power cable is hot or damaged or if the unit is very noisy.
- ▶ Always remember to inspect the unit, electric connections, refrigerant tubes and protections regularly. These operations shall be performed by qualified personnel only.
- ▶ The unit contains moving parts and electrical parts, which should always be kept out of the reach of children.

- ▶ Do not attempt to repair, move, alter or reinstall the unit by unauthorized personnel, these operations may cause product damage, electric shocks and fires.
- ▶ Do not place containers with liquids or other objects on the unit.
- ▶ All the materials used for the manufacture and packaging of the air to water heat pump are recyclable.
- ▶ The packing material and exhaust batteries of the remote controller(optional) must be disposed of in accordance with local regulations.
- ▶ The air to water heat pump containing a refrigerant must be disposed in authorized center or returned to retailer as special wastes.
- ▶ Wear protective gloves to unpack, move, install, and service the unit to avoid your hands being injured by the edge of the parts.
- ▶ Do not touch the internal parts (water pipes, refrigerant pipes, heat exchangers, etc) while running the units. And if you need to adjust and touch the units, have enough time for the unit can be cooled and be sure to wear protective gloves.
- ▶ In case of refrigerant leakage, try to avoid getting in contact with the refrigerant because this could result in severe wounds.
- ▶ When you install the Air to water heat pump in a small room, you must consider a proper ventilation to prevent a leakage level within the maximum permissible limit.
 - In that case, you may die from suffocation by some possibility.
- ▶ Make sure to safely dispose of packing materials. Packing materials, such as nails and other metal or wooden pallets may cause children get injured.
- ▶ Inspect the product shipped and check if damaged during transport. If the product has some damages, DO NOT INSTALL and immediately discuss about the damages with the carrier or retailer (if the installer or the authorized technician has collected the material from the retailer.)
- ▶ Our units shall be installed in compliance with the spaces described in the installation manual, to ensure accessibility from both sides and allow repairs or maintenance operations to be carried out. If the units installed without complying with procedures described in manual, additional expenses can be asked because special harnesses, ladders, scaffolding or any other elevation system for repair service will NOT be considered part of the warranty and will be charged to the end customer.
- ▶ Always make sure that the power supply is compliant with local safety standards.
- ▶ Verify that the voltage and frequency of the power supply comply with the specifications and input power is sufficient to ensure the operation of any other domestic appliance connected to the same electric lines. Always verify that the cut-off and protection switches are suitably selected.
- ▶ Always verify that electric connections (cable entry, section of leads, protections...) are compliant with the electric specifications and with the instructions provided in the wiring scheme. Always verify that all connections comply with the standards applicable to the installation of air to water heat pumps. Devices disconnected from the power supply should be completely disconnected in the condition of overvoltage category.
- ▶ Do not connect the earth wire to the gas pipe or water pipe, lighting rod, surge absorber, or telephone earth wire. If earthing is not complete, it may cause an electric shock or fire.
- ▶ Be sure to install both an earth leakage detector and circuit breaker with specified capacity in accordance with relevant local and national regulations.
 - If it is not installed properly, it may cause electric shocks and fire.
- ▶ Make sure that the condensed water runs well out of the unit at low ambient temperature. Drain pipe and cond heater can frost/ice can not grow. If drain work is not effective for releasing condensed water, it can make the units get damaged by massive ice and system can be stop , covered by ice.
- ▶ Install the power cable and communication cable of the indoor and outdoor unit at least 1m away from the electric appliance.
- ▶ Protect the unit from rats or small animals. If an animal makes a contact with the electric parts, it can cause malfunctions, smoke or fire. Please instruct the customer to keep the area around the unit clean.






Product specifications

Product line-up

Line-up				Remark
Heat pump units	Chassis			
	Model name	RC090MHXEA	RC120MHXEA RC120MHXGA RC140MHXEA RC140MHXGA RC160MHXEA RC160MHXGA	
Auxiliary parts	 Control kit	MIM-E03A		Requisite
	 Cylinder unit	Standard models: NH200CHXEA NH300CHXEA		Option

Accessories

- ▶ Keep supplied accessories until the installation is finished.
- ▶ Hand the installation manual over to the customer after finishing installation.
- ▶ The quantities are indicated in parentheses.

Installation manual (1)	Drain plug (1)	Fastener-nut(1)	Rubber-cover wire(2)	Drain cap (1)
				

Type	Unit	RC090MHXEA	RC120MHXEA RC120MHXGA	RC140MHXEA RC140MHXGA	RC160MHXEA RC160MHXGA
Power source	-	1P, 220~240VAC 50Hz	1P, 220~240VAC 50Hz 3P, 380~415VAC 50Hz	1P, 220~240VAC 50Hz 3P, 380~415VAC 50Hz	1P, 220~240VAC 50Hz 3P, 380~415VAC 50Hz
Nominal capacity	7°C	kW	9	12.0	14.0
	2°C	kW	9	10.0	13.0
	-15°C	kW	7	12.5	12.5
COP (A7-W35)	-	4.3	4.6	4.35	4.2
Weight(Kg)	kg	83	113	113	113
Compressor	-	Rotary inverter	Rotary inverter	Rotary inverter	Rotary inverter
Condenser	-	Brazing type 48 plates	Brazing type 72 plates	Brazing type 72 plates	Brazing type 72 plates
Evaporator	-	Ø7, FP 1.6, L850	Ø7, FP 1.7, L950	Ø7, FP 1.7, L950	Ø7, FP 1.7, L950
Fan & Motor	-	Propeller, Ø520, 3-blade BLDC Inverter	Propeller, Ø520, 3-blade BLDC Inverter	Propeller, Ø520, 3-blade BLDC Inverter	Propeller, Ø520, 3-blade BLDC Inverter
Flow switch	LPM	16 ± 1.5 Magnetic (decreasing)	16 ± 1.5 Magnetic (decreasing)	16 ± 1.5 Magnetic (decreasing)	16 ± 1.5 Magnetic (decreasing)
Base heater	W	150	150	150	150
Refrigerant	g	1,400 (R410A)	2,200 (R410A)	2,200 (R410A)	2,200 (R410A)
Noise (Heat/Cool, Pressure)	dBA	63/ 60	64/62	64 / 62	64 / 62
Water connection (In/Out)	Inch	1.0 / 1.0	1.0 / 1.0	1.0 / 1.0	1.0 / 1.0
Leaving water temperature	°C	Cooling : 5 ~ 25 Heating : 25 ~ 55	Cooling : 5 ~ 25 Heating : 25 ~ 55	Cooling : 5 ~ 25 Heating : 25 ~ 55	Cooling : 5 ~ 25 Heating : 25 ~ 55
Operating range (Heat/Cool)	°C	-20~35 / 10~46	-20~35 / 10~46	-20~35 / 10~46	-20~35 / 10~46
Weight (net)	Kg	83	113	113	113
Size (WxHxD, net)	mm	940 x 998 x 330	940 x 1,420 x 330	940 x 1,420 x 330	940 x 1,420 x 330

Application examples




WARNING

- The application examples given below are for illustration purposes only.
- When the SAMSUNG Air-to-Water Heat Pump system is used in series with another heat source (e.g. gas boiler), ensure that the return water temperature not exceed 55°C.
- The unit is only to be used in a closed water system. Application in an open water circuit can lead to excessive corrosion of the water piping.
- SAMSUNG can not be put responsible for incorrect or unsafe situations in the water system. Make sure that the boiler, radiators, convectors, solar collectors, UFHs, FCUs, additional pumps, pipings, and controls in the water system are in accordance with relevant local laws and regulations under the installer's responsibility.
- By-pass valve shall be installed for space heating loops. When one of loops or all loops are closed, water flow rate could be low condition. To keep flow rate approximately and prevent flow stop, the by-pass valve shall be installed between supply collector and return collector.
- SAMSUNG shall not be held liable for any damage resulting from not observing this rule.


Application #1

Mono outdoor + Control kit

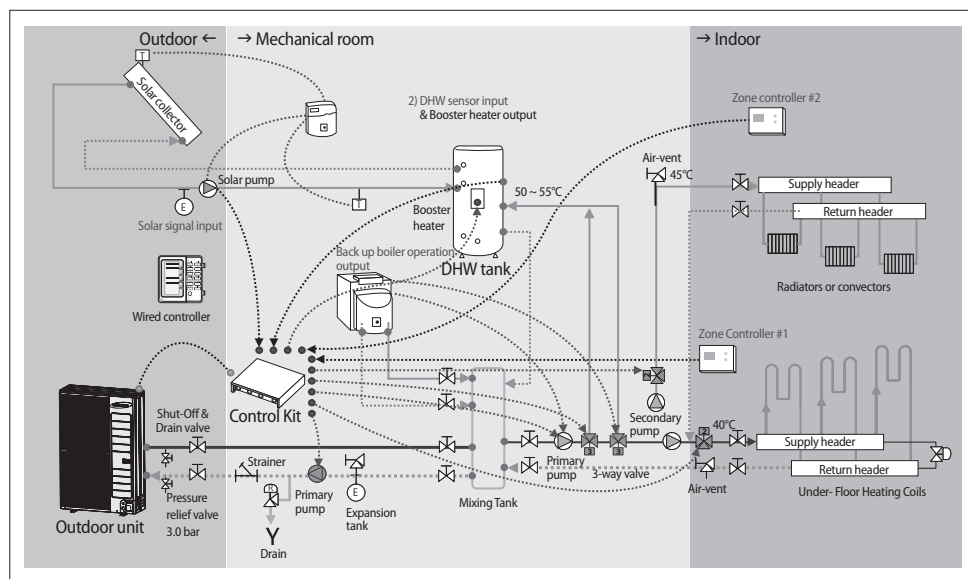

Application #2

Mono outdoor + Cylinder unit

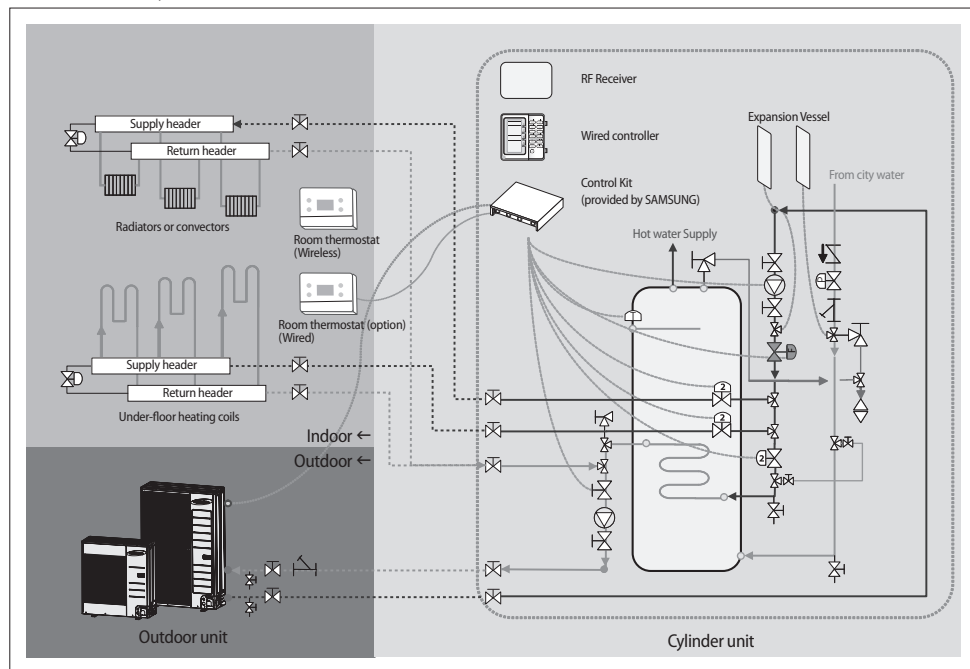


Main components

Dimensions(Overall)

Heat pump for R410A.


1-Fan chassis

► RC090MHX*

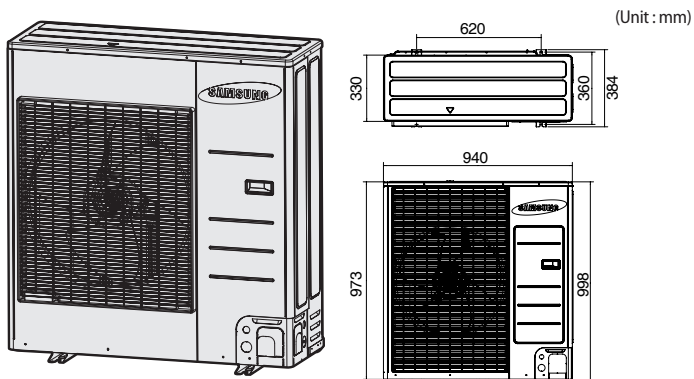


2-Fan chassis

► RC120MHX*/RC140MHX*/RC160MHX*

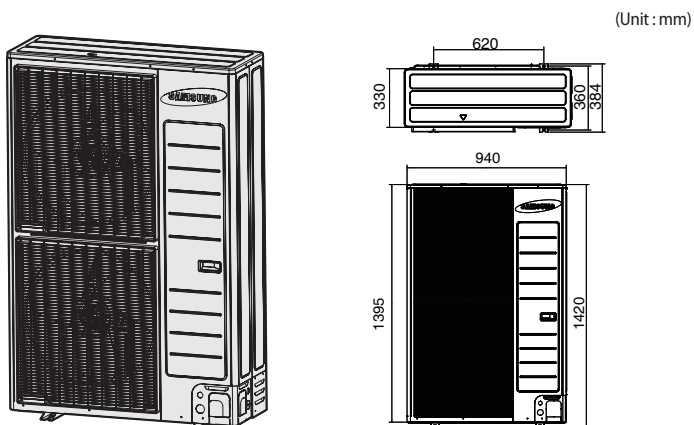


Dimensions (Water pipe)

RC090MHX*

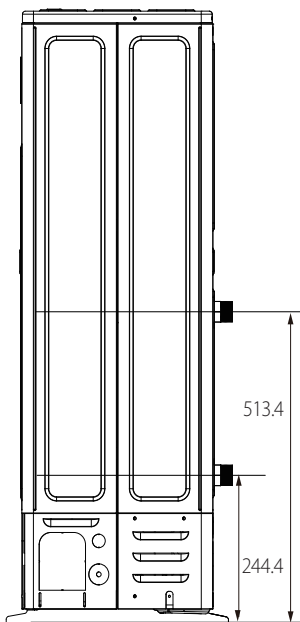

(Unit : mm)

RC120MHX*/RC140MHX*/RC160MHX*

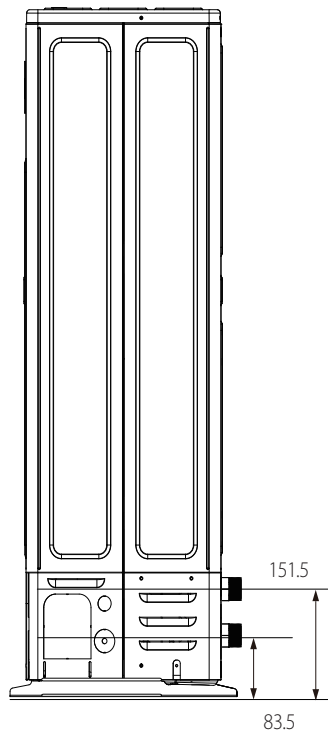


(Unit : mm)


ENGLISH

Main components

RC090*

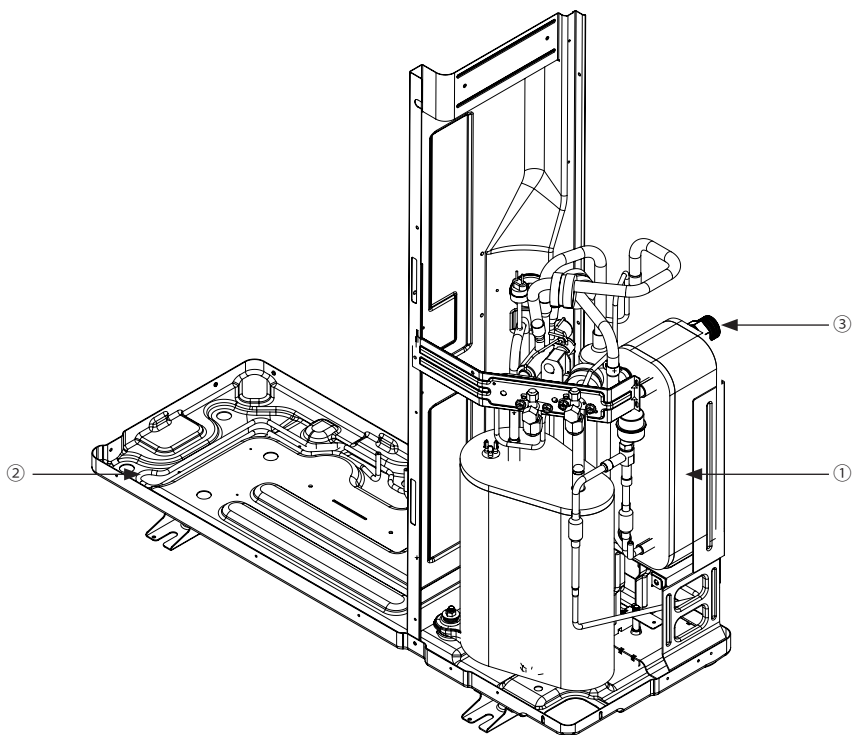


NO.	Name	Note.
①	PHE	48P
②	Base heater	SUS316L, 150W
③	Water fitting	BSPP 1" Male

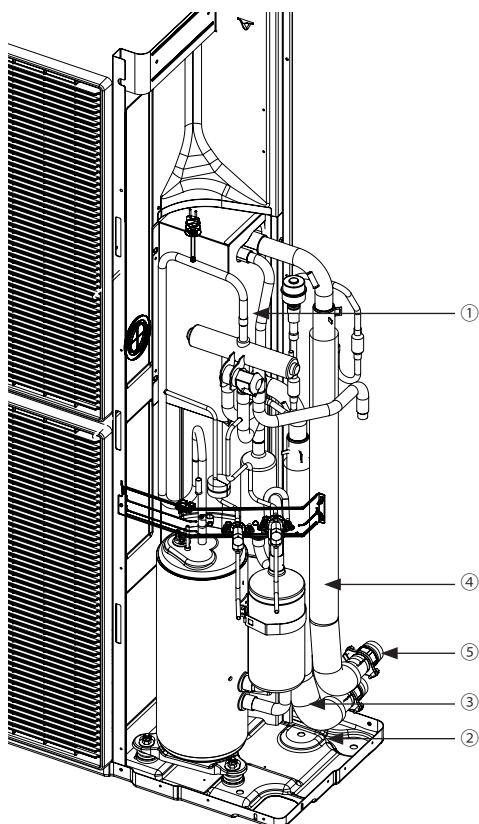

NO.	Name	Note.
①	PHE	72P
②	Base heater	SUS316L, 150W
③	Water hose in	Rubber hose
④	Water hose out	Rubber hose
⑤	Water fitting	BSPP 1" Male

Functional diagram

RC090MHX*/RC120MHX*/RC140MHX*/RC160MHX*

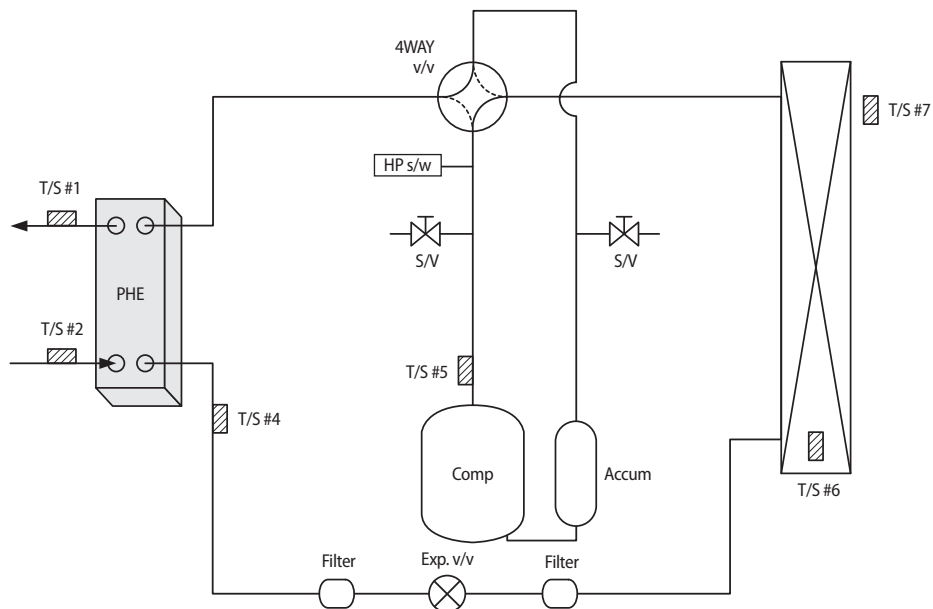

Part	Description
PHE	Plate heat exchanger
T/S #1	For water outlet temp sensor
T/S #2	For water inlet temp sensor
T/S #3	For PHE in temp
T/S #4	For PHE out temp
T/S #5	For discharge temp
T/S #6	For cond temp
T/S #7	For ambient temp sensor
S/V	Service valve ¼ inch
Accum	Accumulator


Installing the unit

Moving the outdoor unit

- ▶ Select the moving route in advance.
- ▶ Be sure that moving route is safe from weight of the outdoor unit.
- ▶ Do not slant the product more than 30° when carrying it. (do not lay the product down sideways)
- ▶ The surface of the heat exchanger is sharp. Be careful not to be injured while moving and installing.

Moving the outdoor unit by wire rope


- ▶ Fasten the outdoor unit by two 8m or longer wire ropes as shown at the figure. To prevent from damage or scratches, insert a piece of cloth between the outdoor unit and rope, then move the unit.

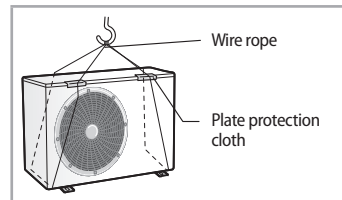

* The appearance of the unit may be different from the picture depending on the model.

Moving the outdoor unit with a fork lift

- ▶ Insert the fork into the wooden pallet at the bottom of the outdoor unit carefully. Be careful that the fork does not damage the outdoor unit.

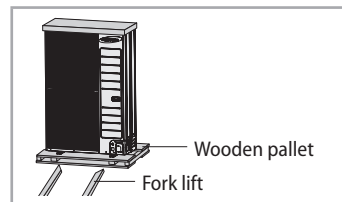



Installing the unit

Deciding on where to install the outdoor unit


Decide the installation location regarding the following condition and obtain the user's approval.

- ▶ The outdoor unit must not be placed on its side or upside down, as the compressor lubrication oil will run into the cooling circuit and seriously damage the unit.
- ▶ Choose a location that is dry and sunny, but not exposed to direct sunlight or strong winds.
- ▶ Do not block any passageways or thoroughfares.
- ▶ Choose a location where the noise of the Air to Water Heat Pump when running and the discharged air do not disturb any neighbours.
- ▶ Choose a position that enables the pipes and cables to be easily connected to the other hydraulic system.
- ▶ Install the outdoor unit on a flat, stable surface that can support its weight and does not generate any unnecessary noise and vibration.
- ▶ Position the outdoor unit so that the air flow directly stream towards the open area.
- ▶ Place the outdoor unit where there are no plants and animals because they may cause malfunction of outdoor unit.
- ▶ Maintain sufficient clearance around the outdoor unit, especially from a radio, computer, stereo system, etc.
- ▶ When installing the outdoor unit near seashore, make sure it is not directly exposed to sea breeze. If you can not find an adequate place without direct sea breeze, make sure to apply anti-corrosion coating on the heat exchanger.

- ▶ Install the outdoor unit in a place (such as near buildings etc.) where it can be prevented from sea breeze which can damage the outdoor unit.

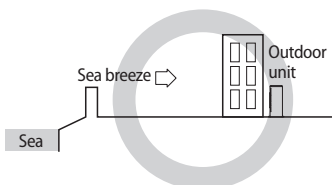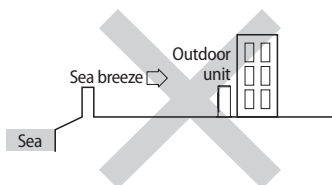

- ▶ If you cannot avoid installing the outdoor unit by the seashore, construct a protection wall around to block the sea breeze.

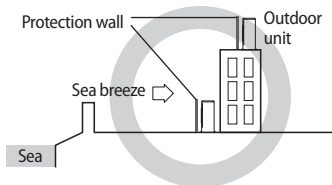

- Protection wall should be constructed with a solid material such as concrete to block the sea breeze and the height and the width of the wall should be 1.5 times larger than the size of the outdoor unit. Also, secure over 700mm between the protection wall and the outdoor unit for exhausted air to ventilate.

- ▶ Install the outdoor unit in a place where water can drain smoothly.

- * If you cannot find a place satisfying above conditions, please contact manufacturer. Make sure to clean the sea water and the dust on the outdoor unit heat exchanger.

- ▶ Do not install the Air to Water Heat Pump in following places.
 - The place where there is mineral oil or arsenic acid. There is a chance that parts may get damaged due to burned resin. The capacity of the heat exchanger may reduce or the Air to Water Heat pump may be out of order.
 - The place where corrosive gas such as sulfurous acid gas generates from the vent pipe or air outlet. The copper pipe or connection pipe may corrode and refrigerant may leak.
 - The place where there is a danger of existing combustible gas, carbon fiber or flammable dust. The place where thinner or gasoline is handled.



Do not install the outdoor unit in a snowy and cold area (low temperature and high humidity area - where the temperature is below -7°C and humidity is higher than 85%) because according to operation condition (defrost, etc.), ice may be formed in the drain route.

If the ice is accumulated, it may cause critical damage to the product.

ex) lakeside of cold area in winter time, seashore, alpine region and etc.



- This device must be installed according to the national electrical rules.
- With an outdoor unit having net weight upper than 60kg, we suggest do not install it suspended on wall, but considering floor standing one.


- ▶ If the outdoor unit is installed at a height, ensure that its base is firmly fixed in position.
- ▶ Make sure that the water dripping from the drain hose runs away correctly and safely.
- ▶ When you install the outdoor unit at wayside, you should install it above 2m height or make sure that the heat from the outdoor unit shouldn't be in direct contact with passersby. (The ground for application :The revision of regulation for facility in building by the law of the Ministry of Construction and Transportation.

Installing the unit


Space requirements for outdoor unit

When installing 1 outdoor unit


(Unit : mm)

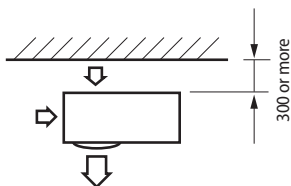


- * When the air outlet is opposite the wall

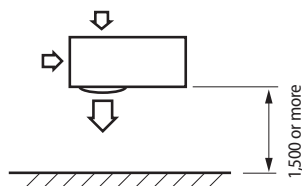


- * When the air outlet is towards the wall

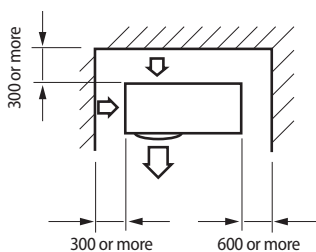


- * When 3 sides of the outdoor unit are blocked by the wall

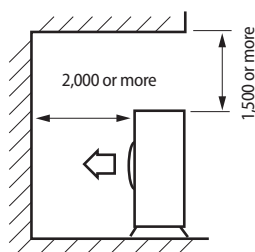

- * The upper part of the outdoor unit and the air outlet is towards the wall

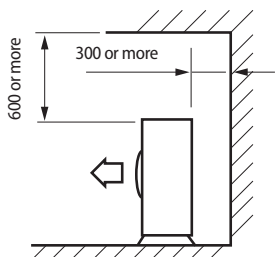


- * The upper part of the outdoor unit and the air outlet is opposite the wall

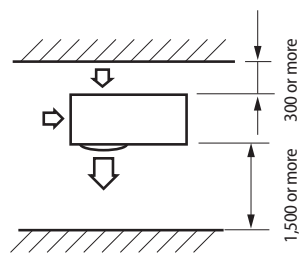


- * When front and rear side of the outdoor unit is towards the wall

When installing more than 1 outdoor unit


(Unit : mm)

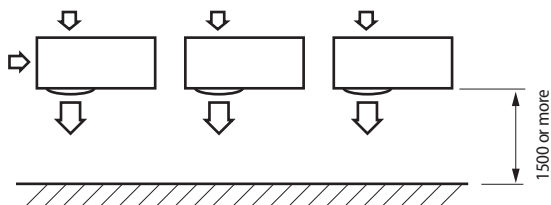

* When the air outlet is towards the wall

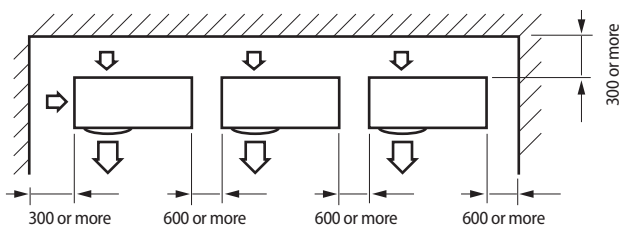


* When 3 sides of the outdoor unit are blocked by the wall

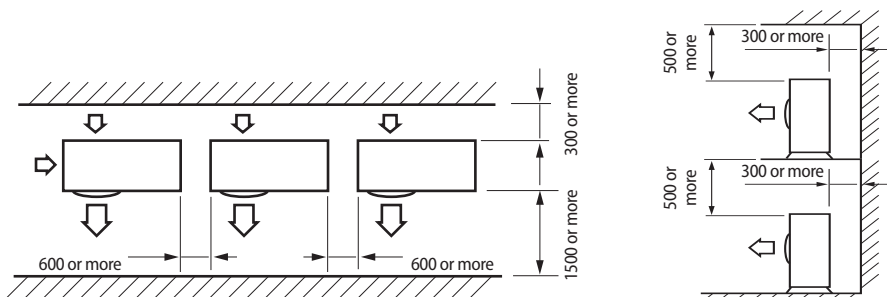

* When front and rear side of the outdoor unit is towards the wall

* The upper part of the outdoor unit and the air outlet is opposite the wall

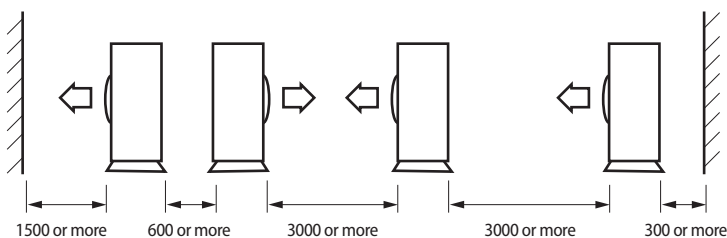

* When front and rear side of the outdoor unit is towards the wall



- The units must be installed according to distances declared, in order to permit accessibility from each side, either to guarantee correct operation of maintenance or repairing products. The unit's parts must be reachable and removable completely under safety condition (for people or things).

Installing the unit

Outdoor unit installation

The outdoor unit must be installed on a rigid and stable base to avoid any increase in the noise level and vibration, particularly if the outdoor unit is to be installed in a location exposed to strong winds or at a height, the unit must be fixed to an appropriate support (wall or ground).


- Fix the outdoor unit with anchor bolts.






- The anchor bolt must be 20mm or higher from the base surface.



- When tightening the anchor bolt, tighten the rubber washer to prevent the outdoor unit bolt connection part from corroding.
- Make a drain outlet around the base for outdoor unit drainage.
- If the outdoor unit is installed on the roof, you have to check the ceiling strength and waterproof the unit.

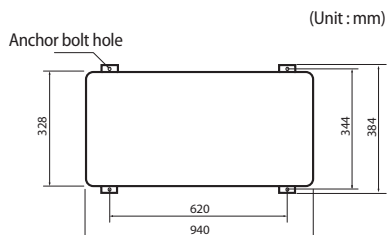

Outdoor unit support

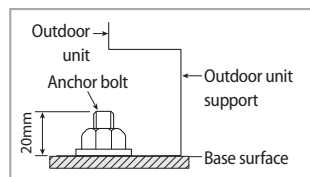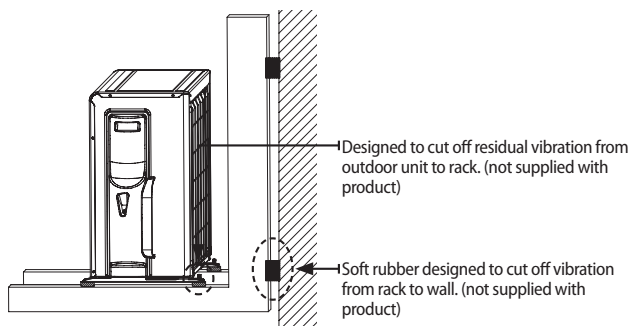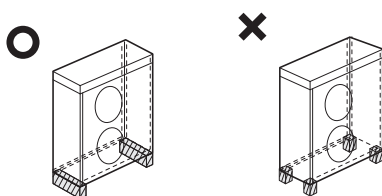

- Outdoor unit installed on the wall by rack
 - Ensure the wall will be able to suspend the weight of rack and outdoor unit ;
 - Install the rack close to the column as much as possible ;
 - Install proper grommet in order to reduce noise and residual vibration transferred by outdoor unit towards wall.




When installing air guide duct

- Check and make sure that screws do not damage the copper pipe.
- Secure air guide duct on guard fan.


Drain work

While Air-Water Heat Pump is running in heating mode, Ice can begin accumulate on the surface of condenser. To prevent Ice from growing, system go into De-frost mode and then Ice on the surface changes to water. Dropped water from condenser shall be eliminated through running drain holes to prevent Ice growing at low temperature.


- ▶ In case there is not enough space for drainage out of the unit, additional drain works are required. Follow the description as below
 - Make space more than 100mm between the bottom of the outdoor unit and the ground for installation of the drain hose.
 - Insert the drain plug into the hole on the bottom of the outdoor unit.
 - Connect the drain hose to the drain plug.
 - Make sure dusts or small branches should not go into the drain hose.

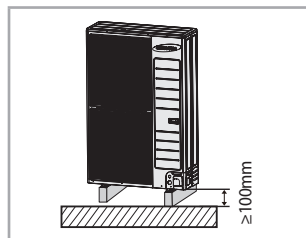

- If drain work is not enough, it can lead to system performance degradation and system damages.

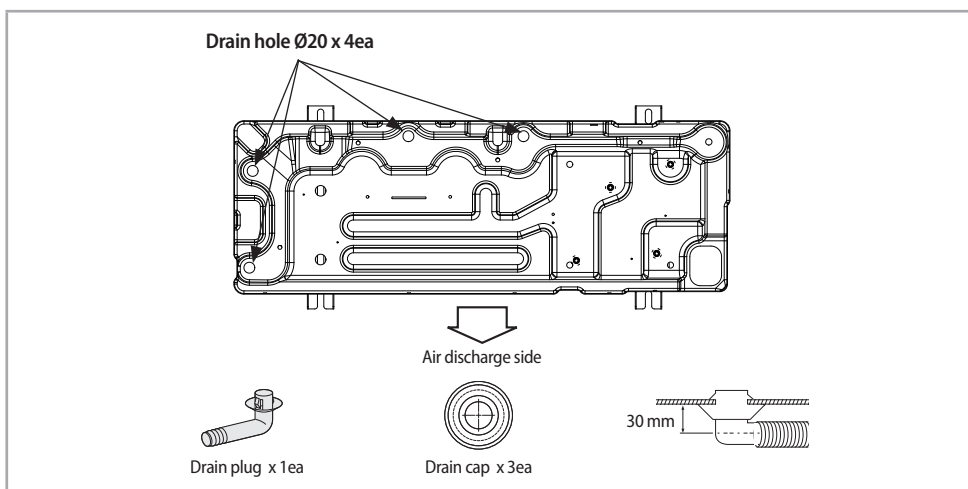

1. Prepare a water drainage channel around the foundation, to drain waste water from around the unit.
2. If the water drainage of the unit is not easy, please build up the unit on a foundation of concrete blocks, etc. (the height of the foundation should be maximum 150mm).
3. If you install the unit on a frame, please install a waterproof plate within 150mm of the underside of the unit in order to prevent the invasion of water from the lower direction.
4. When installing the unit in a place frequently exposed to snow, pay special attention to elevate the foundation as high as possible.
5. If you install the unit on a building frame, please install a waterproof plate (field supply) (within 150mm of the underside of the unit) in order to avoid the drain water dripping. (See figure)

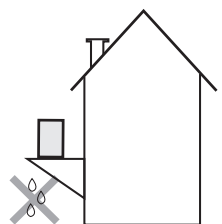


Installing the unit

Selecting a location in cold climates




NOTE • When operating the unit in a low outdoor ambient temperature, be sure to follow the instructions described below.

- ▶ To prevent exposure to wind, install the unit with its suction side facing the wall.
- ▶ Never install the unit at a site where the suction side may be exposed directly to wind.
- ▶ To prevent exposure to wind, install a baffle plate on the air discharge side of the unit.
- ▶ In heavy snowfall areas it is very important to select an installation site where the snow will not affect the unit. If lateral snowfall is possible, make sure that the heat exchanger coil is not affected by the snow (If necessary construct a lateral canopy)

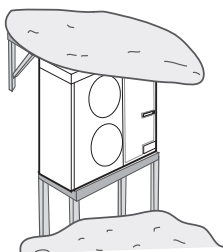

1. Construct a large canopy.
2. Construct a pedestal.
 - Install the unit high enough off the ground to prevent it being buried under snow.


- ▶ The outdoor unit should be installed with consideration of the direction of strong winds. These can make the unit turn over, so the side of the unit should be set to face the wind, not the front of the unit.

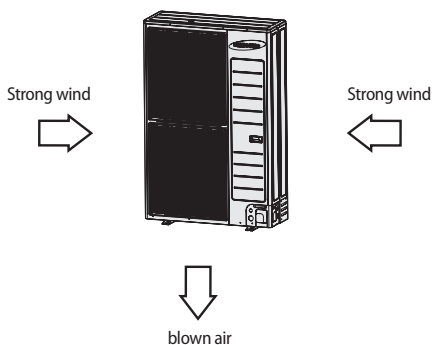

Piping work

Water connections must be made in accordance with the outlook diagram delivered with the unit, respecting the water in- and outlet. If air, moisture or dust gets in the water circuit, problems may occur. Therefore, always take into account the following when connecting the water circuit:

- ▶ Use clean pipes only.
- ▶ Hold the pipe end downwards when removing burrs.
- ▶ Cover the pipe end when inserting it through a wall so that no dust and dirt enter.
- ▶ Use a good thread sealant for the sealing of the connections.
The sealing must be able to withstand the pressures and temperatures of the system.
- ▶ When using non-brass metallic piping, make sure to insulate both materials from each other to prevent galvanic corrosion.
- ▶ Because brass is a soft material, use appropriate tooling for connecting the water circuit.
Inappropriate tooling will cause damage to the pipes.

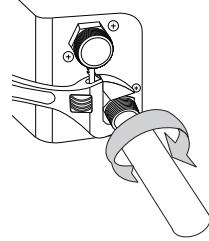

- Be careful not to deform the unit piping by using excessive force when connecting the piping. Deformation of the piping can cause the unit to malfunction.
- Always use two wrenches (spanners) for tightening or loosening the water connections, and tighten connections with a torque wrench as specified in below table. If not, connections and parts can be damaged and leaks.
- The unit is only to be used in a closed water system. If applications are in open water circuit, it will generate Heat exchangers fouling, Corrosion, Leak.

	Name	Tightening torque	
1	BSP1	350~380 kgf·cm	34 ~ 37 N·m
2	Flow switch	72~82 kgf·cm	7 ~ 8 N·m

Flushing and air-purging

When filling water, the following start-up procedure should be followed.

1. All system components and pipes must be tested for the presence of leaks.
2. Preparation of a make-up water assembly or flushing unit is recommended for installation and service.
3. Before connecting pipes to the hydro unit, flush water pipes clean to remove contaminants during hours using a flushing unit or tap water pressure if it is adequate (at 2 to 3 bar)
4. Fill water into the hydro unit by opening service valves.
5. Purge the air. (Fill with a flushing unit with sufficient capacity; avoid aerating the water)
6. Circulate for long enough to ensure that all air has been bled from the complete water piping system.



- After installations, commissioning should be performed by qualified representatives. Unless flushing and air-purging works are performed adequately, it might result in malfunctions.



Flushing unit
(or purging cart)

Piping work



CAUTION

- **Before installing/commissioning the unit, make sure to check the following points :**
 - The maximum water pressure of the unit is 2.8 bar static pressure.
 - The operating range of water temperature is 15~55°C at heating conditions and 5~25°C at cooling conditions.
 - The minimum required water flow for operation is 16 liters/min. At all times the required water flow-rates should remain. Otherwise, the unit can stop due to a lack of water.
 - Water quality must be according to EN directive 98/83 EC.
 - If the unit and the pipes are exposed to freezing temperature, It can cause damage to the hydraulic system. Special care must be taken to prevent freezing of the total water system.
 - The unit is designed to be used in a closed-loop system. Do not use any other components which are designed only for an open-loop system.
 - Never use Zn-coated parts in the water circuit.
 - All hydraulic parts including field piping must be insulated to reduce heat loss and condensation.
 - It is recommended to install the make-up water assembly to feed small quantities of water to the system automatically, replacing the minor water losses and maintaining the system pressure.
 - Drain taps must be provided at all low points of the system to permit complete drainage of the circuit for maintenance use.
 - Make sure that the check valves are correctly installed in the system (field supply).
 - Flush pipes out with clean water to remove contaminants in pipes during installation.
 - The strainer(water filter) must be cleaned after flushing the pipes, and it should be cleaned periodically. Replace strainer when necessary.
 - Charging : Charge the water until a pressure of 1.5~2.0bar by using make-up water assembly(Field supply). (The water pressure indicated on the manometer will vary depending on the water temperature)
The nominal water pressure in the system should remain about 1.0 bar at all times to avoid air entering the water system.
 - Air purging; Make sure that air should be vented from the system at start-up or after installing/ servicing. The air vent valve must be opened during charging the water (at least 2 turns) in order to remove all air in the circuit, and a make-up water assembly allows water into the system continuously.
 - In case that the water piping would be located in a higher position than the air vent of the unit, it is necessary to add an additional one in the highest position of water circuit. The air vent should be located both where water temperatures are the highest and where the height of pipes are the highest.
 - Always use materials which are compatible with water used in the system and with the materials used on the indoor unit.
 - Select piping diameter in relation to required water flow and available ESP of the pump.
 - Use chemical cleaning agents(Begin with acid , finish with alkali).
 - Do not operate the system with closed valves because it results in damaging the heat pump.

Freeze protection

Frost can make some damage on the hydraulic system. It is because it is installed outside house normally. To avoid taking risks of freezing problem, special cares such as Anti-freezing fluid are required as below. Ethylene glycol concentration can vary depending on outdoor temperature where our system is installed, fill in Ethylene glycol by mixing as below.



Ethylene Glycol Is Toxic


Ethylene glycol is toxic if swallowed, and therefore is a hazard to animals and small children. Ethylene glycol must be handled in accordance with relevant local laws and regulations.

Outdoor temperature	Ethylene Glycol(%)
23°F (-5°C)	10
14°F (-10°C)	20
5°F (-15°C)	25
-10°F (-20°C)	35

Setting capacity and pre-pressure of the expansion vessel

When it is required to change the default pre-pressure of the expansion vessel(1 bar), keep in mind the following guidelines:

- ▶ Use only dry nitrogen to set the expansion vessel pre-pressure.
- ▶ Inappropriate setting of the expansion vessel pre-pressure will lead to malfunction of the system. Therefore, the pre-pressure should only be adjusted by a licensed installer.

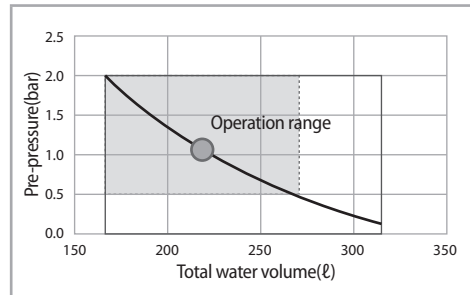

Installation height difference(a)	Water volume	
	< 220 Litres	> 220 Litres
<7m	No pre-pressure adjustment required.	Actions required: <ul style="list-style-type: none"> • Pre-pressure must be decreased, calculate according to "Calculating the pre-pressure of the expansion vessel". • Check if the water volume is lower than maximum allowed water volume.
>7m	Actions required: <ul style="list-style-type: none"> • Pre-pressure must be increased, calculate the appropriate value following by "Calculating the pre-pressure of the expansion vessel". • Check if the water volume is lower than maximum allowed water volume. 	Expansion vessel of the unit too small for the installation.

(a) Installation height difference: height difference(m) between the highest point of the water circuit and the indoor unit. If the unit is located at the highest point of the installation, the installation height is considered 0m.

Calculating the pre-pressure of the expansion vessel



- ▶ The pre-pressure(Pg) to be set depends on the maximum installation height difference(H) and is calculated as below :
 $Pg = (H/10 + 0.3) \text{ bar}$

Piping work

Unit resistance and PHE resistance by glycol concentrate

The unit is composed of water pipes and PHE basically.

To ensure correct operation and predict the expected performance, Flow and Resistance table can be used and Flow and Resistance characteristic is dependent on Glycol concentration.

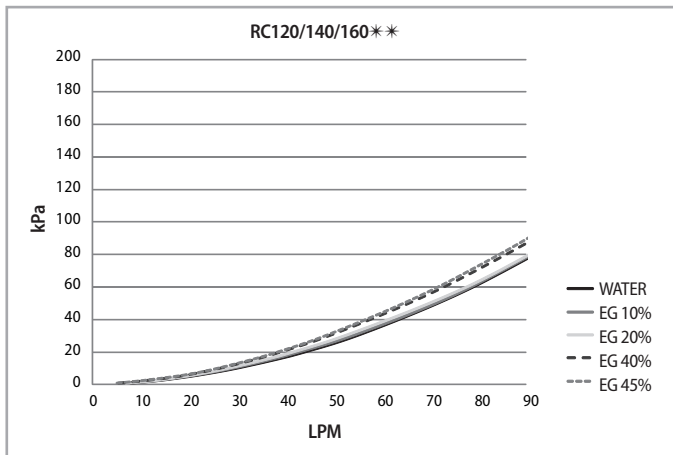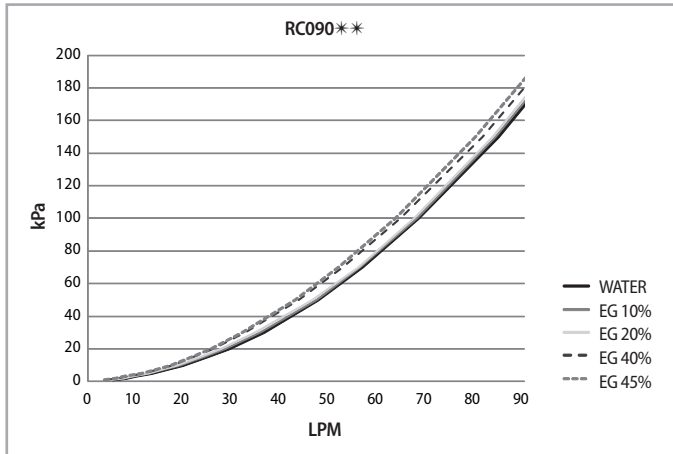

Changing Glycol concentration can cause the pressure drop of the system and it can leads to make flow rate rather slow. Just in case performance degraation, installer shall be careful of flow rate changes.

Flow switch

Flow switch is not integrated part in MONO Unit. But the installation is essential to operate MONO Unit. Flow switch is provided by Samsung control kit as a sub component.




- Flow switch shall be installed described by installation manual of Mono unit or Control kit.
- All electric wiring works shall be implemented by manuals which Samsung provided.
- Before completing the installation works, make sure to check if the flow switch is installed in horizontal and if flow direction is in parallel with pipe direction. (Straight length of In and Out pipe of flow switch shall have 5 times length in diameter)

Charging water

After installation is completed, the following procedures shall be used to charge water into the hydro unit.

- ▶ Connect water lines to water connections of Air-Water Heat Pump.
- ▶ Air vent valve shall be open at least 2turns so that air can be eliminated in the system.
- ▶ Open the service valve in the water supply connection.
- ▶ Water pressure of supply line shall be over 2.0 bar for good charging work.
- ▶ Stop water supply when the pressure gauge of hydro unit indicates around 2.0 bar.

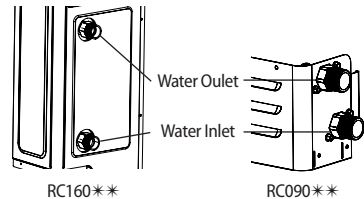

- There shall be enough space for Service works.
- Water pipe and connections shall be cleaned by using water or cleaner before operating the unit at first time.
- Considering E.S.P and water pump performance, select water plumbing specification and under floor loofs.
- Make sure to calculate the total resistance of piping system and determine the size of pipes before selecting the required head of pumps. If the pressure loss of total water system is over than designed pressure, an external water pump shall be installed on piping system in series.
- Do not connect power supply while water is charging.
- When initial installation or re-installation is required, remove air by air vent valve in water plumbings which are installed by local installers to prevent air trap in the system while charging water.
- Make sure that back flow preventer (check valves) shall be installed on main supply line to prevent from contaminating the city water.
 - It is recommended to install the make-up water assembly to prevent from contaminating the city water.
 - Check valves in the make-up water assembly can prevent running water inside hydro unit from contaminating water supplies during installation or maintenance works.

Piping work

Pressure relief valve

MONO Unit does not have a pressure relief valve. The valve shall prevents abnormal water pressure from damaging the the system by opening at 3.0 bar.



- Make certain that the discharged water out of drain pan does not affect other elements.

Filter / Strainer

Installation of Filter / Strainer is mandatory for water system. The Filter or Strainer shall be located in front of inlet pipe of PHE.

While operating the system, some dust and foreign materials can circulate the system and can make the whole system not work well due to blockage of heat exchangers and corrosion in some components.

Filter mesh : #30

Piping insulation

The complete water circuit, inclusive all piping, must be insulated to prevent condensation during cooling operation and reduction of the heating and cooling capacity as well as prevention of freezing of the outside water piping during winter time. The thickness of the sealing materials must be at least 9 mm with (0.035 W/mK) in order to prevent freezing on the outside water piping.

If the temperature is higher than 86°F (30°C) and the humidity is higher than RH 80%, then the thickness of the sealing materials should be at least 20 mm in order to avoid condensation on the surface of the sealing.

Wiring

Two electronic cables must be connected to the outdoor unit.


- ▶ The connection cord between indoor unit and outdoor unit.
- ▶ The power cable between outdoor unit and auxiliary circuit breaker.
- ▶ Specially for Russian and European market, before installation, the supply authority should be consulted to determine the supply system impedance to ensure compliance.




- During the unit installation make first refrigerant connections and then electrical connections. If unit is uninstalled first disconnect electrical cables, then refrigerant connections.
- Connect the air conditioner to grounding system before performing the electrical connection.
- When installing the unit, you shouldn't use inter connection wire.

Example of EHS system

When using ELB for 1 phase

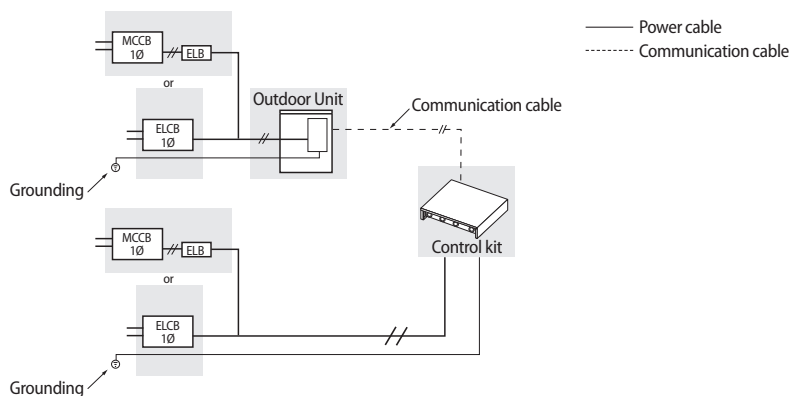

When using ELB for 3 phase 4 wires

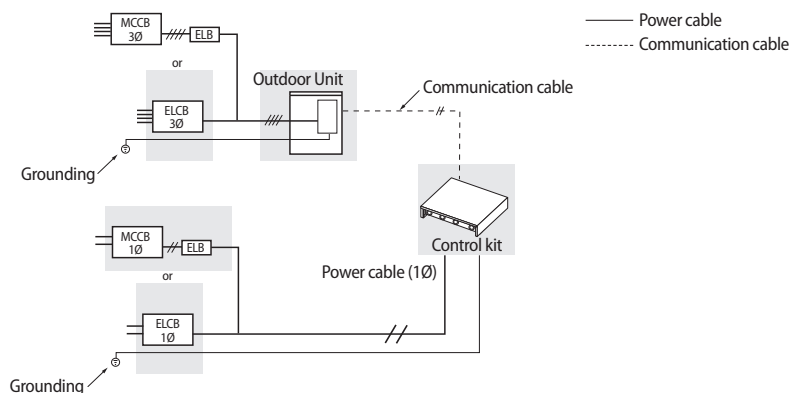

- * If an outdoor unit is installed in a place in danger of an electric leak or submergence, you must install the ELB.
- * Installation of control kit must be followed its Installation manual.


Wiring

Power Cable Specifications

1 phase

Outdoor unit	Rated		Voltage Range		Power supply	
	Hz	Volts	Min	Max	MCA	MFA
RC090MHXEA	50	220-240	198	264	22.0	27.5
RC120MHXEA	50	220-240	198	264	28.0	35.0
RC140MHXEA	50	220-240	198	264	30.0	37.5
RC160MHXEA	50	220-240	198	264	32.0	40.0

- ▶ The power cable is not supplied with air conditioner.
- ▶ Supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord (Code designation IEC:60245 IEC 57 / CENELEC:H05RN-F)
- ▶ Equipment complying with EN/IEC 61000-3-12.

Indoor Unit	Load	Power supply	Power cable	MAX. length	Type GL 	
			mm ² ,wires	m	A	
MIM-E03A	No Heater (Water Pump, Valve, Wired RMC)	1Ø, 220-240V, 50Hz	1.5 / 3	<10m	10	
			2.5 / 3	10m<L<20m	10	
	Booster Heater (3kw)		4.0 / 3	<10m	20	
			6.0 / 3	10m<L<20m	20	
	Booster Heater (~3kw) + Backup Heater (~3kw)		6.0 / 3	<10m	40	
			8.0 / 3	10m<L<20m	40	

- ▶ The Power cable is not supplied with the heat pump.
- ▶ For power cable, use the grade H07RN-F materials in 1Ø system.
- ▶ If you connect Backup Heater at separated power cable, you can reduce wire size. (Please refer to indoor unit installation manual)

3 Phase

Outdoor unit	Rated		Voltage Range		Power supply	
	Hz	Volts	Min	Max	MCA	MFA
RC120MHXGA	50	380-415	342	457	10.0	12.5
RC140MHXGA	50	380-415	342	457	11.0	13.8
RC160MHXGA	50	380-415	342	457	12.0	15.0


- ▶ The power cable is not supplied with air conditioner.
- ▶ Supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord (Code designation IEC:60245 IEC 57 / CENELEC:H05RN-F)
- ▶ This equipment complies with IEC 61000-3-12 provided that the short-circuit power S_{sc} is greater than or equal to 3.3[MVA] at the interface point between the user's supply and the public system. It is the responsibility of the installer or user of the equipment to ensure, by consultation with distribution network operator if necessary, that the equipment is connected only to a supply with a short-circuit power S_{sc} greater than or equal to 3.3[MVA].

Wiring

Between indoor unit and outdoor unit connection cable specifications(Common in use)

Communication cable	Home server
0.75mm ² , 2wires	0.75mm ² , 2wires


- For Indoor Power Cable, use the grade H07RN-F or H05RN-F materials.




When installing the indoor unit in a computer room or network room, use the double shielded (Tape aluminum / polyester braid + copper) cable of FROHH2R type.

1-phase terminal block spec

AC power : M5 screw

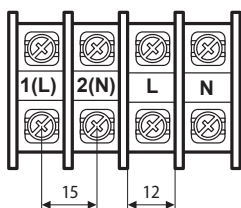


Communication : M3 screw

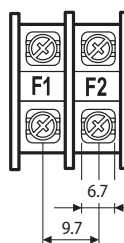


3-phase terminal block spec

AC power : M4 screw

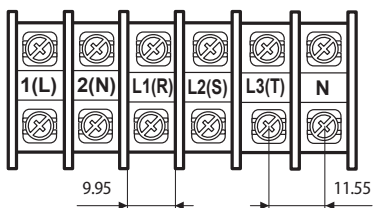


Communication : M3 screw

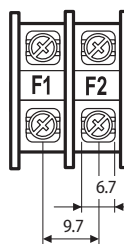

Wiring diagram of power cable

When using ELB for 1 phase and 3 phase

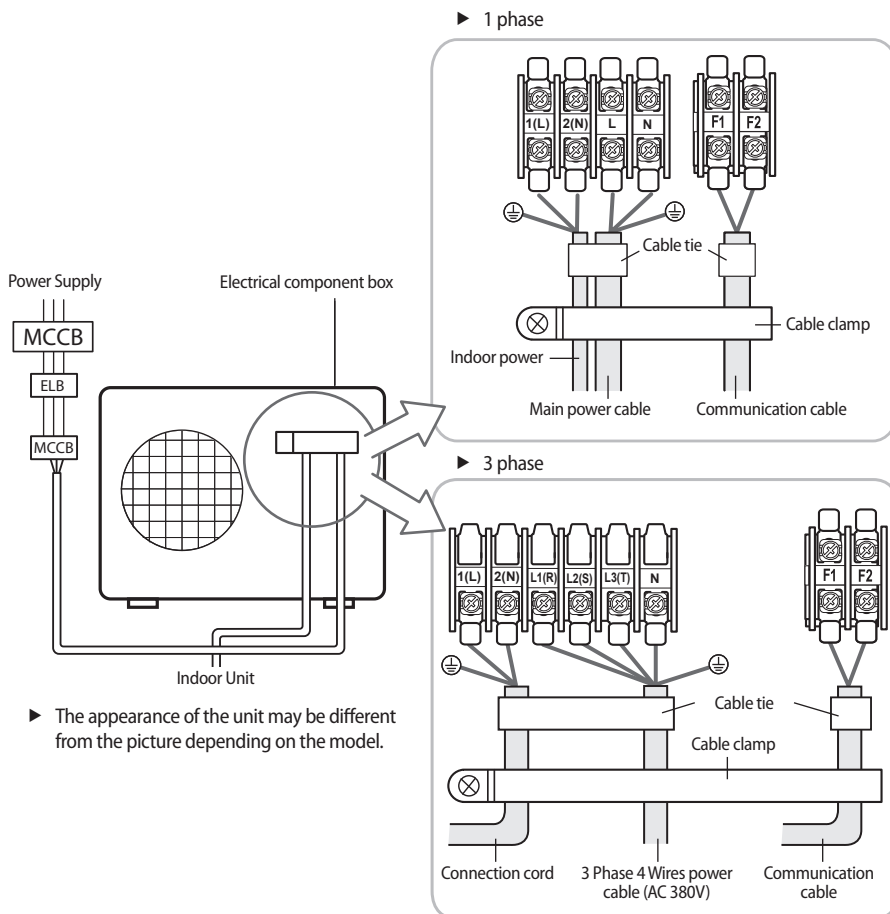


- You should connect the power cable into the power cable terminal and fasten it with a clamp.
- The unbalanced power must be maintained within 2% of supply rating.
 - If the power is unbalanced greatly, it may shorten the life of the condenser. If the unbalanced power is exceeded over 4% of supply rating, the indoor unit is protected, stopped and the error mode indicates.
- To protect the product from water and possible shock, you should keep the power cable and the connection cord of the indoor and outdoor units within ducts. (with appropriate IP rating and material selection for your application)
- Ensure that main supply connection is made through a switch that disconnects all poles, with contact gap of a least 3 mm.
- Devices disconnected from the power supply should be completely disconnected in the condition of overvoltage category.
- Keep distances of 50mm or more between power cable and communication cable.


Wiring

Wiring diagram of connection cord

1 phase

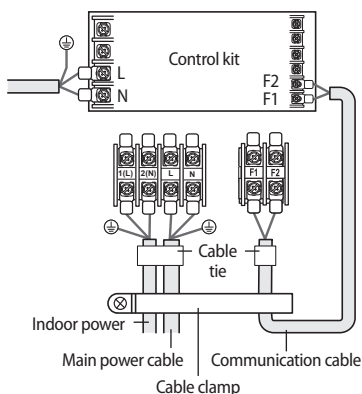

3 phase

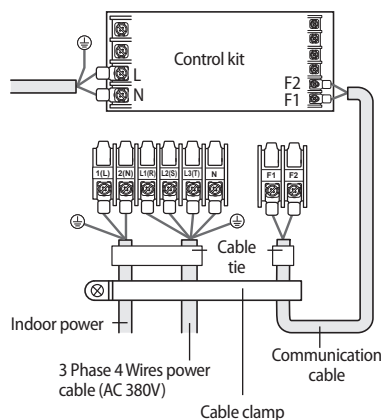



NOTE



- Lay the electrical wiring so that the front cover does not rise up when doing wiring work and attach the front cover securely.
- Ground wire for the indoor unit and outdoor unit connection cable must be clamped to a soft copper tin-plated eyelet terminal with M4 screw hole (NOT SUPPLIED WITH UNIT ACCESSORIES).

Connecting the power terminal

- ▶ Connect the cables to the terminal board using the compressed ring terminal.
- ▶ Cover a solderless ring terminal and a connector part of the power cable and then connect it.

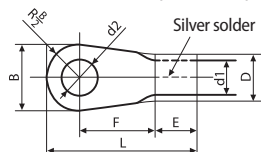

Nominal dimensions for cable [mm2(inch)]		4/6 (0.006/0.009)		10 (0.01)	16 (0.02)	25 (0.03)		35 (0.05)		50 (0.07)	70 (0.10)
Nominal dimensions for screw [mm(inch)]		4 (3/8)	8 (3/16)	8 (3/16)	8 (3/16)	8 (3/16)		8 (3/16)		8 (3/16)	8 (3/16)
B	Standard dimension [mm(inch)]	9.5 (3/8)	15 (9/16)	15 (9/16)	16 (10/16)	12 (1/2)	16.5 (10/16)	16 (10/16)	22 (7/8)	22 (7/8)	24 (1)
	Allowance [mm(inch)]	±0.2 (±0.007)		±0.2 (±0.007)	±0.2 (±0.007)	±0.3 (±0.011)		±0.3 (±0.011)		±0.3 (±0.011)	±0.4 (±0.011)
D	Standard dimension [mm(inch)]	5.6 (1/4)		7.1 (1/4)	9 (3/8)	11.5 (7/16)		13.3 (1/2)		13.5 (1/2)	17.5 (11/16)
	Allowance [mm(inch)]	+0.3 (+0.011) -0.2 (-0.007)		+0.3 (+0.011) -0.2 (-0.007)	+0.3 (+0.011) -0.2 (-0.007)	+0.5 (+0.019) -0.2 (-0.007)		+0.5 (+0.019) -0.2 (-0.007)		+0.5 (+0.019) -0.2 (-0.007)	+0.5 (+0.019) -0.4 (-0.015)
d1	Standard dimension [mm(inch)]	3.4 (1/8)		4.5 (3/16)	5.8 (1/4)	7.7 (5/16)		9.4 (3/8)		11.4 (7/16)	13.3 (1/2)
	Allowance [mm(inch)]	±0.2 (±0.007)		±0.2 (±0.007)	±0.2 (±0.007)	±0.2 (±0.007)		±0.2 (±0.007)		+0.3 (+0.011) -0.2 (-0.007)	±0.4 (±0.015)
E	Min. [mm(inch)]	6 (1/4)		7.9 (5/16)	9.5 (5/16)	11 (3/8)		12.5 (1/2)		17.5 (11/16)	18.5 (3/4)
F	Min. [mm(inch)]	5 (3/16)	9 (3/8)	9 (3/8)	13 (1/2)	15 (5/8)	13 (1/2)	13 (1/2)		14 (9/16)	20 (3/4)
L	Max. [mm(inch)]	20 (3/4)	28.5 (1-1/8)	30 (1-3/16)	33 (1-5/16)	34 (1-3/8)		38 (1-1/2)	43 (1-11/16)	50 (2)	51 (2)
d2	Standard dimension [mm(inch)]	4.3 (3/16)	8.4 (1-3/16)	8.4 (1-3/16)	8.4 (1-3/16)	8.4 (1-3/16)		8.4 (1-3/16)		8.4 (1-3/16)	8.4 (1-3/16)
	Allowance [mm(inch)]	+ 0.2 (+0.007) 0(0)	+0.4 (+0.015) 0(0)	+0.4 (+0.015) 0(0)	+0.4 (+0.015) 0(0)	+0.4 (+0.015) 0(0)		+0.4 (+0.015) 0(0)		+0.4 (+0.015) 0(0)	+0.4 (+0.015) 0(0)
t	Min. [mm(inch)]	0.9 (0.03)		1.15 (0.04)	1.45 (0.05)	1.7 (0.06)		1.8 (0.07)		1.8 (0.07)	2.0 (0.078)

- ▶ Connect the rated cables only.
- ▶ Connect using a driver which is able to apply the rated torque to the screws.
- ▶ If the terminal is loose, fire may occur caused by arc. If the terminal is connected too firmly, the terminal may be damaged.







Tightening Torque (kgf • cm)		
M3	5.0~6.0	Communication : F1, F2
M4	12.0~15.0	3phase AC power : L1(R), L2(S), L3(T), N
M5	20.0~25.0	1phase AC power : L, N





- When connecting cables, you can connect the cables to the electrical part or connect them through the holes below depending on the spot.
- Run transmission wiring between the indoor and outdoor units through a conduit to protect against external forces, and feed the conduit through the wall together with refrigerant piping.
- Remove all burrs at the edge of the knock-out hole and secure the cable to the outdoor knock-out using lining and bushing with an electrical insulation such as rubber and so on.
- Must keep the cable in a protection tube.
- Keep distances of 50mm or more between power cable and communication cable.
- When the cables are connected through the hole, remove the Plate bottom.

Testing operations

1. Check the power supply between the outdoor unit and the auxiliary circuit breaker.
 - 1 phase power supply : L, N
 - 3 phases power supply : R,S,T,N
2. Check the CONTROL KIT
 - 1) Check that you have connected the power and communication cables correctly. (If the power cable and communication cables one mixed up or connected incorrectly, the PCB will be damaged.)
 - 2) Check the temp. sensor, drain pump/hose, and display are connected correctly.
3. Press K1 or K2 on the outdoor unit PCB to run the test mode and stop.

KEY	KEY operation	7-segment display
K1	Press once : Heating test run	"  " "  " "BLANK" "BLANK"
	Press twice : Defrost test run	"  " "  " "BLANK" "BLANK"
	Press 3times : Finishing test mode	-
K2	Press once : Cooling test run	"  " "  " "BLANK" "BLANK"
	Press twice : Finishing test mode	-
K3	Reset	
K4	View mode	Refer to View mode display

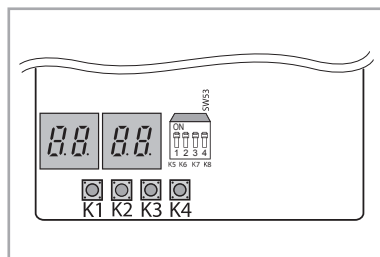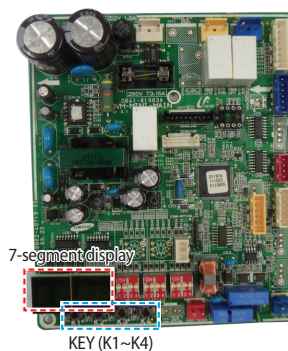

4. View Mode : When the K4 switch is pressed, you can see information about our system state as below.

Number of press	Display contents	Display				Units
		Segment 1	Segment 2	Segment 3	Segment 4	
0	Communication State	Two digits of Tx	One digit of Tx	Two digits of Rx	One digit of Rx	
1	Order frequency	1	Three digits	Two digits	One digit	Hz
2	Current frequency	2	Three digits	Two digits	One digit	Hz
3	Type of Outdoor unit (Mono/Split)	3	0	0	0 : split 1 : monobloc	
4	Out sensor	4	Two digits	One digit	First decimal	°C
5	Discharge sensor	5	Two digits	One digit	First decimal	°C
6	OLP sensor	6	Two digits	One digit	First decimal	°C
7	Cond sensor	7	Two digits	One digit	First decimal	°C
8	Current	8	Two digits	One digit	First decimal	°C
9	Fan RPM	9	Three digits	Two digits	One digit	rpm
10	Target discharge temperature	A	Three digits	Two digits	One digit	°C
11	EEV	B	Four digits	Three digits	Two digits	step

Number of press	Display contents	Display				Units
		Segment 1	Segment 2	Segment 3	Segment 4	
12	Total indoor heat exchanger capacity	C	Two digits	One digit	First decimal	kW
13	Protection control	D	0 : air conditioning 1 : heating	Protection control 0 : no protection control 1 : freezing 2 : non-stop defrosting 3 : over-load 4 : discharge	Frequency state 0 : Normal 1 : Hold 2 : Down 3 : Up_limit 4 : Down_limit	-
14	Temperature of Heatsink at PBA	E	Two digit	One digit	First decimal	°C
15	The Quantity of connected Indoor Unit	F	Three digits	Two digits	One digit	set
long-1	Main Micom version	Year(Hex)	Month(Hex)	Day(two digit)	Day(One digit)	-
long-1and 1	Inverter Micom version	Year(Hex)	Month(Hex)	Day(two digit)	Day(One digit)	-
long-1and 2	EEPROM version	Year(Hex)	Month(Hex)	Day(two digit)	Day(One digit)	-

5. DIP Switching setting

KEY	ON (default)	OFF	Remark		
K5	Auto Address (Outdoor unit recognize the address or indoor unit by random access.)	Manual Address (Outdoor unit recognize the address of indoor unit by rotary switch of indoor unit.)	In Monobloc K5 must be'ON'		
K6	Operating time of base heater is 15min.	Operating time of base heater is 20min.	Base heater will operate under 0°C		
K7	Anti-stack snow mode ON	Anti-stack snow mode OFF			
K8	Enable base heater	Disable base heater			
K9	Silence operation	K9	K10	Mode	
		ON	ON	Disable silence mode	
		ON	OFF	Silence mode Step.1	
		OFF	ON	Silence mode Step.2	
		OFF	OFF	Silence mode Step.3	
K10					
K11	X				Not defined
K12	X				Not defined
K13	Whole current control	K13	K14	Mode	
		ON	ON	Limit total current: 1_Down	
		ON	OFF	Limit total current: 1_Down_OP1	
		OFF	ON	Limit total current: 1_Down_OP2	
		OFF	OFF	Limit total current: 1_Down_OP3	
K14					
K15	X				Not defined
K16	X				Not defined

Trouble shooting



- Incorrect handling of thermostat, safety valve or other valves may lead to tank rupture. When servicing the unit follow instructions carefully:
- Always turn off main power supply when water supply is being shut off.
- Test the free operation of the safety valve regularly by opening the valve ensuring the water flows freely.
- Electrical connection and all servicing of the electrical components should only be carried out by an authorized electrician.
- Fitting and all servicing of plumbing fixtures should only be carried out by an authorized installer.
- When replacing the thermostat, safety valve or any other valve or part supplied with this unit, use only approved parts of the same specification.

Error codes

If the unit has some problems and does not work normally, error code is shown on the OUTDOOR UNIT main PBA or LCD of the wired remote controller.

Display	Explanation
101	CONTROL KIT / OUTDOOR UNIT wire connection error
102	CONTROL KIT / OUTDOOR UNIT communication time out error
162	EEPROM Error
201	CONTROL KIT/OUTDOOR UNIT communication error (Matching error)
202	CONTROL KIT/OUTDOOR UNIT communication error (3 min)
203	Communication error between INVERTER and MAIN MICOM (6 min)
221	OUTDOOR UNIT temperature sensor error
231	Condenser temperature sensor error
251	Discharge temperature sensor error
320	OLP sensor error
403	Detection of OUTDOOR UNIT compressor freezing (During cooling operation)
404	Protection of OUTDOOR UNIT when it is overload (during Safety Start, Normal operation state)
416	Discharge of a compressor is overheated
419	OUTDOOR UNIT EEV operation error
425	Power source line missing error (only for 3-phase model)
440	Heating operation blocked (outdoor temperature over 35°C)
441	Cooling operation blocked (outdoor temperature under 9°C)
458	OUTDOOR UNIT fan1 error
461	[Inverter] Compressor startup error
462	[Inverter] Total current error/PFC over current error
463	OLP is overheated
464	[Inverter] IPM over current error
465	Compressor V limit error

Display	Explanation
466	DC LINK over/low voltage error
467	[Inverter] Compressor rotation error
468	[Inverter] Current sensor error
469	[Inverter] DC LINK voltage sensor error
470	EEPROM read/write error
471	[Inverter] OTP error
474	IPM(IGBT Module) or PFCM temperature sensor Error
475	OUTDOOR UNIT fan2 error
484	PFC Overload Error
485	Input current sensor error
500	IPM is overheated
554	Gas leak error
601	Communication error between the CONTROL KIT and wired remote controller
602	Wired remote controller Master/Slave setting error
604	Communication tracking error between the CONTROL KIT and wired remote controller
607	Communication error between the Master and Slave wired remote controllers
901	Water inlet (PHE) temperature sensor error(open/short)
902	Water outlet (PHE) temperature sensor error(open/short)
903	Water outlet (backup heater) temperature sensor error.
904	DHW tank temperature sensor error
906	Refrigerant gas inlet (PHE) temperature sensor (open/short)
911	Flow switch and water pump error (F/S signal is OFF for 10 sec. during the water pump signal is ON)
912	Flow switch and water pump error (Water pump signal is OFF for 60sec during the F/S signal is ON)

Maintenance

Listed checks and inspections shall be implemented regularly so that the unit can operate as design intention in production site.

Always switch off the unit and remove power cable from the electric source before carrying out any maintenance or repair works.

Mentioned actions shall be carried out at least once a year by qualified personnel.

1. Water pressure
 - Check if the water pressure is above 0.3 bar. If necessary, supplement water.
2. Water filter
 - Use water filter which is available for cleaning and clean it regularly.
3. Water pressure relief valve
 - Check for correct operation of the pressure relief valve.
 - The valve will work over the designated pressure.
 - If there is leakage of water or water splashed in normal condition, please contact your local installer.
4. Glycol
 - Record and check the glycol concentration and the pH-value in the system at least once a year.
 - A Ph-value below 8.0 indicates that a significant portion of the inhibitor has been depleted and that more inhibitor needs to be added.
 - When the Ph-value is below 7.0 then oxidation of the glycol occurred, the system should be drained and flushed thoroughly before severe damage occurs.
 - Make sure that the disposal of the glycol solution is done in accordance with relevant local and national regulation.

Using service valve

To open the service valve


1. Open the cap and turn the stop valve counterclockwise by using a hexagonal wrench.
2. Turn it until the axis is stopped.



NOTE

- Do not apply excessive force to the stop valve and always use special instruments. Otherwise, the stopping box can be damaged and the back sheet can leaks.
- If the watertight sheet leaks, turn the axis back by half, tighten the stopping box, then check the leakage again. If there is no leakage any more, tighten the axis entirely.

3. Tighten the cap securely.

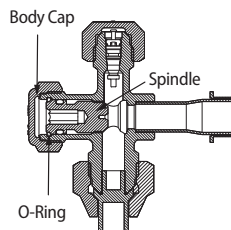

To close the service valve

1. Remove the cap.
2. Turn the stop valve clockwise by using a hexagonal wrench.
3. Tighten the axis until the valve reached the sealing point.
4. Tighten the cap securely.



CAUTION

- When you use the service port, always use a charging hose, too.
- Check the leakage of refrigerant gas after tightening the cap.
- Must use a spanner and wrench when you open/tighten the service valve.

Adding refrigerant

The Heat Pump unit is provided to users with basic amounts of refrigerants as initial setting values. While using the unit or doing refrigerant piping works, there can be some loss of refrigerants compared to initial amounts. To run the units properly, keep the amount of refrigerant which SAMSUNG designated.

Procedures as below is describing how to adding the amount of refrigerant.




WARNING

- R410A Shall be added as liquid phase.
- Adding and recharging works shall be by Service valves.

1. Connect the manifold gauge and purge the manifold gauge.
2. Open the manifold gauge valve of the liquid side service valve and add the liquid refrigerant.
3. If you cannot fully recharge the additional refrigerant while the outdoor unit is stopped, use the key on PCB in the Heat Pump to run for recharging the remaining refrigerant.

Adding refrigerants in running condition

1. Press the function key for adding refrigerant.
2. After 30 minutes of operation, open the service valve on low pressure side in Heat Pump.
3. Open the valve for low pressure side in the manifold gauge to recharge the remaining refrigerant.
4. After completing, close the valves in manifold gauge and eliminate the hoses from service valves.

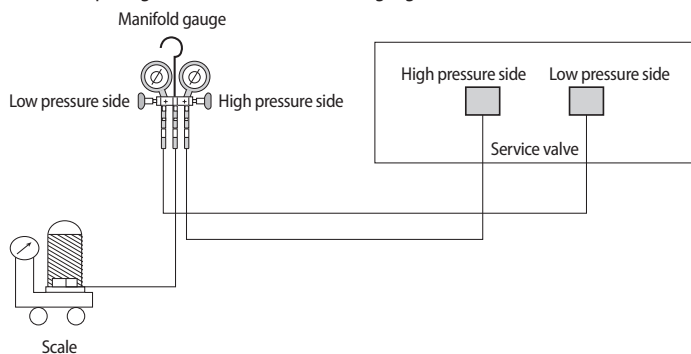

Important information regulation regarding the refrigerant used



CAUTION

- Inform user if system contains 3 kg or more of fluorinated greenhouse gases. In this case, it has to be checked for leakage at least once every 12 months, according to regulation n°842/2006. This activity has to be covered by qualified personnel only. In case situation above (3 kg or more of R-410A), installer (or recognised person which has responsibility for final check) has to provide a maintenance book, with all the information recorded according to REGULATION(EC) N° 842/2006 OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 17 May 2006 on certain fluorinated greenhouse gases.

Cylinder unit

Safety information

(Before installing a cylinder unit, please read this manual thoroughly to ensure that you know how to safely and efficiently install a new appliance.)



WARNING • If you don't follow the safety precautions, you may get the risk of serious wound or death.

- ▶ The installation must be done by the manufacturer or its service agent or a qualified person in order to avoid a hazard.
 - Installation by an unqualified person may cause a water leakage, electric shock or fire and so on.
- ▶ The electric work must be done by service agent or qualified persons according to national wiring regulations and use only rated cable.
 - Use certified power cable in the market suggested here and do electric work according to installation manual otherwise, electric shock or fire may occur.
- ▶ Install the outdoor unit correctly according to the installation manual.
 - An incorrect installation may cause a water leakage, electric shock or fire and so on.
- ▶ Manufacturer is not responsible for accidents due to incorrect installation.
- ▶ Use certified parts in the market and supplied parts from the factory.
 - All wiring, components and materials to be procured on the site must comply with the applicable local and national codes. If you don't use the certified parts and tools, it can cause trouble to the air conditioner and bring into injury.
- ▶ Install the cylinder unit on a hard and even place that can support its weight.
 - If the place cannot support its weight, the outdoor unit may fall down and it may cause injury.
- ▶ Fix the outdoor unit securely on foundation as it can fall over strong wind or earthquake.
 - If the outdoor unit is not properly fixed, it turns over and accidents may occur.
- ▶ Secure power cable with a conduit, which is accessory part for cylinder unit, not to be pulled out by external force.
 - If fixing is incomplete, it can cause trouble with a heat generation, electric shock or fire and so on.
- ▶ The disinfection function field settings must be configured by the installer according to local laws and regulations.
- ▶ Attach the service cover to the cylinder unit and outdoor unit securely without any gaps. If there are any gaps, there is potential risk of fire or electric shock due to dust or water.
- ▶ Make sure to earth the unit. Do not connect the earth wire to the gas pipe or water pipe, lighting rod, surge absorber, or telephone earth wire. If earthing is not complete, It may cause an electric shock or fire.

General information


- ▶ SAMSUNG Eco Heating system with cylinder unit is designed to withstand SAMSUNG durability and reliability requirements. We cannot guarantee neither good operation nor reliability of total system with other brand tanks.
- ▶ The piping, valves and system configuration of cylinder unit should be followed a relevant local or national regulations.
- ▶ A pressure relief valve in accordance with an opening pressure of max. 0.9MPa should be connected.
- ▶ The electrical box must be opened by a licensed electrician.
- ▶ Switch off the power supply before opening the electrical box lid.
- ▶ Make sure that the installation location of cylinder unit including piping and valves is frost free.



- Cylinder unit shall be located and installed indoors (garage, multipurpose room, boiler room).
- Always ensure that the ambient temperature around unit have to be above 0°C around the year.
- If the unit and the pipes are exposed to freezing temperature, It can cause damage to the hydraulic system. Special care must be taken to prevent freezing of the total water system.
- If the unit stops for a long time because of a power supply failure, pump operating failure, or winter vacation, drain all water from the system.
- Cylinder unit shall be always full of water. Check that water is fully filled with water by opening the pressure relief valve. Air present in the water system may cause malfunction or fire.
- Water quality must be according to EN directive 98/83 EC.
- Make certain that back flow preventer (check valves) must be installed on main supply line to prevent from contaminating the city water. It is recommended to install the make-up water assembly to prevent from contaminating the city water. Check valves in the make-up water assembly can prevent running water inside hydro unit from contaminating water supplies during installation or maintenance works.

Cylinder unit

Main components

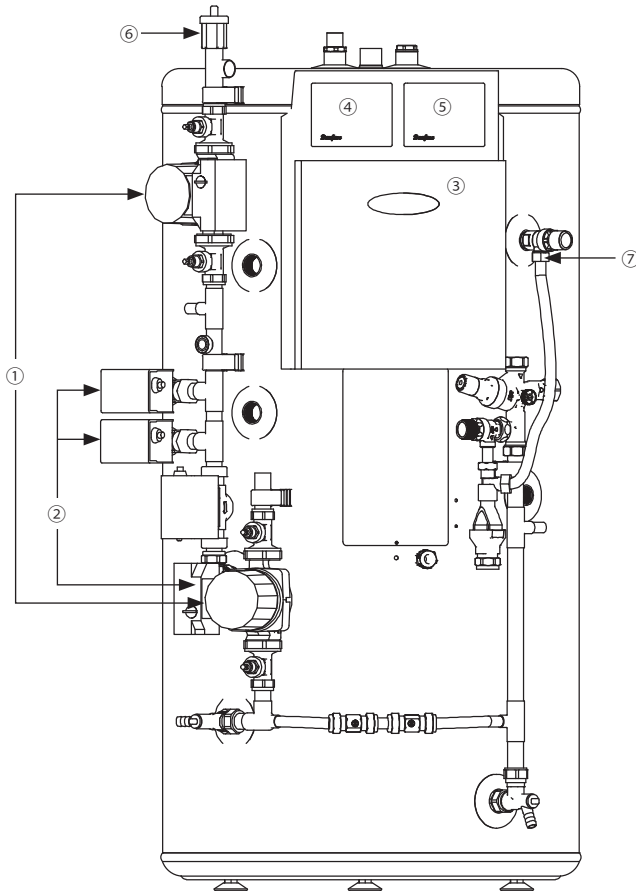

	No.	Part	Qty
Installed	1	Water pump	2
	2	2 Way valve	3
	3	Control kit	1
	4	Wired Remote Controller	1
	5	RF Receiver	1
	6	Air vent	1
	7	Relief valve	1
Packaged	-	Expansion Tank	1
	-	Wireless Thermostat	1
	-	Flow Switch (16 lpm)	1

Water tank specifications

Detailed information for the DHW Tank are described in the following table.

Description		Unit	Standard	
			NH200CHXEA	NH300CHXEA
Pressure vessel	Material quality	-	AISI 444 / DIN 1.4521	
	Volume capacity	ℓ	198	287
Electric element	Capacity	kW	2.6	
	Material	-	INCOLOY 825	
	Voltage	V/Hz	1P, 230~, 50	
Heating coil	Material quality	-	Duplex LDX 2101	
	Heating Area	m ²	0.71	
Insulation	Material quality	-	Polyurethane form	
	Thickness	mm	40	
Insulation jacket	Material quality	-	Epoxy-coated mild steel – white	
Dimensions overall	Diameter	mm	585	585
	Height	mm	1130	1580
Connections	Cold water inlet	inch	BSPP 3/4"	
	Hot water outlet	inch	BSPP 3/4"	
	Recirculation	mm	ø22mm straight tube (for compression fitting)	
	Flow & Return	inch	BSPP 3/4"	
	Sensor pocket(s)	mm	ø8.05 mm inside, 1/2" thread	
Weight	Overall	kg	47	61
Max. Water temperature		°C	70	
Other	Packaging	-	Eco Foam - PUF	
	Adjustable legs	pcs	3	

Cylinder unit

Space requirements

Positions of water inlet and outlet pipe are affected by the layout of cylinder unit. The layout of pipes and other components except cylinder unit are the responsibility of installers. The cylinder unit must be laid out in accordance with the illustrations as below to prevent any water leakage and malfunction.



► Observe the clearances and dimensions as seen below during installing the water tank.




NOTE

- The installation space mentioned above is minimum suggested clearance.
- To secure enough service space and performance of system, take account of more sufficient space.
- Be sure to install unit in a place strong enough to withstand its weight.

[Total weight 365 kg, Tank(65 kg), Water(300 kg)]

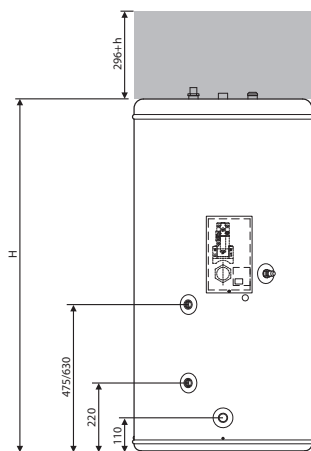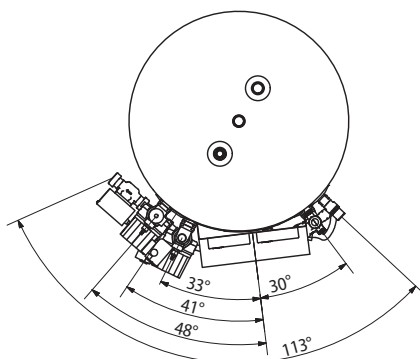

Volume	H	h
200	1130	800
300	1580	1250

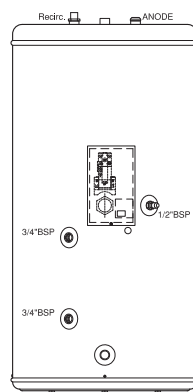


Wiring diagram



- Turn on the cylinder unit and outdoor unit after completing electric wiring works.
- Do not disassemble the wirings out of the unit while the unit is operating.
- Circuit breaker shall be installed for safety and maintenance .

- Make sure of an earthing.
- Do not connect the earth wire to the gas pipe, water pipe, lighting rod or telephone wire. If earthing is incomplete, electric shock or fire may occur.

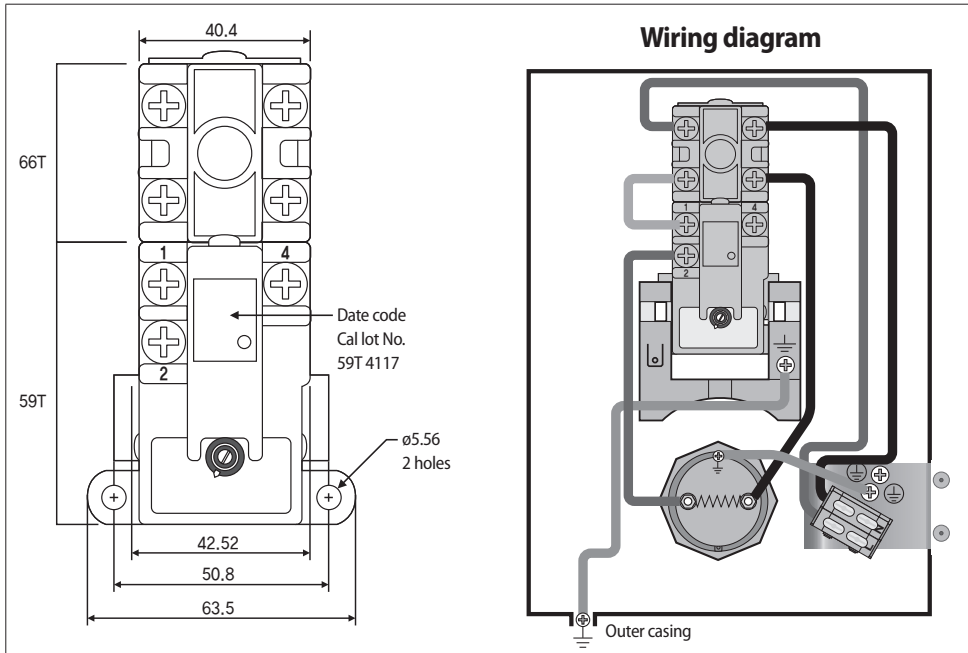


Electrical connections – Technical Data:

Electric element	2.6 kW 230V 1 phase, 1 1/4" connection with O-ring seal
Adjustable	Electric output can be reduced by cutting one bridge on the element.
Thermostat	Adjustable 40~70°C (preset 60°C)
Safety cut-off	98°C
Electric central	Internally connected from factory. Splash proof IP21.

Cylinder unit

Switch box layout

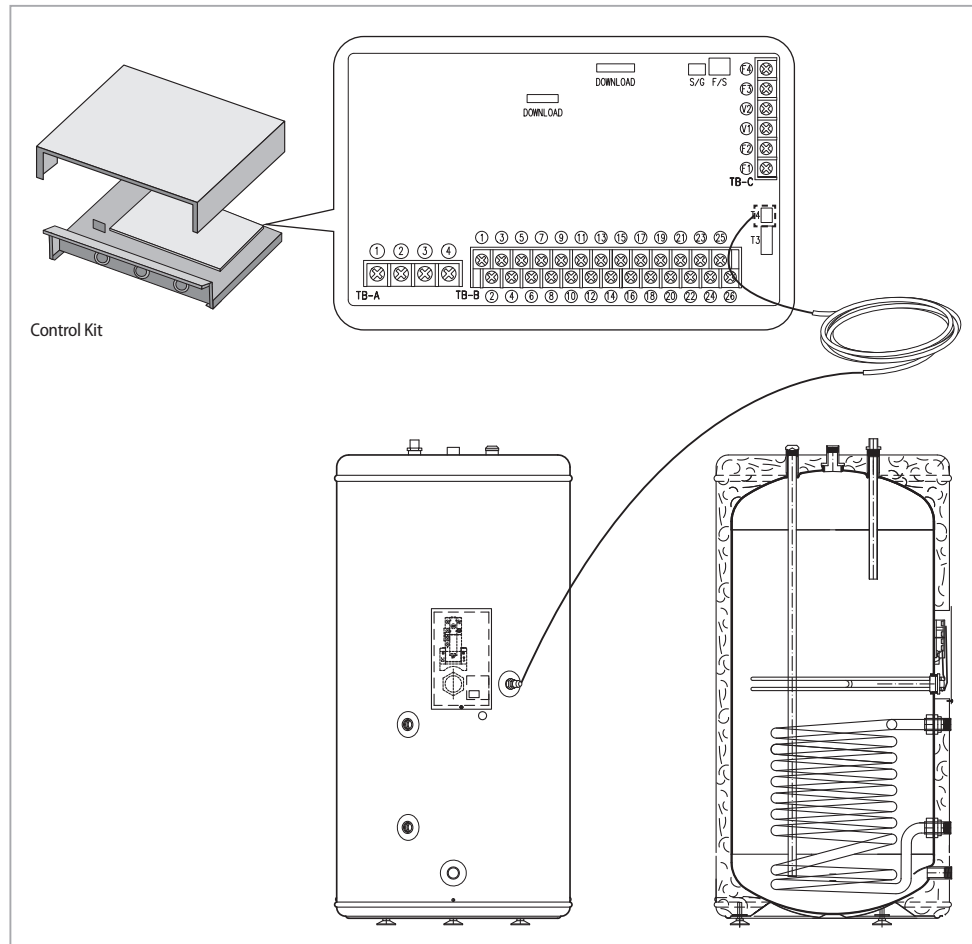

Electrical connections

Procedure



- Switch off the power supply before making any connections.
- Use a thermal grease in temp. sensor pocket after installing electric connections.
- It is of great importance that the heater is filled with water before the electricity is hooked up, or else- the warranty is not valid. If the heater is installed and not used, it must be flushed with water once a week.
- Be aware that the domestic hot water temperature at the hot water tap will be equal to the value selected in field setting mode. If this high domestic hot water temperature can be a potential risk for human injuries, a mixing valve (field supply) shall be installed at the hot water outlet connection of the domestic hot water tank. This maximum allowable hot water temperature shall be selected according to local laws and regulations.
- Attach the service cover to the Hydro unit and cylinder unit securely without any gaps. If there are any gaps, there is potential risk of fire or electric shock due to dust or water.

► Connections to be made in the electrical box of cylinder unit

1. Connect the booster heater power supply and thermal protection cable.
2. Make sure to ensure strain relief of the cable.

► Connections to be made in the electrical box of indoor units

3. Mount the prewired contactor (K3M) and circuit breaker (F2B). The contactor should be fixed with the two screws supplied.
4. Connect the loose ends of the contactor to terminal 7 and 8 on the terminal block and the connector in the socket X13A on the PCB.
5. Plug the temp. sensor cable connector in the socket X9A on the PCB.
6. Connect the booster heater power supply and thermal protection cable (field supply) to terminal 7, 8, 21, 22 and earth on the terminal block.
7. Connect the booster heater power supply cable to the circuit breaker (F2B) and earthing screw.
8. Fix the cables to the cable tie mountings with cable ties to ensure strain relief.
9. Set DIP switch SS2-2 on the PCB to ON.

